

20 Sept 1987
at Glendale ATARI
Store

169.10
10.88

179.98

INDUS GT™

ATARI

DISK DRIVE
OWNER'S
MANUAL

Indus GT Disk Drive
for
Atari Computers

Copyright © 1986

Future

SYSTEMS, INC.

9811 Owensmouth Avenue, Suite 9
Chatsworth, CA 91311
(818) 407-1647

Preface

The current documentation for the Indus GT Disk Drive for Atari Computers has been improved in several ways:

1. The separate application, owner, and DOS manuals have been combined into a single volume with larger, more readable type and has been spiral bound for easier access to the information.
2. The DOS XL Operator's Guide has been replaced with a much lengthier and more comprehensive DOS XL Operator's Guide and Reference Manual.
3. A spelling checker, GTSPELL, has been added to the GT Estate Wordprocessor.
4. A RAM Disk utility program, RAM130.COM, has been added to the DOS XL Systems Master Diskette. This program allows owners of the Atari 130XE to use their "extra" 64K of RAM as a small Disk Drive.

Indus constantly strives to improve its products and services. However, the only way we can inform you of any of these improvements after you have already purchased one of our products is by your completing and returning the enclosed WARRANTY REGISTRATION CARD. Although we have attempted to deliver to you the best disk drive available on the market at this time, completing this card will allow us to inform you of any product improvements, software updates, new accessories or add-in products that may later become available -- continuing to deliver better product quality and performance, and better protecting the investment you have made in purchasing one of our GT Disk Drives.

Master Table of Contents

Disk Drive Owner's Manual.....1

This manual covers the initial installation and set-up of your disk drive, introduces the basic disk functions, care of your diskettes and tells you briefly about Disk Operating System functions. Major sections/subjects covered in this manual are:

INTRODUCTION * INSTALLATION * DISK DRIVE OPERATION * CARE AND USE OF DISKETTES * INTRODUCTION TO DOS * BEGINNING WITH DOS * DOS ERROR MESSAGES * DISK DRIVE ERROR CODES * NOISE RADIATION NOTICE.

GT Estate WordProcessor with GT Spell.....20

This manual describes the operation and use of the your wordprocessor and spelling checker. Writing and formatting your reports and correspondence will be much easier and have a more professional appearance when finished by using this product. Major sections/subjects covered in this manual are:

INTRODUCTION * USING THIS MANUAL * SYSTEM HARDWARE REQUIREMENTS * LOADING INSTRUCTIONS * USING THE GT ESTATE WORDPROCESSOR * STATUS CODES OF THE EDITOR * ERROR MESSAGES OF THE FORMATTER * USING YOUR SAMPLE LETTERS * USING THE GT ESTATE WORDPROCESSOR IN DOUBLE DENSITY * USING THE GT SPELL PROGRAM

GT Data Manager.....53

This manual describes the setup and use of the GT Data Manager. Database managers are extremely useful programs for organizing lists of information which you make. Several small sample databases are included and include address book type information, lists of your personal book library and video tape collection, and so on. Major sections/subjects covered in this manual are:

INTRODUCTION * HARDWARE REQUIREMENTS * GETTING STARTED * RECORD AND FILE LIMITS * THE MAIN MENU * SAMPLE DATA BASES * HELPFUL HINTS

GT Albert E. Spreadsheet.....72

This manual describes the installation and use of a spreadsheet. The whole revolution in personal computers is said to have begun due to the use invention of this type of program which takes the tedious and time consuming arithmetic chores out of financial planning, doing forecasts, etc. Major sections/subjects covered in this manual are:

INTRODUCTION * REQUIRED ACCESSORIES * OPTIONAL ACCESSORIES * SETTING UP * USING THE GT ALBERT E. SPREADSHEET * THE SCREEN WINDOW * CELL ENTRY (ESC) * MOVING THE SCREEN WINDOW * RECALCULATING WORKSHEET FORMULAS * DISK OPERATIONS * PRINTING (OPTIONAL) * CLEARING THE WORKSHEET (NEW) * ENDING A GT ALBERT E. SPREADSHEET SESSION (QUIT) * SAMPLE WORKSHEETS

DOS XL Operator's Guide and Reference Manual.....95

This manual provides comprehensive information on the use and features of DOS XL. Major sections/subjects covered in this manual are:

YOUR INDUS GT AND DOS XL * INTRODUCTION * GETTING STARTED WITH DOS XL * THE DOS XL MENU * THE DOS XL COMMAND PROCESSOR * THE DOS XL BOOT PROCESS * DOS XL AND THE 850 INTERFACE MODULE * SOME ADVANCED CAPABILITIES OF DOS XL * USING DOS XL WITH THE ATARI BASIC CARTRIDGE * CONTROLLING DOS XL WITHOUT BEING THERE * USING DOS XL WITH ASSEMBLY LANGUAGE * DISK FILE STRUCTURE * SYSTEM MEMORY MAP * ERRORS * SHIFTING INTO SYNCHROMESH * A SHORT GLOSSARY * A DECIMAL/HEX/BINARY CONVERSION TABLE * OTHER FILES ON YOUR DISKETTE

Indus GT Disk Drive for Atari

Owner's Manual

By Ron Kelly

NOTICE: Future Systems, Inc. reserves the right to make improvements in the product described herein at any time and without notice.

DISCLAIMER: Future Systems, Inc. shall have no liability or responsibility to the purchaser or any other person or entity with respect to any liability, loss or damage caused or alleged to be caused directly or indirectly by this manual or its use, including but not limited to any interruption in service, loss of business and anticipatory profits of consequential damages resulting from the use of this product.

COPYRIGHT (C) 1986 by FUTURE SYSTEMS, INC.

This manual is published and copyrighted by Future Systems, Inc. All rights are reserved. This document may not, in whole or part, be copied, photocopied, reproduced, translated or reduced to any electronic medium or machine readable form without prior written consent of Future Systems, Inc.

The word ATARI and the ATARI logo are registered trademarks of ATARI CORPORATION. ATARI CORPORATION was not in any way involved in the writing or other preparation of this manual, nor were the facts presented here reviewed for accuracy by that company. Use of the term ATARI should not be construed to represent any endorsement, official or otherwise, by ATARI CORPORATION.

Table of Contents

1.	Introduction.....	Page 4
2.	Installation.....	Page 5
3.	Disk Drive Operation.....	Page 7
4.	Care and Use of Diskettes.....	Page 8
5.	Introduction to DOS.....	Page 9
6.	Beginnng with DOS.....	Page 10
7.	DOS Error Messages.....	Page 16
8.	Disk Drive Error Codes.....	Page 17
9.	Noise Radiation Notice.....	Page 19

INTRODUCTION

This manual will cover two primary functions. First, the installation of your new Indus GT Disk Drive, and second, as an introduction to the Disk Operating System, usually referred to as DOS (pronounced Doss).

The disk drive is designed to be fully compatible with all other Atari peripherals, and its basic operation is similar to the standard Atari drive. Some of the major differences are the half-height size and the addition of an operator panel equipped with a two digit LED display for displaying the unit number, track number, and drive error codes.

The disk drive uses a 5 1/4 inch single or double density soft or hard sectored "floppy diskette" which is capable of storing and retrieving data in a random-access fashion at a speed far superior to tape. The DOS stores the information by file name, controls the allocation of space on the diskette, and does a variety of other important housekeeping functions for you.

Besides this manual, enclosed in the shipping container, you should have received the INDUS GT disk drive, a data cable, an AC power module and cable, and a System Master Diskette. This diskette contains the Disk Operating System as well as the utility programs you will need for operating your disk drive.

Installing the disk drive and using the DOS are quite simple, as you will learn from the following pages.

INSTALLATION

Unpack your new Indus GT Disk Drive along with the accessories included making sure you save any packing materials for possible future use.

Installing Your First Drive:

If you are installing the first disk drive on your Atari system then carefully follow these step by step instructions:

1. Turn the POWER OFF to ALL components of your computer system.
2. Plug the AC power module into the wall socket. Make sure the POWER switch is turned off on your drive and plug the smaller end into the back of the disk drive in the socket marked POWER IN adjacent to the POWER switch.
3. Plug one end of the Data Cable into the jack marked PERIPHERAL on one of the sides or rear panel of your computer, depending on the model, and the other end into one of the matching I/O jacks on the rear of the disk drive. If you have a tape unit, plug it into the remaining I/O jack at the rear of the drive.
4. Note the group of small slide or rocker type switches numbered 1 through 4 on the back panel. The first two are used to set the drive number (1-4) and normally come factory set to the Drive 1 positions which are both on, as illustrated with arrows on the rear panel. The "ON" position for a slide type switch is up as indicated by an up arrow. The "ON" position for a rocker type switch is the top pressed down. Switch 3 is turned on to select the Double Density option (it informs your disk operating system and/or drive the density of the diskette you normally expect to have installed in this drive; if there was a diskette present in the drive when your system was powered up your drive will automatically try to read that diskette and will switch to its density). Switch 4 has been reserved for potential future expansion use and should always be left off.
5. Locate the power switch at the rear of the disk drive and switch it on. Open the plexiglass door by pressing downward on the square button and then following the door closing diagram which was supplied with your drive to ensure that your drive's door is properly closed and ready for use.
6. Remove the System Master Diskette from its paper sleeve, holding the label end up carefully insert it into the drive until it clicks or catches. In order to provide adequate supplies of disk drive mechanisms, Future Systems uses several sources of high quality disk drives for your use; the door opening mechanisms on these drives are different and you should refer to the separate door opening diagram which was supplied

with your drive at this point in order to assure that the drive is properly operated. **PLEASE NOTE: The powered clamping feature of your Future Systems GT Disk Drive is activated when your diskette is inserted into the drive; for optimum performance always close the drive's latch immediately after inserting any diskette.**

7. Remove any cartridges, including BASIC, from the computer then turn the computer power on. The DOS menu will appear on the screen as soon as the Disk Operating System has loaded. If you leave the BASIC cartridge in (or if you own an Atari 800XL or 65/135 XE) the READY prompt will appear, type DOS to get the menu

Installing multiple Drives:

You can connect up to four disk drives, as well as other devices, to your Atari system. The disk drives and tape unit are connected to each other in a "daisy chain" fashion, using the Data Cables supplied with each device. A set of switches is located on the rear of your drive to set in the drive number

1. Turn the power off to your disk drive. Looking at the rear of the drive, note the four slide or rocker type switches labeled 1 through 4

2. The first two switches numbered 1 and 2 are used for setting the drive number. For Drive #1 the switches are both switched on, that is both slides are up or both of the rocker type would be pressed down at the top. For Drive #2 switch 1 should be off with switch 2 left on. Drive #3 is the reverse, switch 1 on with switch 2 off. And Drive #4 is set with both switches off. Switch 3 is used for selecting the Double Density option when turned on (slide switch up, or top of rocker pressed down). The positions are noted on the back panel for your reference. (Switch #3 informs your disk operating system and/or drive the density of the diskette you normally expect to have installed in this drive; if there was a diskette present in the drive when your system was powered up your drive will automatically try to read that diskette and will switch to its density). Switch 4 has been reserved for potential future expansion use and should always be left off.

3. Connect the second Data Cable to the unused I/O jack on the rear of the first drive and the other end to a jack on the second drive. Repeat this "daisy chaining" process for each additional drive with the tape unit, if any, connected to the last I/O jack

DISK DRIVE OPERATION

Your new Indus GT Disk Drive has a number of new operational features included on the operator's panel. First you will notice a two digit LED display on the far left. In the middle are three more LED (Light Emitting Diode) indicators, and to the right are four pushbuttons.

The three LED's in the center are each labeled to represent their function. The POWER LED is illuminated whenever power is applied to the drive. When the drive is in use the BUSY LED is illuminated. The rightmost LED marked PROTECT is illuminated whenever the diskette in the drive has been write protected, either by covering the square notch on the diskette, or the adjacent pushbutton has been pressed to set write protect mode. This button is a very useful feature as it allows you to write protect a diskette without having to remove it from the drive to place a sticker over the notch.

The other three pushbuttons to the far right set the display mode for the two digit LED display. This will display the TRACK as the default unless an error occurs, in which case the error code will be displayed automatically.

Pressing the button labeled DRIVE TYPE will display drive number 1 - 4, which are set by the four switches on the rear panel and the density ("A" for 810/1050 compatible single density, "B" for 815 compatible double density, and "C" for 1050 compatible double density).

Pressing the TRACK button will switch back to displaying the current track numbers on the display. Pressing the ERROR button will allow the display of the last error code encountered. If an "E-" is displayed then no error has occurred. The error code can be reset by holding the ERROR button down while pressing the TRACK button.

When displaying an error code on the two digit LED display the left character will be a letter to represent the type of operation being performed when the error occurred. The letter "G" (represented by what looks like a number 6 with the horizontal center bar missing) tells you the error occurred during a "Get" or read operation. The letter "P" tells you the error occurred during a "Put" or write operation. The letter "F" tells you the error occurred during a "Format" operation.

The right digit of the two digit LED display will show a number 3 for a LOST DATA ERROR, a number 4 for a CHECKSUM ERROR, a number 5 for a RECORD NOT FOUND ERROR, a number 7 for a WRITE PROTECT ERROR, or a number 9 for a VERIFY ERROR. A full explanation of these error codes is contained in the final section of this manual entitled "DISK DRIVE ERROR CODES".

IMPORTANT NOTE Copy protected programs may generate errors when loading. This is no cause for alarm, as long as the program continues to load, as this is usually a part of the protection scheme.

CARE AND USE OF YOUR DISKETTES

The magnetic surface of a floppy disk is somewhat similar to that of a cassette tape. Each of the media consists of a plastic base coated with a magnetic material that your data can be stored on and read back from at a later time. The primary difference is that the floppy disk is enclosed in a flexible black plastic envelope rather than a hard plastic case, and that the floppy disk is designed for quick random access similar to the way you can quickly select a particular song when using a phonograph record versus the serial selection process using cassette tape.

Much like the phonograph record and cassette tape, floppy disks must have proper care to maintain their usefulness. Therefore the following precautions are offered.

1. Store your diskettes away from direct sunlight. Keep them away from excessive heat. They can easily become warped.
2. Keep your diskettes away from excessive moisture and humidity. Never wet or wash a diskette. The diskette envelope contains its own cleaning material.
3. Do not bend your diskettes, handle them with care when inserting or removing from your disk drive. They must turn freely inside their protective envelope.
4. Store your diskettes in their specially treated paper sleeves and keep them standing on edge to prevent damage to the magnetic surface.
5. Never touch the magnetic surface of the diskette where it is exposed through the oval slot in the protective envelope. Fingerprints can damage the magnetic medium and render the surface unusable.
6. Never allow your diskettes to be stored within the reach of a magnetic field, such as some T.V.'s or the telephone when it rings. Magnetic fields can erase the data on your diskettes.
7. Do not attach paper clips or staples to your diskettes.
8. Do not write on your diskettes with a ball-point pen or pencil. Use a felt-tip pen to mark on the diskette label, or write on the label before you put it on the diskette.
9. Do not use pencil erasers on diskette labels as the eraser dust is very abrasive and will damage the diskette.
10. Do use good common sense in handling and storing your diskettes, as the data you save may be your own.

INTRODUCTION TO DOS

The Disk Operating System is a program which allows you and your programs to communicate with your disk drives where information is stored on the diskettes. This information is stored in what is called a "file". This file is given a name so that you, or your program, may recall the information at any time it is needed.

DOS allows you to create and manipulate your files so that you may SAVE, LOAD, or RUN a program, list the DIRECTORY, RENAME a file, DELETE files, LOCK or UNLOCK files, FORMAT new diskettes, and COPY files or entire diskettes.

Before you can successfully communicate with your drives, DOS must be loaded into your computer's memory. This process is known as "BOOTING". Most preprogrammed diskettes you buy will have a form of DOS already on them and they will boot automatically.

In order to use new (blank) diskettes for data and program storage they must first be "FORMATTED". And to enable them to boot automatically, the DOS files must be transferred onto them from the System Master Diskette.

These, as well as several other functions of DOS, will be explained to you in the following pages.

For complete in depth information on Atari's DOS obtain a copy of Atari's DOS manual from your dealer; a full description of the DOS XL that has been supplied with your Indus GT disk drive may be found in a later section of this manual.

BEGINNING WITH DOS

PLEASE NOTE: This section briefly describes Atari DOS 2.0, which is a menu driven, single density only disk operating system (90 K Bytes only). Future Systems has provided with your drive a single and double density disk operating system, DOS XL, to let you store a full 180 K Bytes of information in a type "B" format (815 compatible). Although the order of the two menus and their corresponding alphabetic character assignments are different, the basic functions performed by these programs are very similar. For a more detailed description of Future Systems DOS, please refer to the DOS XL Operators Guide located in a later section of this manual.

Bootling:

The process know as "booting" will load the Disk Operating System into the computer's memory and allow disk communications to take place. If you try communicating with the disk drive without loading the DOS, the message **BOOT ERROR** will print on the screen.

Follow the procedure below to load DOS.

1. Turn the disk drive and computer off and remove any cartridges from the computer
2. Turn the disk drive on with the power switch on the rear. The POWER LED should light and the BUSY LED should go off.
3. Open the plexiglass cover on the disk drive by pressing downward on the square plastic button and then following the door opening diagram supplied with your drive mechanism.
4. Remove the System Master Diskette from its protective sleeve and hold it by the label end up and carefully insert the end with the oval cutout into the drive until it clicks and close the latch by following the door closing diagram which was supplied with your drive.
5. Turn the computer power on. The DOS will automatically load into the computer's memory.

Always turn the computer on after you have turned the disk drive on and inserted the diskette. If you turn the volume up on the TV while DOS is loading, you will be able to hear a series of tones. This lets you know that DOS is being loaded into the

computer. When DOS has finished loading you will see the DOS menu on the screen as it appears below:

**DISK OPERATING SYSTEM II VERSION 2.0
COPYRIGHT 1980 ATARI**

- | | |
|---------------------------|--------------------------|
| A. DISK DIRECTORY | I. FORMAT DISK |
| B. RUN CARTRIDGE | J. DUPLICATE DISK |
| C. COPY FILE | K. BINARY SAVE |
| D. DELETE FILE(S) | L. BINARY LOAD |
| E. RENAME FILE | M. RUN AT ADDRESS |
| F. LOCK FILE | N. CREATE MEM.SAV |
| G. UNLOCK DOS FILE | O. DUPLICATE FILE |
| H. WRITE DOS FILES | |

SELECT ITEM OR <RETURN> FOR MENU

Directory:

To obtain a directory listing on the screen, select item A on the menu by typing an A and pressing <RETURN>. Press <RETURN> again and the directory will be listed on your screen as seen below:

DIRECTORY--SEARCH SPECLIST FILE?
DOS SYS 036
DUP SYS 041
AUTORUN 001
627 FREE SECTORS

SELECT ITEM OR <RETURN> FOR MENU

From the directory listing you can determine that there are three files on the Master Diskette, DOS.SYS, DUP.SYS, and AUTORUN. Also noted is the number of sectors each file has used and how many sectors remain unused.

Naming Files and Filespecs:

There are just a few rules to remember when naming files. First, the maximum length of the name is eight characters. The only characters that are allowed are the letters A through Z and the numbers 0 through 9. The first character of a name must always be a letter.

Filenames may also have extenders. This is a suffix added to the file name to designate its type or usage such as BAS for a BASIC program, TXT for text file, or DAT for a data file. To add an extender type the filename, a period, then the extender, such as MYPROG.BAS.

A filespec is the device code, followed by the filename, plus it's extender, if any. The device code for the first drive is "D1:". The full filespec for the program above would then be D1 MYPROG.BAS. The device codes for additional drives are, of course, D2 for the second drive, D3: for the third, and D4: for the forth.

When prompted "DIRECTORY- SEARCH SPEC, LIST FILE?" you may enter a specific filespec for the type of files you want listed.

Wild Cards:

To enable you to be more selective and to eliminate excess typing, a special feature has been installed in DOS called the "wild card". This is similar to the joker in a deck of cards, where it can be substituted for any other card. The same can be true with file names, which enables manipulation of groups of files as we shall see.

There are two types of wild cards allowed; an asterisk (*) which can stand for any combination of letters and numbers, or the question mark (?) which stands for only one letter or number.

Let's say you have 15 BASIC files along with 30 data files on a diskette that you wanted a directory listing of. Instead of having to look at the entire directory listing of 45 files, you could enter D1:*.BAS for the filespec instead of just pressing <RETURN> again when obtaining the directory. This option would then list just the 15 BASIC programs with the name extension BAS and not the data files with the TXT extension. This same procedure may be used with several other menu options.

The question mark (?) is used as a substitute for a single letter or number in a file grouping such as FILE1.TXT, FILE2.TXT, FILE3.TXT, FILE4.TXT. In this case the question mark could be used in a filespec in place of the number (e.g. D1 FILE? TXT).

Formatting Blank Diskettes:

WARNING! This option completely erases all information stored on the diskette in the drive selected. Make sure you use only a blank diskette or one you want to erase and reuse.

All new diskettes must be formatted before they can be used. The Format Diskette option (1.) is used for this purpose as well as to erase all the files on an old diskette in order to reuse it. This process of formatting will organize the surface of the diskette

into tracks and sectors so that the data you store goes into a predetermined place where DOS can later find it.

Select option 1 by pressing the 1 key and the <RETURN> key. The computer will ask "WHICH DRIVE TO FORMAT?". You enter a 1. The computer will then request a verification by responding with "TYPE 'Y' TO FORMAT DISK 1". You then respond by entering a Y.

This process takes approximately two minutes. When finished the message "SELECT ITEM OR RETURN FOR MENU" will print on the screen again

If you get an ERROR - 173 message on the screen, this indicates that the blank diskette has a bad sector and DOS was unable to format it. Use another blank diskette and return the bad one to your supplier.

Installing DOS on New Diskettes:

Unless you are formatting a new diskette to be used only for data storage, and never for booting, you will generally need to install DOS onto the new diskette. Use option H to Write New DOS Files by typing a H followed by <RETURN>.

The computer will prompt you with "WHICH DRIVE TO WRITE DOS FILES TO?". You respond by entering a 1 and pressing <RETURN>. The computer again responds with "TYPE 'Y' TO WRITE DOS TO DRIVE 1". Type Y <RETURN> and the computer responds "WRITING NEW DOS FILES".

Deleting Files:

An empty formatted diskette contains 707 sectors of which DOS will occupy 81. If you have installed DOS and later find you need the space and don't require booting on that diskette, you may want to use the Delete function to remove the DOS files

Any time you need to remove unnecessary files from your diskettes, use the Delete File option by typing a D <RETURN>. The computer will respond with "DELETE FILE SPEC". You type "D1 MYFILE.ANY" and the computer responds TYPE 'Y' TO DELETE . D1 MYFILE.ANY Enter a Y <RETURN> and the job is accomplished. Using wild cards you may delete an entire group of files.

The drive or diskette must not be write protected when trying to delete a file or you will get an ERROR 144 message on your screen. If this happens you will need to remove the write protect sticker covering the square notch on the side of the diskette

Copying files:

Use the Copy File option for making a copy of a file on the same diskette. If you want to transfer the file to another diskette then use the Duplicate File option.

Since DOS won't allow you to have two files with the same name on the same diskette, you will need to specify another name or extension for the new file. Wild cards are not allowed unless you have more than one drive.

To make an identical copy of MYPROG.BAS on the same diskette enter option C by typing a C <RETURN>. The computer responds with "COPY--FROM, TO?", you enter D1:MYPROG.BASD1:MYPROG1.BAS <RETURN>. Check the directory after the operation is completed to see the results.

Duplicating Files:

This option is used when you need to move files onto another diskette. Use wild cards with this option if you wish to duplicate a group of files. If you are using a single drive, you will be prompted by the computer when to insert either the source or destination diskettes. You may want to use the write protect feature on the source diskette or drive to insure preventing erasure of your source diskette.

To duplicate MYPROG.BAS onto another formatted diskette, select option O by typing the letter O and pressing <RETURN>, the computer will respond with the prompt "NAME OF FILE TO MOVE?". Type D1:MYFILE.BAS and press <RETURN>, the computer will instruct you to "INSERT SOURCE DISK, TYPE RETURN". Make sure your SOURCE diskette is inserted then press the <RETURN> key. The source diskette will be read and then the computer will prompt you to "INSERT DESTINATION DISK, TYPE RETURN". Remove source diskette and replace it with the DESTINATION diskette before pressing <RETURN>. This will continue until the file is completely transferred.

To transfer all files to another diskette, use the wild card option * * as follows. Computer requests "NAME OF FILE TO MOVE?", you respond by typing D1 * * <RETURN>. The computer will continue to prompt you until all files have been transferred.

Duplicate Disk Option:

This option will duplicate an entire diskette sector by sector whereas the duplicate file option transfers a file at a time. This option also duplicates the directory, so any files that may have been on the destination diskette are lost. Just like the duplicate file

option, duplicating a disk will involve swapping between source and destination diskettes until the process is completed.

To obtain an exact copy of an entire diskette select item J by typing the letter J followed by a <RETURN>. The computer responds with "DUP DISK - SOURCE, DEST DRIVES?", you enter 1, 1 and press <RETURN>. The computer will begin its series of prompts to insert either the SOURCE or DESTINATION diskettes. Make sure you have inserted the diskette the computer has requested before pressing <RETURN>.

DOS ERROR MESSAGES

The error messages following are listed with their common causes so that you can take the appropriate action to correct the problem.

BOOT ERROR.

This error is caused by trying to access the disk drive when DOS has not been properly loaded into the computer's memory. Check to see if the disk drive is turned on, the disk drive latch is properly closed, the diskette is placed correctly in the drive, and that it contains the Disk Operating System.

ERROR- 2 AT LINE .

This error is caused by either an error in the program in memory or a peripheral device used by the program not being turned on or present. Check the following: Make sure that your system has enough computer memory (RAM) to run that program. Make sure all the peripherals are turned on or that the program is not looking for a peripheral that does not exist. Finally check to see if there is an error in the BASIC program at or around the line number mentioned in the error message.

ERROR 21

You have attempted to load a file which is not a program, that is perhaps a data or text file. Make sure you specify a program name and not a text or data file name when using the LOAD or RUN commands.

ERROR 138:

This error occurs when the computer is not communicating with the disk drives. Make sure the Data Cables are plugged into the computer and the disk drive properly.

ERROR 144:

Either there is an incompatibility problem with the diskette and the drive you are using or you are trying to save data onto a write protected diskette. Make sure the square notch on the side of the diskette is not covered or that the drive has not been placed into write protect mode.

ERROR 170:

The computer has not found the program you are trying to load. Check the spelling of the program name and make sure you have the proper diskette by listing the directory and that the proper drive with that diskette is being accessed.

DISK DRIVE ERROR CODES

These error codes are generated by the disk drive, not usually as a fault of, or an error in, the drive, but rather as a means of helping you identify problems with the media or data when the drive encounters difficulty in reading data or writing to faulty media. A full explanation follows for the disk drive error codes which are displayed when an error occurs or when pressing the ERROR pushbutton on the drive's operator panel.

Remember, errors encountered while loading a copy-protected program are quite normal as they are usually a part of the protection installed by the publisher. Ignore any of these as long as the program continues to load. If a copy protected program won't load, it is generally defective and should be returned for replacement.

The left digit will display one of four characters, a "G" for a Get or read error, a "P" for a Put or write error, or a "F" for a Format error. An "E-" is displayed when no error has occurred. The display can be cleared back to "E-" by holding the ERROR pushbutton down while pressing the TRACK pushbutton.

The right digit displays one of four numbers, 3, 4, 5, 7 or 9. The explanations, causes, and solutions for each follow.

ERROR 3 = LOST DATA ERROR

This error may occur with any of the three types of operations if the proper data has not been transferred to and from the diskette. A bad diskette (defective or worn out), or a magnetically "glitched" diskette may account for this. Retry the operation (save, load, etc.), or remove the diskette and switch the drive's power off and on again and then retry the operation. Make sure all I/O connectors are snug. If the problem persists with just the one diskette then retry the operation with a another formatted diskette.

ERROR 4 = CHECKSUM ERROR

This error may occur with either a read or write operation. A checksum is made when data is written and read back from the diskette to ensure that a "bit" didn't get lost along the way. This error indicates that one did just that. The operation you were performing should be retried at least ten times to get past this error. Try to re save the program or re-write the record. A BASIC program which has recurring problems of this type should be saved onto another diskette.

ERROR 5 = RECORD NOT FOUND ERROR

This error may occur on either a read or write type of operation. This is generally considered a non-recoverable error and the program file or data record which is at fault will usually have to be re-created. This is the time when your back up disk comes in handy! If this error occurred while you were saving a program or file, then you should immediately try re-saving the program or file onto another diskette, as the copy inside the Atari's memory at that time should be intact.

ERROR 7 = WRITE PROTECT ERROR

This error may occur on either a write or format type of operation and indicates that your drive is in the write protect mode. You must enable writing, making sure the diskette in the drive doesn't have a write protect sticker and/or resetting the PROTECT status by pressing the PROTECT pushbutton on the drive.

ERROR 9 = VERIFY ERROR

This error may occur on either a write with verify or a format type of operation and indicates that the drive has not been able to successfully read information that it has just written. On a write with verify type of operation this would most likely indicate that information within the data block of the sector is mis-written. In a format verify error (F9), the mis-written bits of information could be in the address, data or checksum areas of the diskette surface. In either case the operation should be retried. If the problem persists, another diskette should be tried, since the problem is most likely related to defects in a particular part of the diskette surface.

Whenever a particular diskette causes a drive error, it is a good idea to play it safe and make another copy. If the problem persists then reformat the problem diskette and copy the files back onto it from the back-up diskette. If problems still occur on that diskette then discard it and use the back up as your new master. Make sure you make another back up from the new master before using it for any other purpose.

Always make sure you use quality diskettes. If you are using the double density option you must use double density diskettes. These may also be used in single density, but don't try to use single density diskettes for double density storage.

If you repeatedly have problems with your diskettes or drives, then you should make sure that you are not storing your diskettes too near magnetic fields such as audio speakers, telephones, T.V.'s, or other appliances, or perhaps in a metal container that may have become magnetized. If in doubt, then change your storage location.

NOISE RADIATION NOTICE

Section 15.838 of the FCC rules and regulations stipulates that the following information be provided to users of Class B computing devices regarding the interference potential of the devices and simple measures that can be taken by the user to correct the interference:

This equipment generates and uses radio frequency energy and if not installed and used properly, i.e., in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient the receiving antenna.

Relocate the computer with respect to the receiver.

Move the computer away from the receiver.

Plug the computer into a different branch outlet so that the computer and the receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful:

How to Identify and Resolve Radio-TV Interference Problems

This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Stock No. 004-000-00345-4

IMPORTANT NOTE: This product is supplied with a shielded serial interface cable. The use of a cable other than that supplied may defeat the RFI shielding of the communications between the computer and the disk drive and is therefore not recommended.

THE GT ESTATE WORD PROCESSOR

with

GT SPELL

An IIG, Inc. Product

Author: H. C. Wagner

© 1983 Elcomp Publishing

Table of Contents

Introduction.....	22
Using this Manual.....	23
System Hardware Requirements.....	27
Loading Instructions.....	27
Using the GT Estate Wordprocessor.....	28
The Editor.....	28
The Commands.....	30
Editing Command Summary.....	30
Cursor Movement (Non-Destructive).....	31
Cursor Movement (Destructive).....	32
Copy Buffer Controls.....	33
Special Controls.....	34
e Formatter.....	35
Print Formatter Command Summary.....	35
Format Commands.....	35
The Command Line.....	39
Command Line Command Summary.....	39
Status Codes of the Editor.....	43
Error Messages of the Formatter.....	44
Using Your Sample Letters.....	45
Using the GT Estate Wordprocessor in Double Density.....	48
Using the GT Spell Program.....	49

Introduction

The GT Estate Wordprocessor(tm) turns your Atari computer into an easy-to-use word processor with many of the capabilities found in the most expensive professional machines. The GT Estate Wordprocessor provides a simple yet effective tool for your writing needs by incorporating a combination of control keys, with which you can enter a variety of commands with a single keystroke, and a 'Command Line' which provides the ability to enter more complex statements, and perform such operations as saving and loading text from disk.

The GT Estate Wordprocessor is a 'screen-oriented' word processor. This means that you can access all of the text that you see on the screen at any given time. GT Estate Wordprocessor has many features such as the ability to locate and change all (or some) occurrences of any letter, word, or block of text (known as a global search and change), insertion and deletion of letters, words, entire lines, and even blocks of text, as well as easy movement of large sections within the text. The GT Estate Wordprocessor features such formatting options as right margin justification, text centering, and automatic page numbering.

Using This Manual

Instructions can be dull, tedious and uninformative, with obscure technical language obfuscating the exposition (what?). In this manual we will use explanations and examples that are easy to understand, and straight to the point. We will try to avoid the complications of programming terms, but if it becomes necessary to discuss something of a technical nature, we will attempt to simplify and explain everything each step of the way.

The best way to learn to use the GT Estate Wordprocessor is by trying the various commands as you read about them. You will discover the best way to do the things you want to do by using GT Estate Wordprocessor and experimenting with different combinations of commands

If the computer is 'new' to you, then we recommend that you read the Atari manuals that came with it before you begin using the GT Estate Wordprocessor. This will make you more familiar with the ins and outs of the computer as we discuss the various parts of the system

Notation

One of the most frustrating and confusing things about a computer tutorial (and this goes for the writer as well as for the reader) is the notation used to indicate what you enter (or type) into the computer, what the computer prints out on the video screen, and how we indicate a sequence of keys to press or keys that must be pressed at the same time. Here are the special notations we have used in this manual along with their explanations.

A letter or word enclosed in brackets (<A>) indicates one of the keys on your Atari keyboard. In this case, the 'A' key should be pressed.

<CTRL>

This refers to the 'control' key, located on the left side of the keyboard. In most cases, the <CTRL> key is used in combination with another key to tell the GT Estate Wordprocessor to execute a special function. The '-' sign will be used to indicate that two keys are to be pressed at the same time.

<RETURN>

This key is located on the right side of the main keyboard. This key causes the cursor to 'return' to the left side of the screen. It is used mainly to terminate lines on the screen, but some command sequences require that a <RETURN> be pressed at the end. When you press this key, a 'control-M' is placed in the text.

<CTRL><A>

This means that you should press the <CTRL> key, and, while still holding it down, you should press the <A> key so that both keys are being held down at the same time. Note that pressing the two keys in the reverse order will not produce the same result.

<ESC><R>

This means that you should press the keys in a special sequence. In this particular example, you should press the <ESC> key, take your finger off of the key, and then press the <R> key (You can then take your finger off of that key also.)

Spaces and Other Special Characters

A 'character' is anything that appears on your video screen. Spaces, which appear to be blank, are counted as characters. These are the different types of characters that can appear on screen:

Letter Characters

'A' through 'Z' in upper and lower-case. When GT Estate Wordprocessor boots up, you are in the normal typewriter mode of upper and lower case. To lock into uppercase letters, hold down the <SHIFT> key and press the <CAPS/LOWR> key. You can return to the upper/lower case mode by pressing the <CAPS/LOWR> key once. A word of caution here: be careful to avoid the <Atari symbol> and control <CTRL> keys while using the <CAPS/LOWR> key. If you accidentally hold down one of these keys as you press the <CAPS/LOWR> key, the computer will begin printing control characters or graphics characters on the screen, depending on which combination you accidentally pressed.

You can clear this condition and return to normal upper/lower case operation by pressing the <CAPS/LOWR> key once.

Number Characters

The numerals '0' through '9', located across the top row of the keyboard.

Symbol Characters

Those characters that appear above the number keys (like '!', '@', and so on), as well as the '+', '-', '=', '*', and other keys.

Control Characters

These characters are generated by holding down the <CTRL> key and simultaneously pressing a letter key. If a control character is printable, it appears on screen as a reverse field upper-case letter (dark letter on a light block background).

The ZERO Character

This character generally causes trouble because it is easily confused with the letter 'O'

Text Buffer

This is the name of the block of memory where your text is stored when you are editing a document. This buffer will hold a maximum of about 20000 characters (on a 48K computer).

Copy Buffer

This is the name of a small holding area where you can store a block of your text. This buffer, which holds about 4000 characters, is useful for such things as moving paragraphs from one place to another.

Filespec

This word is used to describe the name of a disk file. It means 'file specification', and refers to the name you assign to the text you save on disk. These files may contain an exact duplicate of what was displayed on the screen, or can be 'formatted' to look as though the material had been 'printed' on paper. Picture these files as being sheets of paper which contain your text, in file folders with names (filespecs) on them. The disk can be thought of as a filing cabinet in which the files are stored.

Refer to your DOS XL Operator's Guide manuals for a full description of disk files, for now, we will provide only the information you need to use files with the GT Estate Wordprocessor.

The Atari computer performs input and output operations (referred to as 'I/O'), through devices such as the keyboard, video display and disk drives. Each device is assigned a name. For example, the disk drive is called 'D:' (note the colon after the 'D', which must be included in the device name). Since you can have more than one disk drive, you can also include a drive number. The second disk drive is called 'D2:', and so on. When you type in a filespec (using the Command Line commands), you must also include a device name. The filespec can include an extender, which can be any three-letter combination, following a period.

So a complete filespec would look like this:

```
* --- Device name code
** --- Device number (optional)
**; --- Colon terminates device name
**;***** --- File name (up to 8 letters and numbers)
**;*****. --- Separator (required with extender)
**;*****.*** --- Extender (up to 3 letters)
```

D2 EXAMPLE.TXT

If you don't include an extender, the GT Estate Wordprocessor will put the extender ".TXT" on the name for you. When you look at the directory listing for the data disk, the ".TXT" will remind you that this is a "TeXT" file. Refer to your DOS XL Operator's Guide for more information on file specs and disk files.

System Hardware Requirements

GT Estate Wordprocessor comes on a normal DOS XL computer single density disk. The minimum hardware required is:

- * Any Atari computer computer with a minimum of 64K RAM

- * Indus GT Disk Drive or equivalent

- * Atari compatible printer (serial or parallel, dot matrix or daisy quality)

(Your printer will need to be set in "Automatic Line Feed with Carriage Return" mode. Your printer manual should be consulted as to how this should be accomplished on your particular printer.)

- * Atari Printer Adapter Module (Optional - Required if printer does not have Atari direct connect interface built in.)

Loading Instructions

Turn your computer system off. Then turn the disk drive on. Place the GT Estate Wordprocessor disk in your drive with the label side up. Now turn on your Atari computer and the program will automatically load and run.

After the GT Estate Wordprocessor title page and copyright statement appear on the screen, press any key to enter the EDITOR.

Using the GT Estate Wordprocessor

There are basically two parts to the GT Estate Wordprocessor: the EDITOR, which is used for text entry, and the FORMATTER, which is used for the output of text. The EDITOR is your direct link to text material and to commands that you include in the text to control the FORMATTER. Think of the EDITOR as your input controller and the FORMATTER as your output controller.

The EDITOR

When GT Estate Wordprocessor loads, the copyright message is displayed. Press any key to begin text entry. When the editing screen appears, you will see a line at the top of the screen containing groups of letters and numbers. This line is called the 'status line.' It contains information about the status of the GT Estate Wordprocessor system. Reading from left to right, you will see C, A., R., and L., each followed by a number. These letters have the following meaning.

C: The current column position of the cursor is displayed following the colon. A text line may contain up to 255 characters.

A: The accumulated number of characters preceeding the cursor (all the way to the beginning of the text) is indicated after the colon.

R: Indicates the remaining number of characters that can still be typed in without exceeding memory limitations. The number will vary depending on how much text you have already typed in and how much memory you have installed in your computer.

L: Shows how much space is left in the 'copy buffer.' A maximum of 4096 (4K) characters can be copied at one time.

At the right side of the status line is the word 'OK'. This indicates that you are in the normal operating mode. This 'OK' is one of several two-letter messages that may appear at this position on the screen. This 'message window' will inform you of errors, let you know when the copy buffer is open, and do other things which we will discuss later.

At the bottom of the screen is a line of dashes, known as the 'Command Line'. This line is used to enter special instructions for the GT Estate Wordprocessor to execute, such as loading or saving text.

Below the status line you will see a white block character at the upper left side of the screen (this corner is called the 'home position'). The white block is called the cursor. It shows you where the next character you type will appear on the screen.

To begin entering your text, just start typing. As you type, the cursor will move from left to right until it reaches the 20th character position on the screen, and the line counter will increment, displaying the current position on the line.

If you hold a key down for more than a half second or so, it will begin to repeat on the screen, and will keep repeating until you release the key.

When you are typing text on the screen, the editor is always in the 'insert mode', which means that what you are typing is being 'inserted' into the text. If there is anything after the cursor on the screen, then what you type will appear before the existing text.

The GT Estate Wordprocessor provides you with a method with which you can tailor the length of your lines in memory for easy management of text on the screen. When you get to the point where you would like to finish the current line, press the <RETURN> key and a new line will be started. As you will see later, if formatting commands are included in the text, the <RETURN> has no effect on printout - it only serves as a line terminator for displaying the text on the screen. However, if no print formatting instructions are included in the text, the formatter will treat the <RETURN> as a normal carriage return (and line feed), and the text will be printed just as it appears in memory.

Ordinarily, you will not use lines longer than 80 characters for normal writing, but the GT Estate Wordprocessor allows lines of up to 255 characters in length (including the mandatory <RETURN> at the end of the line). This allows the creation of forms, charts and other special applications. When you reach a line's 250th character, the computer will beep a warning with each key stroke. After the 255th character, the cursor will disappear entirely and any further characters that you type will be lost. GT Estate Wordprocessor has a tendency to slow down during input when the lines get over a hundred or so characters long. So just for the sake of speed, you should keep the lines as short as convenience allows.

The Commands

There are two command levels in the GT Estate Wordprocessor. Controls, which execute immediately, and Statements, which are executed from the Command Line at the bottom of the screen. Once you have learned the various commands, it becomes almost second nature to move back and forth between the two levels.

Be sure you know which command level you are operating on so that you do not accidentally alter the text. For instance, typing <CTRL>-<X> will erase the preceeding line in the text buffer, while typing <ESC>-<X>-<ESC>-<ESC> (which appears as \$X\$#) on the Command Line will cause an exit to DOS which will kill any text you may have in memory! Therefore, be cautious and double-check every statement you write on the Command Line before you execute it.

Each control command is executed by first holding down the <CTRL> key and then pressing one of the keys indicated below while still holding down the <CTRL> key. Here is a summary of the commands:

Editing Command Summary

NOTE: All commands require the <CTRL> key to be held down first.

<CTRL>-	Cursor to bottom of text
<CTRL>-<C>	Close copy buffer
<CTRL>-<G>	Repeat last COMMAND LINE
<CTRL>-<H>	Delete previous character
<CTRL>-<I>	* Insert TAB
<CTRL>-<J>	Insert copy buffer contents
<CTRL>-<K>	Erase contents of copy buffer
<CTRL>-<L>	Invoke print formatter
<CTRL>-<O>	Open copy buffer
<CTRL>-<T>	Cursor to top of text
<CTRL>-<U>	Delete next character
<CTRL>-<X>	Delete previous line
<CTRL>-<Z>	Delete next line

- <CTRL>-<UP ARROW> Cursor to beginning of previous line
- <CTRL>-<DOWN ARROW> Cursor to beginning of next line
- <CTRL>-<LEFT ARROW> Cursor one character backwards
- <CTRL>-<RIGHT ARROW> Cursor one character forwards
- <CTRL>-<DELETE> Delete next character

Note:<CTRL>-<L> is a special control code, used to invoke the FORMATTER. It is usually followed by text formatting commands which will be discussed later.

These control commands can be executed with the cursor located anywhere in the text. If any character other than those shown in the list is typed, it will be displayed in the text as a reverse-field control character.

When we talk about cursor movement, there are two types we are concerned with, 'non-destructive' movement, in which the cursor moves around in the text without causing any changes to take place, and 'destructive' movement, which, as you may well imagine, causes the text to change in some way as the cursor passes over it. Here is a more detailed look at the <CTRL> key functions, grouped into categories of action:

Cursor Movement (non-destructive)

Controls in this group move the cursor within the text, without changing the existing text. We'll use the sample text you just entered to illustrate what happens with each of these commands

<CTRL>-

This moves cursor to bottom of the text. This command places cursor at the end of all text in memory. If you press this combination, the cursor will go to the bottom of the text on the screen.

<CTRL>-<T>

This command places the cursor just before the first entry in the text buffer. Press this combination and you will see the cursor jump to the top line of text. This will be most useful to make certain you are printing or writing the entire text since the LP (list to printer) and WD: (write to disk) commands will print or write only the text following the cursor.

<CTRL>-<up arrow>

This command positions the cursor at the absolute beginning of the previous line, at the left side of the screen. Try this command and watch the cursor move backward through the copy.

<CTRL>-<left arrow>

This command slides the cursor one to the left, while moving the character previously in that position one place to the right.

<CTRL>-<right arrow>

This command moves the cursor to the right (or down to the next line if at the end of a line), by one position, and slides the character in that position to the left.

Cursor Movements (destructive)

These controls move the cursor and alter the text in some way as the cursor is moved.

<CTRL>-<H>

This command works exactly the same as the <BACK SPACE> key. It deletes the character before the cursor and moves the text following the cursor back to the left one position.

<CTRL>-<I>

This command actually places a tab command, <CTRL> <I>, into the text and the cursor moves one position to the right.

<CTRL>-<U>

This command operates exactly like the <DELETE> key. It erases the character to right of cursor and moves any text following it to the left by one position.

<CTRL>-<X>

This command deletes the all text from the current cursor position to the previous carriage return (CTRL-M).

<CTRL>-<Z>

This command deletes all text from the current cursor position to the next carriage return (CTRL-M).

Copy Buffer Controls

Let's take a detailed look at the use of the copy buffer. The following group of controls access the copy buffer.

<CTRL>-<C>

This command closes the copy buffer to further input. Use this before moving the cursor to a new location, after filling the copy buffer.

<CTRL>-<I>

This command inserts the contents of the copy buffer at current cursor position. Just move the cursor to the position you wish to place the copy of the buffer contents, and press the keys. The contents of the copy buffer are duplicated in the text, and anything after the current cursor position is moved to the end of the duplicated text.

<CTRL>-<K>

This command empties the copy buffer, and restores the buffer memory counter.

<CTRL>-<O>

This command opens copy buffer. Position the cursor at the END of the text you wish to duplicate in the copy buffer, and press this key combination. You may now move the cursor to the HEAD of the text to be copied (using any of the cursor movement commands), and press **<CTRL>-<C>** to close the buffer.

To use the copy buffer, place the cursor at the END of the text to be duplicated, open the buffer with the **<CTRL>-<O>**, and use the cursor movement controls, **<CTRL>-<Up Arrow>** (move to beginning of previous line), **<CTRL>-<Right Arrow>** (move one character backward) or **<CTRL>-<T>** (cursor to beginning of text), to place the cursor at the START of the area to be copied, then close the buffer with a **<CTRL>-<C>**.

If you are trying to accomplish a block move of text, you can fill the buffer and erase the original lines as you go, using the **<CTRL>-<H>** (delete previous character) or **<CTRL>-<X>** (delete previous line) commands.

Any text you may wish to add (using the procedure outlined above) will be added to the beginning of the current contents, of the copy buffer, so be careful. It is best to move one section at a time, and clear the buffer after each use. Also, be sure to close the buffer after filling it with the text you wish to preserve, before moving the cursor anywhere else in the text. Strange things will happen to the contents of the buffer, such as erasing characters at the beginning, if you move the cursor forward in the text while the copy buffer is still open.

Special Controls

<ESC>

When you press this key while you are in the EDITOR, it transfers control to the Command Line. After you have entered whatever command you want, pressing this key twice <ESC><ESC> will execute the command and return control to the EDITOR.

<START>

Printer control switch. Pressing <START> during output to a printer (or other device) will stop the output, and display the message 'LIST ABORT WITH START'. You can then press the <RETURN> key to return to the EDITOR with the cursor positioned at the spot that printing stopped.

<DELETE>

This command operates exactly like <CTRL>-<U>. It erases the character to right of cursor and moves any text following it to the left by one position.

The FORMATTER

One of the features that makes the GT Estate Wordprocessor so versatile is its ability to format and print your text. You can control such things as centering, line width, page length, margin justification, paragraph indentation and page numbering.

Print Formatter Command Summary

NOTE: These commands must be preceded by a <CTRL>-<L>.

<A><T/F>	Autoline feed after paragraphs
<n>	Set form length to 'n' lines
<C><T/F>	Center text lines
<D><n>	Insert 'n' line feeds
<E><n>	Indent paragraphs 'n' spaces
<F><T/F>	Right margin justification
<G><n>	Set form width to 'n' characters
<K>	Cancel previous print formats
<L><n>	Sets left margin to 'n'
<N><Tn/F>	Page numbering starts at 'n'
<O>	Reset margins and auto line feed
<P>	Advance paper to top of form
<R><n>	Right margin set at 'n'
<S><n>	Set number of lines per page to 'n'
<W><character>	Writes character directly to printer

The Format Commands

Now lets examine the print FORMATTER command structure.

<CTRL>-<L>

Begin entry of formatting commands. All formatting commands must be preceded by a <CTRL>-<L>, and terminated with a <RETURN>. Most format lines can be placed anywhere in your text. Format commands preceding the cursor are ignored during list operations.

When you press <CTRL>-<L>, a reverse-field 'L' is displayed on the screen at the current cursor position. If you enter <CTRL>-<L><RETURN>, with no format commands, a new line will start. Usually this is done to define a new paragraph, but you may also use it to prevent the FORMATTER from merging two separate lines into one. Each command line, even an empty one, starts a new line and puts a space between two paragraphs.

Here are the commands used to control the print formatting - 'T' indicates True, which means the function is activated. 'F' indicates False, which turns the function off.

<A><T/F>

Automatic line feed after each paragraph. Default is False. This causes a line-feed character to be sent to the printer after each paragraph is printed. This can be used to separate the text in a clearer fashion.

<n>

Define new form-length. Default value is 66. The length of the form must be greater than or equal to the number of lines per page. This is used by the FORMATTER as a counter for advancing the paper to the top of the next form.

<C><T/F>

Center text lines. Default is False. This will cause the printed text to be centered between the left and right margins (if left and right margins were defined earlier). This command has priority over right margin justification.

<D><n>

Insert 'n' line-feeds. This command causes 'n' line-feeds to be sent to the output device. This is useful for preparing such things as forms, which have a lot of space between lines.

<E><n>

Indent paragraphs 'n' spaces. Default is zero. Each time a new paragraph (<CTRL>-<L>) is printed, the FORMATTER will indent the first line by the number of spaces you indicate. This only works after the definition of the right margin has been entered.

F><T/F>

Right margin justification. Default is false. This command gives your text a professional look by adjusting each line so that the right margin is even ('justified'). The FORMATTER accomplishes this by adding spaces between the words in each line it prints out. The FORMATTER requires that the right and left margins be set, otherwise it will not know to which column it should justify.

<G><n>

Define new form width. Default is 80 characters.

<K>

Erases all previous definitions for printout. Since your GT Estate Wordprocessor will remember all of the print format controls from the last document printed during each session, beginning each letter or text file with a <CTRL>-<L> <K> will prevent some embarrassing situations. Please Note: The "K" command will not re-set any special control codes that have been sent to your printer using the <W> command (writing special hex control codes to your printer). To cancel any special codes of this nature you will have to write another special character to your printer -- consulting your printer manual.

<L><n>

This command sets the left margin at position 'n.' The FORMATTER sends the number of spaces indicated by the left margin position before it sends the line of text. The default is zero. The value given for the left margin has to be less than the value of the right margin.

<N><T(n)/F>

Page numbering starts with page 'n.' The first page number is not printed. The following numbers are printed at the top center of the page. Entering 'F' causes page numbering to be turned off. If page numbering is OFF, you can use the 'N' command to turn it back ON.

<O>

Re-sets the left and right margins as well as the automatic line feed to the default values.

<P>

Causes the printer to advance the paper to the top of the next sheet (form feed). This is done by sending line-feeds to the printer until the internal counter reaches the top of

the next page, as defined by the form length (normally 66 lines per page). If you are doing multiple printouts, include the 'P' command at the end of the text to automatically force a new page on the printer.

<R><n>

Sets right margin to position 'n'. (If n>0 and n>left margin and FT (Formatter True) command has been previously been issued, then it is no longer printed in the ragged right mode.)

<S><n>

Sets 'n' lines per page. The number of lines per page must be less or equal to the form length (see above). Default value is 56 lines per page. Whenever this statement is encountered, the FORMATTER will position the paper to the top of the next page, so be careful where you put this in the text. If it occurs at the beginning of the text, the first page will be skipped.

<W><character>

This command writes the 'character' directly to the printer and is usually used to send control commands directly to the printer. For example, hex \$0F (a hex number) sets the Epson MX-80 to the narrow font mode. To send a hex value, first type <CTRL>-<L>, then go to the command line with <ESC>, type 'H' (which means 'insert hex byte') followed by the two digit hex value (00 to FF) you want to insert, and finish with <ESC><ESC>. This will put the required hex value on the print FORMATTER line.

You can include as many commands as you wish on one line, and it is not necessary to separate them.

EXAMPLE

This example will demonstrate how to send a HEX Byte value to your M\ printer to turn on its condensed font type.

Type <CTRL>-<L>. Type capital <W>. Type <ESC> (this gets you on command line). Type capital <H> (this signifies that you will be writing a hexadecimal value). Type <0> and then capital <F>. Now type <ESC><ESC> and the Estate Wordprocessor will write what appears to be an inverse capital O next to the inverse I and capital W you have previously written in your text. At this time you can write additional print format commands, if desired, to compensate for the additional number of characters that can now fit on the same line.

The Command Line

Inputs are made on the command line by first pressing the <ESC> key. This causes the first dash on the command line to be replaced by a dollar sign ('\$'). You can then enter multiple commands, separated by <ESC> (which displays the '\$'). To execute the command line, just press <ESC><ESC>. This displays the 'pound sign' ('#') symbol at the end of the line and tells the GT Estate Wordprocessor to begin executing the commands you have entered.

The command line is used for such functions as printing formatted text, retrieving files from a disk, and invoking certain editing functions.

The following commands are available from the command line:

COMMAND LINE Command Summary

<C>.....	Change string
<D>.....	Delete string
<E>.....	Erase entire text buffer
<I>.....	Insert string
<L>.....	Invoke print formatter
<R>.....	Read file from a device
<S>.....	Search for a string
<W>.....	Write file to a device
<X>.....	Exit to DOS

Some of these commands can be executed several times by entering a number from 2 through 255 in front of the command.

<G> Repeat Command Line

You can repeat the whole Command Line by using the <CTRL>-<G> command from the EDITOR, which brings you back to the beginning of the line. This is possible only if the Command Line was entered without error. If an error occurred the program jumps back to the control mode.

Here is a description of the parameters used with Command Line instructions.

<C> String Search and Replace

Strings preceded by '/' are searched locally, which makes nested searches possible, such as \$CBaseball is fun\$/Base\$Soft\$#, which causes the substring 'Base' to be changed to 'Soft' only when it occurs in that context. When the command executes, the target string is located, then the portion of the string following the slash (/) is changed to the string following the next <ESC> (\$) (the last string on the command line). If this local nested search is not used, as in \$CBaseball\$, the first occurrence of the letters 'Base' will be changed to 'Soft' regardless of where they appear in the text, even if they are in a larger word.

To repeat a change a number of times within the text, type the number of times the change is to be repeated before the letter 'C'. For example \$255CBaseball\$Softball\$# changes the designated string up to 255 times. In the event that the string you want to change occurs more than 255 times, type <CTRL>-<G> to execute the changes another 255 times.

<D> Delete a String

This command erases the next occurrence of a string. To make the same erasure a number of times, type the number of changes desired before the letter 'D'. For example \$255DBaseball\$# erases the word 'Baseball' the next 255 times it occurs (if it occurs less than 255 times, the command stops). If the string you want to erase occurs more than 255 times, just type <CTRL>-<G>, and the erase executes another 255 times.

<E> Erase text buffer

This command erases the entire contents of the text buffer. The text in the buffer are not affected.

<I> Insert String

This inserts the specified string at the current cursor position. Repeated inserts can be done by typing the desired number of repeats prior to typing the 'I' statement.

<L> Listing Your Text

This is the command you use to print your text. It formats and prints the text, beginning at the current cursor position. The devices are:

E: Screen (unsplit)

P: Printer

D: Disk (must also include filespec)

Please remember when using this command that only the text that follows the cursor will be printed. It will be helpful to get in the habit of pressing <CTRL>-<T> (moving the cursor to the top of your file) prior to entering the List command sequence.

When sending the formatted listing to the screen, a single 'L' (as in \$L:\$#) sends only the first 38 characters to the screen. An 'L' followed by a 2 (\$L2:\$#) sends all characters from the 38th position to the screen-device. If you list the text to a disk file, you can subsequently print it out using the DOS COPY FILES command. To send it to a parallel printer from DOS, the format is:

FILE TO COPY FROM: D1:filespec
FILE TO COPY TO: P:

This is useful for printing multiple copies of the text file.

<R> Reading A File Into Memory

<ESC>RD:TEST.TXT<ESC><ESC> reads a file into memory. After the load is completed, the cursor is positioned at the end of the text just loaded. If there is any text after the cursor before the file is loaded, then it still will be in the same position after the file is loaded. Text appearing before the cursor remains unchanged.

<S> String Search (No Replacement)

This command will search for the next occurrence of the specified string move the cursor to the point just past that occurrence. If you include a number (from 1 thru 255) before the <S>, the search will stop at that occurrence of the target string. For example, \$S\$and\$# will stop at the 5th occurrence of the word 'and' beginning at the current cursor position. You can do manual multiple searches, as well, by not including a number first, and using the <CTRL>-<G> command to re-execute the search. The search will continue until the end of the text is reached. If the target string cannot be found, the error message "S?" appears at the upper right side of the screen.

<W> Saving a File to Disk

<ESC>WD1:TEST.TXT<ESC><ESC> writes text to file on drive 1.

In the example, this command writes the file 'TEST.TXT' to disk. The file is written just as it appears in memory. The formatting commands and all control characters are preserved in their original form, but not executed during the save operation. Please remember when using this command, that only the information which appears after the cursor will be written to the disk. This is useful if you want to save the last part of a file, but it is a better practice to get in the habit of pressing <CTRL>-<T> (moving the cursor to the top of your text file) prior to beginning the Write to disk command sequence. This way you will be certain that you have saved the entire file.

<X> Exit to DOS

This command transfers control to the disk operating system to do such things as look at the directory, change filenames, and so on. You can not return to the GT Estate Wordprocessor(tm) once you have gone to DOS without reloading the entire program by typing "AUTORUN.SYS" with your GT Estate Wordprocessor Master (or a copy of it) installed in your disk drive.

NOTE: When using the command line, all entries should be in upper case letters

Status Codes of the Editor

The GT Estate Wordprocessor status codes are two characters long and are displayed in the upper right-hand corner of the screen. If an error occurs, the message is displayed and control returns to the EDITOR. These are the error messages and circumstances:

OK

No errors detected.

CO

Command line Overflow. No more than 40 characters are allowed on the command line.

E?

Invalid character in command line.

#?

The number in front of a command is larger than 255.

CH

The CHange command was entered without including a target string.

I?

No more space in text buffer

C?

Copy buffer is full

S?

String not found, or no target string indicated.

L?

Something went wrong during execution of the L(ist) command (Wrong file, printer not attached)

RW

Read/write error File does not exist or error occurred during the read/write operation

BO

The copy buffer is open

Error Messages of the FORMATTER

If an error occurs, the screen will clear and the error message will appear at the top. To clear the error condition, press any key, and control passes back to the EDITOR, with the cursor at the location of the error.

CIO ERROR DURING PRINT

An error occurred during printing of text, or the <BREAK> key was pressed during printout.

ILLEGAL COMMAND

An unknown command is in the format command line.

ZERO IS NOT ALLOWED

A parameter of zero has been entered at a place where it is not allowed.

T(RUE OR F(ALSE EXPECTED

A command requiring the T or F condition code has been entered without including the correct condition code.

FORMLENGTH LOWER THAN PAGELENGTH

As you may expect, the form length must be longer than the page length.

GREATER THAN (RIGHTM-LEFTM)

You tried to indent more than the difference between left and right margins.

LEFTM GREATER THAN RIGHTM

Left margin is bigger than right margin.

(RIGHTM-LEFTM) TOO SMALL

During justification, no blank was found in a line. Try to separate a long word into syllables.

LIST ABORT WITH 'START'

You stopped the printout by pressing the <START> key.

Using Your Sample Letters

Your GT Estate Wordprocessor contains several sample letters and text files that have been provided to demonstrate how various features of the GT Estate Wordprocessor operate, and how it can take advantage of special features of some popular printers. In this section we will review one of these sample letters and analyze the sequence and logic behind the print format commands, editing commands, and other elements of the wordprocessor.

We'll begin by loading in the file named "LTR1027.TXT". After booting your GT Estate Wordprocessor and exiting the title page by typing any character, you will be presented with a blank workspace into which you may begin typing your document. Rather than typing an entire letter we will shorten this exercise by reading in a sample letter from your GT Estate Wordprocessor diskette. In order to accomplish this we must first enter the command line by typing <ESC>.

The first character on the bottom line of your screen will now change from a "-" to a "\$". Next you will type "RD:LTR1027.TXT", signifying to the GT Estate Wordprocessor that you wish to Read from Disk (defaulting to drive number one) the file named "LTR1027.TXT". In order to cause the GT Estate Wordprocessor to execute the command you have just typed you will now type <ESC> <ESC>. Following the command which you have previously entered ("RD:LTR1027.TXT"), you will see a "\$" character followed by a "#". Your disk drive will now become active and in a few seconds your screen will be filled with data. You will now be viewing the end of the document that has been previously recorded. Typing <CTRL>-<T> will move your cursor to the Top or beginning of the letter. From this point forward it will be easiest to follow along with this text by using the <CTRL>-<DOWN ARROW> keys.

The first line of the LTR1027.TXT file is a <CTRL>-<L> (which appears as an inverse L on your screen, and is used to invoke the print formatter) followed by a capital K. Since your GT Estate Wordprocessor will "remember" the print formats invoked by a previous document written or printed during the same session, it is a good practice to begin documents with a <CTRL>-<L> <K> sequence to erase or cancel any previous print format commands. Of course if you have just booted up your GT Estate Wordprocessor there will be no previous print format commands to cancel, but you cannot always count on this sequence occurring.

The second line reads "Dear Future Systems Customer:" followed by an inverse M. The inverse or control M character represents that the <RETURN> key has been pressed at this point. Since no format commands have been invoked at this time, the GT Estate Wordprocessor will obey the "return" instruction. After line 3, where the right margin justification function has been turned on, the control M (<RETURN>) instructions will be ignored, as the GT Estate Wordprocessor will merge all of the sentences and make its own decisions as to when returns should be inserted until the next paragraph marker (<CTRL>-<L>) is encountered.

Line 3 reads as follows: '<CTRL> <L>D1L0R70A11115'. This translates to turn on the print formatter, insert one blank line, set the left margin at 0, set the right margin at 70, automatically insert an extra linefeed after paragraphs, turn on the right margin justification, and automatically indent 5 spaces at the beginning of each paragraph. This shorthand sets up all of the formatting for the next two paragraphs. You will notice that the 'returns' which appear on the screen do not appear in the printed output of the letter. Also notice how the <CTRL> <L> is used to mark the end of the paragraphs.

Following the second paragraph, to demonstrate the line centering capability of the GT Estate Wordprocessor, we have typed <CTRL> <L> <C> <I> which turns on the centering function. After we have typed 'Centered Text', we have turned off the centering function by typing <CTRL> <L> <C> <I>. (Centering has priority over right margin justification in your GT Estate Wordprocessor, failing to turn it off will cause each line which is followed by a return character to be centered between the left and right margins you have established.) On the same line we have entered a couple of additional commands. D1, insert one blank line, and L1, re-setting the left margin to the tenth column. The next paragraph is indented demonstrating a common method of easily identifying quoted sections, etc.

Following the indented sub-section is a line reading '<CTRL> <L>C'D1L0R40', which translates to: invoke the print formatter, turn on the centering function, insert one blank line, re-set the left margin to zero, and re-set the right margin to forty. We will be centering the next line and then setting up a paragraph which will demonstrate turning on a special control code function in the Atari 1027 Letter Quality Printer.

After the "IMPORTANT NOTICE" line, we have written <CTRL> <L> CFE0W followed by what appears to be an inverse "O". This translates to: turn off the centering function, do not indent at the beginning of the next paragraph, and write the hexadecimal control code "0C" to the 1027 printer. (The hexadecimal control code "0C" is interpreted by the 1027 printer as a signal to begin its underlining capability. You cause the hexadecimal code "0C" to be written to the printer by first writing a "W" (after the print formatter has been invoked by typing <CTRL> <L>, of course). Next the <ESC> key will need to be pressed, getting you to the command line. Next the <H> key will be pressed to indicate to the GT Estate Wordprocessor that you will be entering Hexadecimal information. Now for the <0> and <C>. All that is required to have the special code be written into your text at this point is to type <ESC> <ESC>. This same sequence may be used to cause other special functions of your printer to be turned on and off (you will have to consult your printer manual for details). It should be noted that for multiple control code inputs to the printer you do not need to repeat the "W", just continue writing two character hex codes on the command line until you have written all of the hex codes required, then hit <RETURN>.

The next paragraph will appear entirely underlined, if you have an Atari 1027 printer or if your printer interprets a hex "0C" as a signal to begin underlining. After the underlined paragraph we have written the following line, '<CTRL> <L>E5L0R70W' followed by what appears to be an inverse "N". This does the following things: indents 5 spaces at the beginning of paragraphs again, re-sets the left and right margins to 0 and 70, and most importantly sends a hex "0E" to the printer to turn off its underlining function.

Our only other use of control or print formatter functions in this document, other than to separate paragraphs, is to again eliminate the automatic indentation after paragraphs in order that our closing "Very truly yours," and signature will appear flush left, and using the line insert command once again.

Of course this brief overview only scratches the surface of what is possible for your GT Estate Wordprocessor, but we hope the exercise has been useful and instructive. Printing this sample letter at this point will require only a few simple steps. Type <CTRL> <L> to return you to the top of the letter. Type <ESC> <L> <P> <:;> <ESC> <ESC>, and your printer will begin typing away. The results you would see, if you had an Atari 1027 printer are shown on the next page.

Using the GT Estate Wordprocessor in Double Density

Due to potential conflicts in low memory, your GT Estate Wordprocessor has been provided to you in a single density, one or two drive configuration. You can create a single drive, double density version of the GT Estate Wordprocessor by following these simple steps.

1. Insert the Atari BASIC Cartridge into the computer. Note: Some new Atari Computer models have BASIC built in.
2. Boot your original GT Estate Wordprocessor Diskette, then exit from the program by typing "<ESC> X <ESC><ESC>".
3. Insert your original System Master Diskette and type "MENU".
4. From the Menu type "T" for "TO CARTRIDGE". BASIC will clear the screen and say "READY".
5. Type "POKE 1802,1" and then press the <RETURN> key. (See your DOS XL Operators Guide, Section 7.5 for an explanation of what this does.)
6. Press the <SYSTEM RESET> or <RESET> button. BASIC will clear the screen and say "READY" again.
7. Type "DOS" and then the <RETURN> key. The DOS XL menu will now be displayed.
8. Type "Q" to Quit the menu.
9. Follow Section 7.2 in the DOS XL Operator's Guide to create a double density diskette.
10. Follow Section 7.3 in the DOS XL Operator's Guide to copy the GT Estate Wordprocessor to the newly initialized double density diskette. Use the command "SDCOPY D1:AUTORUN.SYS -Q" and <RETURN> instead of the example given in the book.
11. Re-boot the system using your new double density GT Estate Wordprocessor Diskette.

GT Speller

A Spelling Checker for the GT Estate Wordprocessor

Everyone acknowledges the problems associated with proofreading your own writing. It is difficult to see your own mistakes. While the GT Speller program can't critique your writing style or grammar it can prove to be a valuable tool to creating good and professional impressions with your writing -- no more misspelled words.

Although the program GTSPELLER.COM resides on the same diskette as your GT Estate Wordprocessor, it is actually a completely independent and separate program. It can be omitted when making back-up copies of your wordprocessor if you want to use the same diskette for both your program and storing your text, saving you another 424 sectors in single density.

GT SPELLER has an internal vocabulary (words it already understands and knows how to spell) of tens of thousands of words. In addition, and more importantly, it can be taught new words by creating your own vocabulary file. This is a very simple procedure as you will note below.

PROBLEM PREVENTOR: The GT Speller program has been written to check the spelling of documents written with the GT Estate Wordprocessor. In some cases, other wordprocessor documents or text files created by other means will not be compatible with the format utilized by the GT Estate Wordprocessor, and will not work. In a few of these cases, at least in the case of plain text files, if you can open or read the file from disk with the GT Estate Wordprocessor, make any necessary corrections to it while in memory and then re-save or write it to disk, the GT Speller program will most likely work with the re-saved file.

PROBLEM PREVENTOR: The GT Speller program ignores case (does not distinguish between upper and lower case) when checking a document. Therefore, SPELL will match spel, as well as sPELL and SpEL, etc.

Using the GT Speller Program

In order to see the GT Speller operate you will need to have a file on disk that was written by the GT Estate Wordprocessor. To make this easier, we will use the GT Speller to check a sample file, LTRMX80.TXT, which already exists on your disk.

The first step will be to get the spelling checker started. If you are operating from the DOS XL Menu, you would first type X (for eXtended menu) and then type GTSPELL and hit the <RETURN> key. Of course from the command processor level of DOS XL where you are when you have 'Quit to DOS XL', you only need to type GTSPELL. In either case the screen you will next see is as follows:

GT SPELLER**A SPELLING CHECKER PROGRAM
COPYRIGHT 1985 INDUS SYSTEMS****DOCUMENT FILENAME=**

The GT Speller is now asking you for the name of the document you wish to have checked. The name of the document can include the "D1 " or "D2." specifiers if you have more than one drive, or this can be omitted if the document you wish to check will be on the same drive as your program (even if it is a different diskette). PLEASE NOTE. If you are a one drive system owner, you will normally need to remove your speller disk at this point and insert the disk which contains the document file you wish to have checked. For our tutorial the document and speller are on the same diskette, we will type LTRMX80.TXT (and then <RETURN> of course) as the document filename we wish to check. The GT Speller will read the requested file from the disk and then ask you to:

**INSERT GT-SPELLER DISK
THEN PUSH START**

At this point, you would normally re-insert the GT Speller disk in the drive if you are a one drive system user, or simply push START if you have two drives and the document file was on the other diskette. Again, for our tutorial since the document, speller, and wordprocessor are all on the same diskette, you will only need to press the START key at this point to activate spell checking of the requested document.

The GT Speller will now inform you that it is:

NOW CHECKING SPELLING

As it compares the file which it has previously read against it's vocabulary of words contained on disk, it will list on the screen those words it did not recognize. In the case of our file "LTRMX80.TXT", it will report the following words as un recognized:

**AFL
CFE
FTG
KAFFTE
NOTICIBILITY
WORDPROCESSOR**

Since the first four "words" are really just formatting instructions for the GT Estate Wordprocessor, we won't worry about them being mis-spelled. The last two words,

although spelled correctly aren't in the GT Speller's vocabulary. Following the unrecognized words listed on the screen, the GT Speller is asking:

USER DICTIONARY =

This is the program's way of checking the remaining words against any auxiliary dictionaries or vocabulary lists you may have created. Since we do not have any auxiliary dictionaries or vocabulary lists to check against at this time, we will just press the <RETURN> key causing the following message to be displayed:

PRESS OPTION TO PRINT ERRORS

PRESS START TO START OVER

If you have a printer connected to your system and it is turned on, pressing the **OPTION** key will give you a print out of the above words (You can use the list instead of your memory or handwritten copy when you go back to the GT Estate Wordprocessor to use the find or find and replace features to correct your document). Or, press the **START** key and you will be given the opportunity to spell check another document. The only remaining feature of the GT Speller program we have not examined is the procedure you follow to create your own vocabulary lists or dictionaries.

Creating your own vocabulary/dictionary

Creating your own vocabulary lists is as easy as any other feature of the GT Speller. You need only use the GT Estate Wordprocessor, and make a list of the words you want to add to the vocabulary or dictionary of the GT Speller. You use upper or lower case, list the words in any order, using either the spacebar (spaces) or the <RETURN> key to separate the words. Whatever name you give to the list when you write it to the disk is the name you enter when the GT Speller asks "USER DICTIONARY ="

For example, with our file "LTRMX80.TXT", we could create a file containing the words:

AFL
CFE
FTG
KAFFTE
NOTICIBILITY
WORDPROCESSOR

and name it AUXDICT. When the spelling checker is run again, it will report the same words as unrecognized during its first "pass", but when it is given the User Dictionary name AUXDICT, it will then report.

NO ERRORS WERE FOUND

PRESS START

When you are finished checking the spelling of all of the documents you are working with, you can be returned to DOS or BASIC by pressing the RESET key.

PROBLEM PREVENTOR: When entering words into an user dictionary file it is wise to double check the spelling of each word with your real dictionary. Otherwise, all the time and effort you have gone through creating good impressions with a correctly spelled letter or term paper will have been in vain.

GT DATA MANAGER

User's Manual

Software and Manual by

**Carl M. Evans
Richard M. Leonard**

Copyright 1984

VERVAN Software

**Produced using copyrighted
Software Products of**

**Monarch Data Systems
Cochituate, MA 01778**

Table of Contents

Introduction.....	55
Hardware Requirements.....	56
Getting Started.....	57
Record and File Limits.....	59
The Main Menu.....	60
Sample Data Bases.....	62
Helpful Hints.....	70

INTRODUCTION

Welcome to the world of personal information management! Need a mailing list? Household inventory record catalog? A list of all your software or books? All of these and more are now easily available.

The GT Data Manager is a unique product in its class. It is extremely flexible and powerful. It even has capabilities that the best selling data base managers do not have. Unlike these "best sellers", however, it was written for the personal market. It was designed to be used in the home or small business by average people, not for data processing experts.

You will find the GT Data Manager to be extremely easy to use. Special attention was given to the program/operator interaction. All operations are menu driven as far as is practical. The result is that the program is truly "user friendly".

The GT Data Manager is a unique software package that can be utilized in many ways in your home or small business. It will maintain information and present it back to you either on your computer's display screen or in printed form on your printer.

You can keep a mailing list on disk and quickly access any individual's address or phone number. You can even go further by having the computer list out all names and addresses with a selected ZIP code or telephone area code. You could even list everyone whose birthday is in February!

Keep a list of your household property on disk and the GT Data Manager will print out your inventory. The GT Data Manager will help you track your expenses when you enter all checks and payments into a GT Data Manager format. At the end of the year, you can quickly obtain a printout of all your expenses or of selected expenses. With the GT Data Manager you can even request a list of all utility payments, mortgage payments, or even more. Whatever you keep records for, the GT Data Manager can do it for you more accurately and with greater utility.

HARDWARE REQUIREMENTS

The hardware required for using the GT Data Manager is:

- Any Atari computer with at least 48K RAM
- An Indus GT Disk Drive for Atari or compatible drive (single or double density)
- Any Atari compatible printer (Optional)
- A Printer Interface Module (Optional)

GETTING STARTED

Insert the GT Data Manager diskette into your disk drive and boot up as you normally would. The GT Data Manager will automatically load and display the title and copyright screen. Press any key and the main menu will appear. You are now ready to begin managing your data.

The main menu will display ten options which may be selected by pressing the appropriate key. The options are:

A. File Directory
B. Change Drive
C. Create File
D. Modify File
E. Exit to Dos
F. Format a Disk

G. Add New Record
H. Modify Old Record
I. Print Records
J. Display Records
K. Display Fields
L. Sort File

If this is the first time you have used the GT Data Manager, then the first thing you will need to do is create a file. A review of the sample data base files provided with your GT Data Manager is contained in a later section of this manual. Start by placing a FORMATTED diskette in drive number one, then select the "C" option from the main menu

The program will clear the screen and print "CREATE NEW DATA BASE" at the top of the screen followed by a prompt which asks you to "Enter File Description". You should enter a short description of what the purpose of the file will be. For example, you might enter "Address Book" if you are going to use this file to maintain a list of names, addresses and phone numbers. The inverse video "bar" tells you the maximum length of the description you can enter. In this particular case, you must enter at least one character, but may not enter more than 20 characters for the description. This kind of prompt will turn up often in the program.

The next prompt asks you to enter a name for this particular (file) data base. The file name can be from one to eight characters long. It must begin with a letter of the alphabet and contain no lower-case or special characters. In other words, it may contain numbers and upper-case letters.

The third prompt will ask you "Number of Fields In Record (2 - 8)". This is how many different items or parameters you wish to store in each record. For example, in your address book you might want to store each person's name, street address, city & state, ZIP code, telephone number, and birthday. Each of these would be a field in a record.

When deciding how many fields you are going to use, keep in mind that you will be able to search or sort an entire file based on the contents of a "field". For example, in

the list we just showed you, we lumped "city" and "state" into one field. If we anticipate that we might need to do that some day, we should separate that one field into two fields.

It is very important that you carefully think out what you want to store in the file. Once you have created a file, you can go back and alter the labels assigned to each field, but you will not be able to alter the number of fields in an existing file. This leads us to the next prompt.

When you enter the number of fields that you want in this file (actually it is the number of fields in each record in the file), the screen will clear again and you will be prompted to enter a "label" for the first field. Enter an appropriate description and press the (RETURN) key. For example, in our address book file we probably would name (label) the first field "NAME L,F".

The next prompt asks you for "Field Length (1-37)". This is another of those critical parameters that can only be set once. So, again, choose your value carefully. Once you enter this value and press the (RETURN) key, the screen will clear and the same questions will be asked about the next field. This process will continue until you have configured all of the fields.

When all of the fields have been defined, the screen will clear, a summary of the file definition will be displayed and you will see a prompt that says "Press (Y) to Save File". Press (Y) if you are satisfied with the record definition. Pressing ANY other key at this stage will return you to the main menu without saving the new file definition.

RECORD AND FILE LIMITS

While creating the file, one thing you probably noticed near the top of the screen was a line that said "Record Size:" followed by a number. You should keep an eye on this number as you go through the definition process. This number is the sum of the lengths of all the fields defined up to this point. The maximum record length that the program will allow is 128. Also, the shorter the total record size you end up with, the more data you will be able to store on the diskette.

How much data can you store in a file? Well, this depends upon several things. The first is the length of the records in the file. The second is whether you are working with a single or double density disk drive. The third factor is how many other files are on the same disk.

Let's look at an example where you have two double density disk drives. We will assume that each record in our example file is 128 bytes long and that we are using disk drive number two in double density mode with no other files on that disk. The largest size our file could be is about 700 sectors and each sector will hold 256 bytes, or about two records. So, we should be able to store 2×700 , or about 1400 records on that diskette. Equivalent storage on a single density diskette would be about half of that, 700 records. Also, if we decrease the length of the records in the file (minimum allowed length is 10), then the maximum capacity goes up accordingly. Since the GT Data Manager is totally RAM resident, you can achieve similar results with a single drive system if you use a separate diskette for your files. There are other less important length restrictions, but these will be displayed in the appropriate prompt while you are running the program.

THE MAIN MENU

The GT Data Manager main menu gives you twelve major functions from convenient menu format. This section of the manual will briefly describe the options available in the main menu.

A. File Directory

This command gives you a list of the data base files on the disk. The 'directory' for the data bases is maintained in a file called 'INDEX'. This file is first generated when you create a data base and is updated to include any new data bases you may add to that disk. When you use the 'A' option, the program will interrogate the INDEX file to find out which file names to search for on that disk. All data base files must have the extender '.DB' or they cannot be accessed. This extender is automatically assigned to all data base files created by the GT Data Manager.

B. Change Drive

This command is of use primarily to those of you who have more than one disk drive. This command allows you to specify which disk drive will be used in all data management operations. If you do not use this command, then all operations are assumed to be for disk drive number one.

C. Create File

This command is used to create a new data base file. The specific details of how to use this command are described in the section on "GETTING STARTED".

D. Modify File

This command is used to perform two different functions. You may either delete an entire file or alter the labels of the fields in a file. The prompts are clear enough to guide you through.

E. Exit to DOS

This command simply returns control to DOS and for the DOS XL it will return you to the command processor level "D1:" prompt. If the file MENU.COM is contained on your copy of the diskette, you can get a menu simply by typing MENU at this point. In order to return to the GT Data Manager, you type "GTBASE" from the command

processor level (D1: prompt) or use the "X" (eXtended command) option from the DOS XL menu and typing "GTBASE" when prompted for the name of the extended command.

Be very sure you do not have anything left in memory that you may still need. You will have to re boot the GT Data Manager or use the procedure described above, even if you have a MEM.SAV file on your disk. You may also run into problems if the appropriate file such as DUP.SYS is not on that disk.

F. Format Disk

This command will format a disk without having to exit to DOS.

G. Add New Record

You will use this command anytime you want to add a new record to an existing data base file.

H. Modify Old Record

This command allows you to alter the contents of an existing record in a file. For example, you may have to change the address and phone number of someone who has moved.

I. Print Records

This command will send any one or all records in a specified file to a printer. You can also restrict the printout to portions of a record.

J. Display Records

This command will display the contents of any or all records in a data base file.

K. Display Fields

This command will display on the screen the fields defined for the records in any one or all of the data base files on that disk.

L. Sort Files

You will use this option when you want to sort a data base file. You can sort on any field in a record. You can sort a file on multiple keys and you can sort in either ascending or descending order. The resulting sorted records are saved back to disk for later retrieval. NOTE: The sort routine cannot handle a file that is larger than 200 sectors.

SAMPLE DATA BASES

Several sample data base files have been included on your GT Data Manager master diskette to help illustrate various features and typical uses of this program.

Pressing "A" (Files on Disk) from the GT Data Manager menu will reveal the names of these four sample data bases:

FILE DIRECTORY

DATA BASES ON THIS DISK

FILE NAME	DESCRIPTION
VIDEO	VIDEO TAPE LIBRARY
PHONE	ADDRESS BOOK
BOOK	SCI FI BOOK LIBRARY
ATARI1	ATARI UTILITIES

Let's try a few of the functions of the GT Data Manager! Let's begin by printing a record. Pressing "I" for Print Records, will cause you to see the following prompt.

NO DATA BASE SELECTED YET

File Name? _____

Typing "VIDEO" (since the VIDEO TAPE LIBRARY at 96 files represents the largest of the sample data bases) and (RETURN), will generate the following prompt.

PRINT RECORDS
WORKING FILE D1:VIDEO.DB

- A. Print All Records
- S. Print a Single Record
- E. Return to Main Menu

SELECT ITEM

Since we don't need to print all of the records at this time let's press the "S" (no (RETURN) key is necessary at this point, as is the case with many other of the single character responses of this GT Data Manager). The next sub-menu prompts as follows.

WORKING FILE D1:VIDEO.DB

Fields In This File

1. TITLE
2. VINTAGE
3. CATEGORY
4. UNCUT?
5. QUALITY

Enter Field Number To Search On

Pressing "1" for TITLE (no (RETURN) key please!) brings up yet another sub-menu:

WORKING FILE D1:VIDEO DB

SEARCH FOR RECORDS

1. Before Key Field
2. Beginning with Key Field
3. Past Key Field
4. Between Key Fields

Let's press "4" for Between Key Fields You will now be prompted as follows.

WORKING FILE D1:VIDEO.DB

SEARCH FOR RECORDS

1. Before Key Field
2. Beginning with Key Field
3. Past Key Field
4. Between Key Fields

Low Key Field

Press "A" and the search will begin with all files beginning with the letter Capital A.
(A (RETURN) is required since we did not enter information into all of the blanks)
The screen will now prompt you as follows:

WORKING FILE D1:VIDEO DB

SEARCH FOR RECORDS

1. Before Key Field
2. Beginning with Key Field
3. Past Key Field
4. Between Key Fields

Low Key Field

A _____

High Key Field

Let's make this a short list and press "C" (and (RETURN) again since this isn't a single character response and we will not have completed all of the blanks provided) The next screen presented by the GT Data Manager will appear as follows:

WORKING FILE D1:VIDEO.DB

- A. Print Entire Record
- S. Print Partial Record
- E. Return to Main Menu

SELECT ITEM:

Pressing "S" (no (RETURN)) will cause the GT Data Manager to ask us field by field whether we want to print or not print. Saying "Y" (Yes) to TITLE, VINTAGE, and CATEGORY, and "N" (No) to UNCUT and QUALITY, will result in the screen shown below:

PRINT PARTIAL RECORD
WORKING FILE D1:VIDEO.DB

Field Label	Print It
TITLE	Y
VINTAGE	Y
CATEGORY	Y
UNCUT	N
QUALITY	N

Press (Y) to Print Field

Pressing "Y" at this point will finally result in your printer beginning to operate. The 18 records that fall into the A to C category will now be printed. It appears that this file has been alphabetically sorted for the 18 records are in perfect alphabetic order as shown in Figure 1 on the next page. The next fields, however, seem to be randomly organized.

If we wanted to see this same list of video tapes (A's through C's) organized by VINTAGE (Date Issued), we would first sort the file VIDEO by the vintage field, and then repeat the steps listed above.

VIDEO TAPE LIBRARY		PAGE 1
TITLE	VINTAGE	CATEGORY
AIRPLANE	1980	COMEDY
ALIEN	1980	SCIENCE FICTION
ALTERED STATES	1980	SCIENCE FICTION
ANGRY RED PLANET	1959	SCIENCE FICTION
ARLO GUTHRIE/SELGER	1980	MUSIC
BATTLE BEYOND STARS	1980	SCIENCE FICTION
BECKET	1964	DRAMA
BEING THERE	1979	COMEDY
BLACK HOLE	1979	SCIENCE FICTION
BLAZING SADDLES	1974	COMEDY
BUGS BUNNY MOVIE	1981	CARTOON
CAT AND THE CANARY	1939	COMEDY
CAVEMAN	1980	COMEDY
CITIZEN KANE	1941	
CLASH OF THE TITANS	1981	FANTASY
CONAN THE BARBARIAN	1981	FANTASY
COUNT OF MONTE CRIST	1934	DRAMA
COUNT OF MONTE CRIST	1975	

Record Count: 18

Figure 1.

Step 1 in sorting the information in the VIDEO data base would be to press the "L" (Sort File) key from the main menu. Since we were already working with the VIDEO data base file earlier, we are not asked the name of the data base file we wish to work with, instead we are given the screen below:

SORT FILE
WORKING FILE D1:VIDEO.DB

Fields In This File

1. TITLE
2. VINTAGE
3. CATEGORY
4. UNCUT?
5. QUALITY

Enter Field Number to Sort on

Pressing "2" for VINTAGE, adds the following prompt to the screen:

PRESS (A) FOR AN ASCENDING SORT
PRESS (D) FOR A DESCENDING SORT

Pressing (A) for an Ascending Sort, replaces the previous prompt with:

PRESS (Y) TO BEGIN SORT
PRESS (E) TO RETURN TO MAIN MENU

Pressing (Y) causes the GT Data Manager to go to work. The screen now reports

Organizing VIDEO.DB

Next the computer "beeps" announcing that it has completed it's sort and adds the following message to that immediately above:

Records Loaded: 96
Records Deleted: 0

SORT COMPLETED

Saving D1:VIDEO.DB

This means that the re-sorted VIDEO DB file has been saved to disk. Let's test this by repeating the steps we began in the middle of page 11, and print out all of the files beginning with the A's though the C's. The results should look like Figure 2 below.

VIDEO TAPE LIBRARY		PAGE 1
TITLE	VINTAGE	CATEGORY
COUNT OF MONTE CRIST	1934	DRAMA
CAT AND THE CANARY	1939	COMEDY
CITIZEN KANE	1941	DRAMA
ANGRY RED PLANET	1959	SCIENCE FICTION
BECKET	1964	DRAMA
BLAZING SADDLES	1974	COMEDY
COUNT OF MONTE CRIST	1975	DRAMA
BEING THERE	1979	COMEDY
BLACK HOLE	1979	SCIENCE FICTION
AIRPLANE	1980	COMEDY
ALIEN	1980	SCIENCE FICTION
ALTERED STATES	1980	SCIENCE FICTION
ARLO GUTHRIE/SEEGER	1980	MUSIC
BATTLE BEYOND STARS	1980	SCIENCE FICTION
CAVEMAN	1980	COMEDY
BUGS BUNNY MOVIE	1981	CARTOON
CLASH OF THE TITANS	1981	FANTASY
CONAN THE BARBARIAN	1981	FANTASY

Record Count: 18 *Figure 2.*

Notice that the same 18 records have been printed, but that the VINTAGE column proceeds in ascending date order. This might be a way of finding the identity of that old movie classic you can't remember the name of but want to see, but what if you're in the mood for a comedy?

Using the same VIDEO file let's print a list all the COMEDY category files. The following represents a quick sequence of answers to the several screen's worth of prompts you will use to get the print out:

"1"	Print Records
"VIDEO"	File Name
"5"	Print a Single Record
"3"	CATEGORY - Field to Search On
"4"	Search Between Key Fields
"COMEDY"	Low Key Field
"COMEDY"	High Key Field
"S"	Print Partial Record
"Y"	Print Title
"Y"	Print Vintage
"Y"	Print Category
"N"	Do Not Print Uncut?
"N"	Do Not Print Quality
"Y"	Print Field

The resulting printout will appear as shown in Figure 3 below. All 22 video tapes that were comedies are now listed for your review. As an additional bonus, since this entire data base was most recently sorted by the VINTAGE field, all of your comedies appear in ascending chronological order.

TITLE	VINTAGE	CATEGORY
CAT AND THE CANARY	1936	COMEDY
OUR RAB FLINT	1966	COMEDY
IR...LEE FLINT	1967	COMEDY
KELLY & HERBIE	1970	COMEDY
MAGIC WRESTLING	1970	COMEDY
ASH	1970	COMEDY
BLAZING SADDLES	1974	COMEDY
HOLY GRAIL (PYTHON)	1974	COMEDY
YOUNG FRANKENSTEIN	1974	COMEDY
PINK PANTHER STRIPES	1976	COMEDY
SPOCKY & THE BANGLY	1977	COMEDY
EVERY WHICH WAY BUT	1978	COMEDY
BEING THERE	1978	COMEDY
LIFE OF BRIAN	1979	COMEDY
MUPPET MOVIE	1979	COMEDY
AIRPLANE	1980	COMEDY
CAYDOAN	1980	COMEDY
PAULY TOWERS SERIES	" "	COMEDY
IN GOD WE TRUST	" "	COMEDY
JAMMERVOCY	" "	COMEDY
SECRET POLICEMAN 3	" "	COMEDY
UP THE ACADEMY	" "	COMEDY

Record Count 22

Figure 3.

We have included listings below of information derived from each of the other data bases included on your master diskette. a list of all of the PHONE Address Book files where the ZIP code was between 90000 and 99999 (Figure 4); a list of all of the paper back books in the BOOK Sci-Fi Book Library (Figure 5); and a list of all of the ATARI1 Atari Utilities published by VERVAN Software Company (Figure 6) These sample data bases were included so that you can become familiar with how the GT Data Manager operates before beginning to create your own data base files. Losing information on sample data bases is not nearly as frustrating as finding out that your only remaining diskette was damaged by the family cat and you cannot resave the information on which you have spent the last five hours.

We hope these examples will be helpful for you and that your experiences with the GT Data Manager will be rewarding.

NAME L,F	STREET	CITY,STATE	ZIP CODE
JOHNSON,PAUL	1313 STONED DRIVE	CJCAMONGA,CA	91730
MARTIN,JULIE	362436 BROAD WAY	LOS ANGELES,CA	90010
VERVAN Software	1953 W. 11th Street	Upland,CA	91786

Record Count: 3

Figure 4.

AUTHOR L,F	TITLE	SERIES	BINDING
ANTHONY,PIERS	DRAGON ON A PEDESTAL	XANTH	PAPER
BRADLEY,M. ZIMMER	THENDARA HOUSE	DARKOVER	PAPER
EVANS,E.E.	MAN OF MANY MINDS		PAPER
HOWARD,ROBERT E.	ALMURIC		PAPER
LEE,TANITH	ANACKIRE		PAPER
OFFUTT,ANDREW J.	KING DRAGON		PAPER
PIPER,H. BEAM	FIRST CYCLE		PAPER
PIPER,H. BEAM	ULLER UPRISING		PAPER
SIMAX,CLIFFORD D.	SPECIAL DELIVERANCE		PAPER

Record Count: 9

Figure 5.

TITLE	VENDOR	MEDIA	FUNCTION
CASDUP	VERVAN Software	CASSETTE ONLY	COPY TAPES
CASDIS	VERVAN Software	DISK ONLY	CAS-to-DISK TRANSFER
DISDUP	VERVAN Software	DISK ONLY	COPY DISKS
DISASM	VERVAN Software	CASS & DISK	6502 DISASSEMBLER
FULMAP	VERVAN Software	CASS & DISK	BASIC X-REFERENCE
DOWNLD	VERVAN Software	DISK ONLY	DISK-to-CASS
DISKPAK	VERVAN Software	DISK ONLY	OPTIMIZE DISK SPACE
V-COS	VERVAN Software	CASSETTE ONLY	CONTROL BAUD RATE
MICRO-MAP	VERVAN Software	DISK ONLY	CREATE SCROLLING MAP
POWER SCREEN	VERVAN Software	CASS & DISK	DISPLAY LIST EDITOR

Record Count: 10

Figure 6.

HELPFUL HINTS

Sorting

The GT Data Manager performs its sorting (ascending or descending) based on the ASCII value of the characters (letters or numbers) in the field. For this reason it is able to accept fields that contain a mixture of numerical and alphabetic characters. This will explain why sorting a file of alphabetic information will place a lower case "a" (whose ASCII value is 97) following an uppercase "Z" (whose ASCII value is 90). In most cases this will not be noticed, but it can be useful to know, especially if your file contains such characters as "\$" (ASCII 36), "(" (ASCII 40), or (SPACE BAR) (ASCII 32).

Deleting Data Base Information

You should always utilize your GT Data Manager Menu to do any deleting or changing of your data base information and not your DOS XL. Your DOS XL will not understand the intricacies of updating the INDEX file, and other special record keeping functions performed by the GT Data Manager.

Changing Data Base Selections

To save you the trouble of selecting which data base you wish to work with for each menu selection, the GT Data Manager will assume you are continuing to operate within the same data base until you tell it otherwise. The most obvious and easiest way to let it know you wish to change the data base you wish to work with is to ask it for Files on Disk (the "A" choice on your menu) -- if you're wanting to see what other data base files exist on your disk, you don't necessarily want to continue operating on the currently selected data base. Exiting to DOS will achieve the same result but can be more complicated depending on the organization of your master diskette.

Creating New GT Data Manager Diskettes

The GT Data Manager can save its information to any previously formatted or initialized diskette, single or double density. It is somewhat simpler to operate the GT Data Manager if the master and data diskettes are in the same density, however, your GT Data Manager operates correctly with DOS XL in both single, double and mixed density modes. Consult your DOS XL Operator's Guide for more help in switching densities mid-stream, multiple drive systems, etc.

New master GT Data Managers can be easily constructed by merely initializing a new diskette (single or double density) and copying the files DOS.SYS and GTBASE.COM onto it. This would cause the diskette to boot up in DOS XL's command processor mode (with a D1: prompt). You would then type "GTBASE" and then (RETURN) in order to have your GT Data Manager come on.

To autoboot your GT Data Manager, the file "GTBASE.COM" could be renamed to "AUTORUN.SYS" or you could copy the file "STARTUP.EXC" to your new diskette. Either of these alternatives will cause the "EXIT TO DOS" feature of your GT Data Manager menu to re-start the GT Data Manager (in effect, you won't be able to exit to DOS).

If you wish to have your GT Data Manager on a diskette containing a normal DOS XL menu and other files, copying the file MENU.COM from your DOS XL System Master Diskette will accomplish this goal. To start the GT Data Manager you would then utilize the menu's "X" (eXtended) command, and type "GTBASE" and (RETURN).

In any of the above cases, you will have to "CREATE A FILE" from the GT Data Manager menu before beginning to use the new master diskette.

Printing Format

Although the GT Data Manager has been designed to output the information you want to save on paper on a single line, some creativity can be utilized (depending on the capabilities of your printer) to produce multi line output records such as you might want for mailing labels.

In order to take advantage of this particular approach your printer must be capable of accepting right and or left margin setting commands. This approach would involve constructing a mailing label file whose three or four printing lines would add up to the same length (say 25 characters), then telling your printer that it's right and left margins are only 25 characters apart, then having your GT Data Manager print the addresses for a zip code range you have chosen. A file format for doing this could be accomplished as follows:

Mr. John Q. Public _____
270 Main Street _____
New York City, NY 11111

(The dashes represent blank entries in the appropriate fields and would not print.) Additional information fields can be attached to this record, such as phone numbers, birthdates, etc., without affecting the ability to print mailing labels. You will have to experiment somewhat with the mailing labels you will be using to determine what left and right margin settings, form length settings, etc. will work best for you. These printer settings must be sent to the printer prior to turning on the GT Data Manager and having it print the file for you.

It should be noted that printing of mailing labels or comparable functions is beyond the scope of the GT Data Manager design intent, and that if your printer is not capable of accepting programmable margins, etc., you are still receiving the benefit of a very sophisticated information management and retrieval system.

GT ALBERT E. SPREADSHEET

Copyright 1982, 1983

by David H. Hewitt

A Product of

SIM COMPUTER PRODUCTS, INC.

Table of Contents

INTRODUCTION...	74
Overview.....	74
REQUIRED ACCESSORIES.....	75
OPTIONAL ACCESSORIES	75
SETTING UP.....	76
USING THE GT ALBERT E. SPREADSHEET.....	77
Choosing the Worksheet Size.....	77
THE SCREEN WINDOW.....	78
CELL ENTRY (ESC).....	79
Entering a Label	79
Entering a Value.....	80
Entering a formula & functions allowed.	80
MOVING THE SCREEN WINDOW.....	83
Using the Arrow Keys.....	83
Using the GOTO Command.	83
RECALCULATING WORKSHEET FORMULAS.....	84
Replication.....	84
Replicating Labels.....	85
Replicating Values & Formulas.....	85
DISK OPERATIONS.....	87
Disk Directory.....	87
Using the Save Command.....	88
Using the Load Command.....	88
PRINTING (Optional).....	90
CLEARING THE WORKSHEET (NEW).....	91
ENDING A GT ALBERT E SPREADSHEET SESSION (QUIT).....	92
SAMPLE WORKSHEETS.....	93

INTRODUCTION

Overview

The GT Albert E. Spreadsheet is an easy to use "Electronic Spreadsheet" which you can use to create mathematical models on your Atari personal computer. You don't need programming experience to use the GT Albert E Spreadsheet, which is ideal for designing home budgets, balance sheets, math homework, statistical models and various other "What If?" models. A convenient menu of commands is always present at the top of the screen and the program design is such that models are easy to set up.

To set up a worksheet, you first determine its size by selecting the number of rows by the number of columns. Next a model may be developed by entering labels, numbers and formulas into the cells of the worksheet. The math functions which are available to you include: addition, subtraction, multiplication, division, exponentiation, and the summing of a group (row, column, or block) of cells. Because most spreadsheet models will be larger than the display screen, you view the worksheet through a "window". This viewing "window" may be moved around the worksheet using the arrow keys and the GOTO command.

An easy to follow example is used to help introduce you to some of the intricacies of the GT Albert E. Spreadsheet. The program is extremely user friendly and will recover from data entry errors by returning to the command screen. You will find that the GT Albert E Spreadsheet is geared more towards personal and business applications than it is towards scientific applications. You will soon find that the GT Albert E Spreadsheet is saving you not only paper, but valuable time.

REQUIRED ACCESSORIES

Minimum 48K RAM Memory

Atari BASIC Language Cartridge (BASIC is built into 800XL, 135XE and 65XE computers -- no separate cartridge is required for these models.)

Indus Systems GT Disk Drive for Atari, or equivalent

OPTIONAL ACCESSORIES

Atari 1027, 1025 or compatible direct connect serial printer

Atari 850 or compatible parallel interface module and compatible parallel printer

SETTING UP

1. Insert the Atari BASIC Language Cartridge in the left cartridge slot of your 800 or 400 computer, or in the only cartridge slot of your 1200 computer. The 600XL and 800XL, or 130XE and 65XE models have the Atari BASIC Language already built in to the computer.
2. Turn on your disk drive.
3. When the BUSY light goes out, open the disk drive door and insert the GT Albert E. Spreadsheet diskette following the instructions included with your disk drive. Insert the diskette in drive number one if you have more than one disk drive.
4. If you are planning to use your printer, turn it and the Atari 850 interface module (equivalent on if required for your printer to function).
5. Turn on your computer and your TV set or monitor. The GT Albert E. Spreadsheet will now load, run, and then display the initial "Title Screen".

USING THE GT ALBERT E. SPREADSHEET

Choosing the Worksheet Size

After the GT Albert E. Spreadsheet has been loaded into the computer, you will see the initial "Title Screen". The GT Albert E. Spreadsheet program has checked to see how much free memory is available (free RAM) in your Atari and then determined the maximum number of cells you will be allowed in your worksheet. The number of cells in a worksheet is equal to the number of COLUMNS multiplied by the number of ROWS. Consequently, you must do some math prior to answering how many COLUMNS by ROWS you would like your worksheet to be. The "Title Screen" should look something like this:

GT Albert E. Spreadsheet

Rev. 2.2

SIM COMPUTER PRODUCTS, INC.

Copyright 1982, 1983 David H. Hewitt

YOU MAY HAVE A MAXIMUM OF 112 CELLS
(TOTAL CELLS = ROWS * COLUMNS)

ENTER # OF COLUMNS (MIN. 4/MAX. 26) : ?

First type in the number of COLUMNS you would like on your worksheet, keeping in mind that you must have at least 4 and no more than 26. When you hit <RETURN> the GT Albert E. Spreadsheet will prompt you with:

ENTER # OF ROWS (MIN. 18/MAX. 99) : ?

Respond with the number of ROWS desired for your worksheet, keeping in mind the maximum number of cells allowed. If you should make any errors, the GT Albert E. Spreadsheet will simply bounce back to the initial screen and give you another chance. After you have entered the size of your worksheet and pressed <RETURN> the message "ONE MOMENT PLEASE" will appear for a few seconds and then the screen window and command menu will appear.

THE SCREEN WINDOW

Now that you have entered the size of your worksheet, your screen should look something like this:

```
COMMANDS                                C8 * R19
ESC (CELL ENTRY)                        G (GOTO)
C (RECALC)  R (REPLICATE)  P (PRINT)
S (SAVE)  L (LOAD)  N (NEW)  Q (QUIT)
  --- A ---!--- B ---!--- C ---!--- D ---
1-
2-
3-
4-
5-
```

At the top of your screen is the command menu. When choosing a command you simply hit the single letter corresponding to your command. The letter should appear in inverse video on the display screen.

In order to use the arrow keys to move the display window, you must hold down the <CTRL> key while pressing the arrow key at the same time. If you look at the upper right-hand corner of your screen you will see that the size of your worksheet is displayed as "Cx * Ry", where "x" is the number of COLUMNS you have chosen and "y" is the number of ROWS you have chosen.

Below the Command Menu is your "Screen Window", which you will use to view the information which has been entered into your worksheet. The four COLUMNS which are being displayed are labeled across the top as letters (A - D when first initialized). The 18 ROWS which are being displayed are labeled down the left side as numbers (1 - 18 when first initialized). Each individual cell in your worksheet is addressed by its COLUMN letter (A - Z) and its ROW number (1 - 99). For example cell A1, cell D3, etc. The section of your worksheet which is being displayed on the screen window at any time may be changed by using the arrow keys or the GOTO command. These commands will be discussed in greater detail in the next section.

CELL ENTRY

When entering information into a cell of your GT Albert E. Spreadsheet worksheet, you should follow this simple four step process:

STEP 1: From the command menu press the <ESC> key on your Atari keyboard. The GT Albert E. Spreadsheet will respond with the following prompt:

ENTER
CELL: ?--

STEP 2: Choose the cell into which you would like to enter your data and type the COLUMN letter followed by the ROW number; then hit <RETURN>. For example, A1 <RETURN> or D3 <RETURN>. The letters must be in capitals, but your chosen cell does not necessarily need to be visible on the screen window. Your screen should now look something like this:

ENTER PRIOR ENTRY:
CELL:?D3-
ENTRY:-----

STEP 3: Now examine the "PRIOR ENTRY" if there is one. If you would like to leave the cell as it was, simply press <RETURN> without entering any data and ignore STEP 4.

STEP 4: Finally, type in your cell entry. There are three types of entries which we will discuss on the next few pages (LABELS, VALUES and FORMULAS) After you press <RETURN>, the result of your entry will appear in the appropriate cell (if it is presently on the display window).

If you make an error feel free to use the backspace key. The GT Albert E. Spreadsheet will not allow you to enter characters in inverse video nor most graphic characters. Try it and see how the program responds. Most other types of entry errors will cause the buzzer to sound, an error message to appear, and then return you to the Command Menu.

Entering a Label

When you would like to enter a LABEL into a cell, first follow the four step process described above, at which point your screen should look like this:

ENTER PRIOR ENTRY:
CELL:?D3- ENTRY:-----

After STEP 3 you should be ready to enter your LABEL. You must start all your LABEL entries by typing a quotation mark. Following the " you may enter your LABEL as

you would like it to appear on the screen. Although you may type in up to 15 characters per entry, only eight will display to the screen or print to a printer. Please note that the program will reject characters in inverse video and most graphic characters. This is an example of what a LABEL entry might look like before the final <RETURN> is pressed:

```
ENTER PRIOR ENTRY:
CELL:?D3- ENTRY:"Expense:-----"
```

Entering a Value

Entering numeric values into your worksheet is really quite simple. After following the four step process for CELL ENTRY, simply type in the number (no quotation or commas please!) and press <RETURN>. You may enter both positive and negative numbers, as well as decimal points. This is an example of what a VALUE entry might look like prior to pressing <RETURN>:

```
ENTER PRIOR ENTRY:
CELL:?D3- ENTRY:714.89-----
```

The GT Albert E. Spreadsheet will not accept numbers with more than 9 digits, nor will it accept numbers expressed in any type of exponential format. If you wish to enter very large or very small numbers, please see the section on FORMULAS for an appropriate method.

Entering a FORMULA & Functions Allowed

The real power of an electronic spreadsheet such as the GT Albert E. Spreadsheet comes from the ability to enter FORMULAS into a cell and thus use the values in one or more other cells to calculate its contents. Because the rules for FORMULAS are very stringent, we suggest that you study this section very carefully.

The functions allowed in a FORMULA are:

- + Addition
- Subtraction
- * Multiplication
- / Division
- ^ Exponentiation

The five functions above will work with VALUES (eg. 13, 14.98, etc.), with cell variables (eg. A1, D3, etc.) or with a combination of the two.

In addition to these five functions, the GT Albert E Spreadsheet has one more very powerful function:

: Sum

The SUM function is used to total all the VALUES in a ROW, COLUMN, or BLOCK of cells. When you enter the SUM function into a cell it will total all the VALUES stored between the two cells specified. For example, the formula B1:B6 as shown below will add together the VALUES in cells B1, B2, B3, B4, B5 and B6.

ENTER PRIOR ENTRY:

CELL: B7- ENTRY: B1:B6-----

You may also total the VALUES in a block of cells by entering a FORMULA such as B1:D3. This will total the cells, B1, B2, B3, C1, C2, C3, D1, D2, and D3.

CAUTION: If the SUM (:) function is to be used in a FORMULA with other functions, it must be the first function used. Also SUM will not give proper results if used with numeric VALUES instead of cell references.

When combining the above functions into a single FORMULA to be entered into a cell, there are three characteristics of the GT Albert E. Spreadsheet with which you should be familiar:

1. All FORMULAS will calculate from left to right, disregarding the rules of mathematical hierarchy. For example:

$5-4*20$ will result in 20

$-4*20+5$ will result in -75

2. Parentheses are not allowed.

3. Negative numbers should not be used except as the first entry in a FORMULA. For example:

Do not use: $5*-3$ or $5*-B2$

Do use: $-3*5$ or $-B2*5$

If this rule is not followed, the GT Albert E. Spreadsheet will not always catch the error and incorrect results may be displayed on your screen.

As mentioned in the previous section, very large or very small numeric VALUES (such as 1234567890, $3.4E+23$, or 0.0000000015) cannot be entered directly, because the GT Albert E. Spreadsheet will not accept numbers which are more than 9 digits in length or in exponential format. But, if you plan your FORMULAS carefully, you should be able to force the desired results into your worksheet. The following are a number of examples which show how this can be accomplished:

DESIRED RESULT	ENTER CELL	ENTER FORMULA	SCREEN RESULT
1234000000	A1	$10^9 * 1.234$	1.234E+10
0.0000000015	A1	$1/10000$	1E-4
	A2	$1.5 * A1 / 100000$	1.5E-9
3.4E+23	A1	$10^{23} * 3.4$	3.4E+23

CAUTION: If a VALUE in your Atari computer exceeds 9.99999999E97 or are less than 9.99999999E-97, a Floating Point Error will result. If this should occur, the message "INPUT ERROR - REENTER" will display, the buzzer will sound, and the program will return to the Command Menu.

DIVISION BY ZERO: Whenever a FORMULA attempts to divide by ZERO, the VALUE 9 E97 will display in order to avoid causing an error in your spreadsheet.

MOVING THE SCREEN WINDOW

Using the Arrow Keys

The Atari computer provides arrow keys to help you move the screen "viewing window" around the entire worksheet. When using the arrow keys you must hold down the <CTRL> key also. When you use these with the GT Albert E Spreadsheet, instead of seeing a cursor move up and down or side to side as you move the arrows, you will see the whole screen move in the direction of the arrow key selected.

Using the GOTO Command

The GOTO command will allow you to jump your screen window instantly to any location of the worksheet for viewing. First press the "G" key to start the GOTO Command. The GT Albert E. Spreadsheet will prompt you with this.

GOTO SPECIFY UPPER LEFT CELL
CELL—

Now type in the cell which you would like to see displayed in the upper left of your screen window. When you press <RETURN> the viewing window will display the new section of your worksheet.

RECALCULATING WORKSHEET FORMULAS

One of the more powerful features of the GT Albert E. Spreadsheet is the ability to RECALCULATE the FORMULAS of your worksheet, thus allowing you to play "What If?". If you first build a master template for a model, you can then use this "shell" to play "What If?". If you have entered new VALUES into cells which are addressed by the formulas in other cells, new results will be created when the RECALCULATE command is executed.

To execute the RECALCULATE Command, simply press the "C" key. This message should appear while you wait:

PLEASE WAIT - RECALCULATING

Because the GT Albert E. Spreadsheet does not automatically RECALCULATE after each cell entry, you will find this command to be very necessary when it is time to view or print your final results. The amount of time which the RECALCULATE Command takes to execute depends on the size of your worksheet. The time in which a small worksheet will RECALCULATE is less than 15 seconds, while a large worksheet may take a couple of minutes.

CAUTION: If any of the FORMULAS which are RECALCULATED should result in a numeric VALUE which exceeds 9.99999999E97 or is less than 9.99999999E-97 a Floating Point Error will result. If this should occur, the message "INPUT ERROR - REENTER" will display, the buzzer will sound, and the program will return to the Command Menu.

SOLUTION: A Floating Point Error which occurs during the execution of a RECALCULATE Command can be tedious to recover from because you must determine by which FORMULA and in which cell the Error was caused. Once you have found the guilty cell or cells (by trial and error or intuition) they must either be changed or blanked. Cells can be blanked by entering an empty LABEL (a single quotation mark).

REPLICATION

Another powerful feature of your GT Albert E. Spreadsheet is the ability to REPLICATE the contents of one cell into another cell or block of cells. You will quickly discover the value of this command in developing the initial template or "shell" of worksheet models.

Replicating LABELS

The first step to perform when you want to REPLICATE a cell containing a LABEL is to press the "R" key. The GT Albert E. Spreadsheet will respond with:

REPLICATE

SOURCE
CELL:?—

Now type in the cell containing the LABEL which you wish to duplicate and press <RETURN>. The GT Albert E. Spreadsheet will now respond with:

REPLICATE

SOURCE FROM
CELL:?A1- CELL:?—

At this point you should enter the first cell of the group of cells into which you wish to duplicate the "source" cell. This should also be the most upper left of this group of "destination" cells.

After pressing <RETURN> your display should look like this:

REPLICATE

SOURCE FROM TO
CELL:?A1- CELL:?A2- CELL:?—

Finally, enter the cell which is farthest to the lower right of the group of "destination" cells. When you press <RETURN>, this message will appear on the screen while the REPLICATE command is executing:

REPLICATE
PLEASE WAIT - REPLICATING
FORMULAS WILL NOT RECALCULATE

After the execution of the command line has been completed, the viewing window will redisplay and you will see that the group of "destination" cells contain the same LABEL as the "source" cell. You will soon find that REPLICATE is especially helpful when underlining ("_____") a ROW of LABELS.

Replicating VALUES and FORMULAS

When you would like to REPLICATE a cell containing a VALUE (such as 45.9 or -1024), or a cell containing a FORMULA (such as A1+7.5-C3) you should follow the

same procedure that is described above for LABELS. But there is one major difference! After the execution of the command has been completed and the screen has redisplayed, the newly duplicated "destination" cells will NOT display the same VALUE as the "source" cell. In fact, they will display either as zeros or as the previous VALUES from these cells.

The reason that this result occurs is that the GT Albert E. Spreadsheet does not automatically CALCULATE the entries which are REPLICATED to the "destination" cells. This of course is a very simple problem to remedy. Simply press the "C" key to invoke the RECALCULATE command and all your newly duplicated VALUES or FORMULAS will be calculated and displayed in the viewing window. You may find that it is a good practice to follow most of your REPLICATE commands immediately with a RECALCULATE ("C") command so that the proper VALUES are displayed.

There is also another extremely important and very valuable feature of the REPLICATE command. If a FORMULA which addresses other cells (eg. A1+A2-5) is REPLICATED from a "source" cell into a group of "destination" cells, the FORMULA will be altered in a relative manner. For example, let's assume that the FORMULA B1+A3-44 is contained in the cell A1. If you REPLICATE cell A1 (source) into cells B2 to D4 (destination), the "destination" FORMULAS will be altered in the following manner:

ROW	COLUMN			
	(A)	(B)	(C)	(D)
(1)	B1+A3-44			
(2)		C2+B4-44	D2+C4-44	E2+D4-44
(3)		C3+B5-44	D3+C5-44	E3+D5-44
(4)		C4+B6-44	D4+C6-44	E4+D6-44

The importance of this feature will become apparent to you when you begin utilizing the REPLICATE command to build FORMULAS which total ROWS or COLUMNS of cells in a worksheet. Please note that FORMULAS will ALWAYS replicate in a relative manner; so if you need exact duplicates of FORMULAS, you must enter them individually.

DISK OPERATIONS

After building a GT Albert E. Spreadsheet model, you will usually want to save the template so that you can come back at a future point in time and work with it. By utilizing the SAVE and LOAD commands you can SAVE your worksheets to disk and later LOAD them back in, change entries, RECALCULATE, and display new results. In effect, you can use the same "master" worksheet over and over again to develop different "pages" (separate disk files) of the same model. For instance, each separate page or file might represent a new month of your personal budget.

The Disk Directory

Each time you decide to use one of the disk commands ("S" or "L"), the GT Albert E. Spreadsheet will respond immediately with:

WOULD YOU LIKE A DISK DIRECTORY? (Y/N)

At this point, if you press "N" or any other key except "Y", the program will continue directly into the SAVE or LOAD procedure. If you feel that information provided by a Disk Directory is necessary, such as file names or the amount of free space left on the disk, then press the "Y" key. The BUSY light on your disk drive (Drive 1 only) will light up and a directory of the files on the disk will appear on your screen as well as the number of Free Sectors. If you are not already familiar with this information, then refer to your DOS XL Operator's Guide. After you ask for a Disk Directory, your screen will look something like this:

DISK DIRECTORY				
DOS	SYS	046	TEMP	001
BUDGET		087	*BUDGET	086
*FILE1	BC	037	FILE2	023
427 FREE SECTORS				
CONTINUE SAVE/LOAD				
REPEAT DIRECTORY				
RETURN TO COMMAND LEVEL				

At this point you have three choices. First, you may continue with your previously selected Disk Operation by pressing "S" or "L". Please note that no matter which of the two you press (the "S" or the "L"), the GT Albert E. Spreadsheet will continue with the command which you previously selected from the main Command Menu. Your second choice is to repeat the Disk Directory by pressing the "D" key. This is especially useful when you would like to check the Directory of a number of floppy disks. The third choice is to return directly to the main Command Menu and viewing the screen by pressing the "C" key.

Using the SAVE Command

The first step to saving any files (worksheets), is to be sure that you have a blank **FORMATTED** disk available. Because you must use your DOS XL to format disks, this must be done **BEFORE** the GT Albert E. Spreadsheet is loaded into your computer

The next step in saving a GT Albert E. Spreadsheet worksheet is to press the "S" key. When you are asked if you would like to see a Disk Directory, proceed as described above. When you are finished with the Directory option the following prompt will appear on your screen:

FORMAT: D:filename.ext

ENTER FILE TO SAVE: _____

Respond with the name of the file you wish to save preceded by Dx: where "x" is the Drive number to which you wish to have the file saved. Filenames must not exceed eight characters in length with an optional three character extender. Please refer to your DOS XL Operator's Guide for full details. When saving worksheets to disk be sure that you are not writing over a previously saved file of the same name by accident. You should also be sure that there will be enough free space on the disk to hold your worksheet.

If you make an error, such as forgetting the "D:" or overloading the disk, the GT Albert E. Spreadsheet will respond with the message "INPUT ERROR - REENTER", sound the buzzer, and return you to the Command Menu. If this occurs, simply try again.

Using the LOAD Command

The first step to loading a worksheet from disk into the GT Albert E. Spreadsheet is to press the "L" key. Next proceed with the Disk Directory option as described above until the following prompt is displayed:

FORMAT: D:filename.ext

ENTER FILE TO LOAD: _____

Now enter the name of the GT Albert E. Spreadsheet file to **LOAD**, following the same syntax rules explained above for saving files. After you press <RETURN>, the specified file will be loaded into your worksheet, erasing any information entered previously. But it may not **LOAD** in, under the conditions which are described below.

Actually the first step to loading in a file is not always to press the "L" key as mentioned above! In order for the GT Albert E. Spreadsheet to accept the file from disk, the worksheet you are currently working in must be the same size as the one to be loaded from disk. In other words, you must have initialized the GT Albert E. Spreadsheet (see the section on Choosing Worksheet Size) with the same number of

COLUMNS by the same number of ROWS as the worksheet on disk. If you are not sure what size the worksheet file on disk is, then attempt to LOAD it in anyway. The GT Albert E. Spreadsheet will then inform you of its size like this:

WRONG SIZE DATA SHEET
THIS WORKSHEET IS 5 COLUMNS BY 30 ROWS
ATTEMPTED TO LOAD A 10 BY 37 WORKSHEET
HIT ANY KEY TO CONTINUE

Now that you know the dimensions of the worksheet you would like to LOAD in, hit any key to return to the Command Menu, then press "Q" to QUIT and "Y" to confirm. This will return you to the "Title Screen" and you can now initialize the GT Albert E. Spreadsheet to the proper size for loading the desired file. You may then repeat the loading steps to bring the worksheet in from disk.

PRINTING (Optional)

If you own a printer for your Atari computer, you will be interested in learning how to print out your worksheets for permanent records. The GT Albert E. Spreadsheet will print on most 40 column or 80 column printers. It will also print to some 132 column printers, although the GT Albert E. Spreadsheet will limit you to printing eight COLUMNS across. (Please note that the column printing capability of the printer is not the same meaning as the "COLUMNS" referred to in the rest of this document.)

The first step to printing a worksheet is of course to turn on the printer and interface if applicable. Next press the "P" key to start the PRINT command. The GT Albert E. Spreadsheet will respond with:

SPECIFY RANGE TO PRINT:

FROM

CELL:?—

UPPER LEFT LOWER RIGHT

You must now choose the section of your worksheet which you would like to print. The only limitation is that a maximum of eight COLUMNS can be printed at one time (four COLUMNS on a 40 column printer). Start by entering the upper left cell to be printed and press <RETURN>. The display should now look like this:

SPECIFY RANGE TO PRINT:

FROM

TO

CELL:?A1-

CELL:?—

UPPER LEFT LOWER RIGHT

Now specify the lower right cell to be printed and press <RETURN>. If all is well you will soon have a "hard copy" of your GT Albert E. Spreadsheet worksheet.

If your GT Albert E. Spreadsheet has any problems communicating with your printer, the message "ERROR - CHECK PRINTER" will appear, the buzzer will sound, and the program will return to the Command Menu. If this occurs, check all your equipment for power, proper cable, etc. and then try again.

CLEARING THE WORKSHEET (NEW)

If at any time during a GT Albert E. Spreadsheet session you would like to clear the worksheet and erase all entries, you can use the NEW command. Simply press the "N" key. Because this is a serious action, the GT Albert E. Spreadsheet will then ask you to confirm your decision like this:

ERASE WORKSHEET!
ARE YOU SURE? (Y/N)

If you are sure then press the "Y" key and the GT Albert E. Spreadsheet will clear the worksheet and prepare a NEW page to work with. This NEW page will have the same dimensions as the previous page (worksheet). If you change your mind, simply press the "N" or any other key and you will be returned to the Command Screen with your old worksheet still intact.

ENDING A GT ALBERT E. SPREADSHEET SESSION (QUIT)

If you wish to end the session with one worksheet and work on a different model you may use the QUIT command. This command will erase all current entries and return you to the "Title Screen" where you may choose a different size worksheet. To use the QUIT command simply press the "Q" key. Because this also is a serious action, the GT Albert E. Spreadsheet will then ask you to confirm your decision like this.

**QUIT GT ALBERT E. SPREADSHEET
ARE YOU SURE? (Y/N)**

If you are sure then press the "Y" key and the GT Albert E. Spreadsheet will clear the worksheet and return you to the "Title Screen". If you change your mind simply press the "N" or any other key and you will be returned to the Command Screen with your old worksheet still intact.

When you are completely finished with a GT Albert E. Spreadsheet session and have saved all worksheets you wish to maintain, you may end the session by removing the diskette and turning off the system.

HAVE FUN!

SAMPLE WORKSHEETS

A sample family budget spreadsheet is included on your GT Albert E. Spreadsheet diskette. This worksheet may be used to track the projected and actual amounts of your income and expenses. The filename of this sample spreadsheet is "PERSBUD.DAT". You may now load and alter this worksheet to fit your needs, enter your own VALUES, RECALCULATE, and SAVE your new budget on disk. The following is what a printout of "PERSBUD.DAT" would look like:

	JAN 83 PROJECT	JAN 83 ACTUAL	JAN 83 DIFFER	JAN 83 %DIFF
INCOME				
Salary	1500	1500	0	0
Commiss	400	176	-224	-0.56
TOT INC:	<u>1900</u>	<u>1676</u>	<u>-224</u>	<u>-0.11789</u>
EXPENSES				
Rent	550	550	0	0
Food	200	223.58	23.58	0.1179
Auto	150	165	15	0.1
Medical	50	35	-15	-0.3
Loan1	300	300	0	0
Electrc	60	78	18	0.3
Gas	45	47	2	0.044444
TOT EXP:	<u>1355</u>	<u>1398.58</u>	<u>43.58</u>	<u>0.032162</u>
DISP INC	<u>545</u>	<u>277.42</u>	<u>-267.58</u>	<u>-0.49097</u>

There is a second sample spreadsheet on your GT Albert E. Spreadsheet diskette, called "PROFLOSS". This is a profit and loss statement for a small business. By changing the VALUE in the January Sales category and then RECALCULATING, you can see how the monthly projections will change. The following is a representation of the printout of "PROFLOSS":

	JANUARY *****	FEBRUARY *****	MARCH *****	YTD TOTL *****
REVENUE				
Sales	10000	15000	22500	47500
C.G.S.	6000	9000	13500	28500
Margin	<u>4000</u>	<u>6000</u>	<u>9000</u>	<u>19000</u>
EXPENSES				
Payroll	3000	3300	3630	9930
Advert	1000	1100	1200	3300
Supply	500	600	720	1820
Deprec	150	150	150	450
Misc.	1000	1200	1440	3640
Tot Exp	<u>5650</u>	<u>6350</u>	<u>7140</u>	<u>19140</u>
PROFIT	-1650	-350	1860	-140

DOS XL™
Operator's Guide and Reference Manual
for Drivers of the Indus GT™
Atari™ Compatible Diskette Drive

Adaptation by Keith S. Burgoyne

This manual was last revised on February 1, 1985

COPYRIGHT NOTICE

This manual is Copyright © 1986 by Future Systems of Chatsworth, California. The programs comprising DOS XL as distributed with the Indus GT diskette drives are primarily Copyright © 1983 by Optimized Systems Software Incorporated of San Jose, California. Some Indus GT DOS XL diskettes may contain programs or enhancements which are Copyright © 1986 by Future Systems of Chatsworth, California.

Reproduction or translation of any part of either this manual or the programs comprising DOS XL beyond that permitted by sections 107 and 108 of the United States Copyright Act without the permission, in writing, of the copyright owner(s) is unlawful.

The contents of this manual were derived under permission from A Reference Guide for DOS XL Version 2.30, Copyright © 1983 by Optimized Systems Software Incorporated of San Jose, California.

TRADEMARK NOTICES

The following trademarked names are used in various places within this manual, and credit is hereby given:

INDUS GT is a trademark of Future Systems of Chatsworth, California.

DOS XL, OS/A+, BASIC XL, ACTION!, BASIC A+, MAC/65, and C/65 are trademarks of Optimized Systems Software Incorporated of San Jose, California.

Atari, Atari Home Computers, Atari Writer, Atari 810 Disk Drive, Atari 1050 Disk Drive, and Atari 850 Interface Module are trademarks of Atari Corporation of Sunnyvale, CA.

PREFACE

DOS XL and Synchronmesh is the result of the efforts of several persons, and we believe that proper credit should be given. The original version of the DOS XL Console Processor and the original version ("version 2") of the DOS XL File Manager System (which is, of course, identical with Atari's DOS 2.0S) were written by Paul Laughton. Later version of all other portions of DOS XL are primarily the work of Mark Rose, of Optimized Systems Software, with the collaboration of Bill Wilkinson and Mike Peters.

The Synchronmesh support enhancements to DOS XL were primarily labored over by Greg Farris with assistance from Mark Rose, Bill Wilkinson, and Mike Peters, all of Optimized Systems Software under contract from Indus Systems.

The GTSYNC.COM Synchronmesh utility, which includes the Synchronmesh extensions to the Indus GT drive's control ROMs, as well as the Indus GT's original control ROM code were developed by Keith Burgoyne of Indus Systems.

DOS XL SERVICE AND SUPPORT POLICIES

Future Systems has worked to bring you products which will give you years of reliable service and enjoyment. As with any software product, though, errors or omissions can and do occur. You may rest assured that, if you have a problem, every reasonable effort shall be made to help you.

In order to receive full support, you will need to direct any questions and/or problem reports about DOS XL strictly to Future Systems. In many cases, Future Systems has made special enhancements to the copies of DOS XL distributed with the Indus GT diskette drives in order to increase the operating system's already extensive capabilities. Because of these enhancements, Indus GT users should always contact Future Systems for assistance and never Optimized Systems Software.

Since DOS XL is only distributed by Future Systems to Indus GT users as a sub-licensed product, you must sign and return the Future System's Sub-License Agreement included with your DOS XL before we can respond to your inquiries.

If you have a quick question or simply a procedural problem, you may call the Consumer Support staff at Future Systems (818) 407-1647. Full consumer assistance is provided between the hours of 9:00 AM to 4:00 PM Pacific Time.

Although Future Systems attempts to provide the best consumer support possible, please understand that many consumer problems can tend to be of a nature which the support staff may have never before encountered and may require a little research by our staff. Because of this, the person providing you with assistance may not be able to answer your questions in a 5-minute telephone call. So, if your problem is such that it is not easy to describe, you are invited to mail us a letter and include a diskette or computer printout detailing or demonstrating your difficulty. Always remember to include your return address, telephone number(s), the hours (for your time zone) you can be reached at the various telephone number(s) provided, and also the name and city of the Indus GT dealer from whom you purchased your Indus GT(s). In many cases, our support staff may wish to contact your dealer should they determine that local assistance would be of the best benefit.

ABOUT DOS XL AND THIS EDITION OF THE DOS XL MANUAL

DOS XL is the latest in a series of Disk Operating Systems produced by Optimized Systems Software, Inc.

DOS XL version 2.3 is a direct successor to and completely file compatible with:

Atari DOS 2.0S
OS/A+ Version 2.0
OS/A+ Version 2.1
DOS XL Version 2.2

This edition of the DOS XL manual has been issued as what we hope is both a user-friendly "manual" to the more commonly used features of the operating system as well as a true "reference manual" for the entire DOS XL Disk Operating System.

What parts of the DOS XL reference manual you read first should depend on your experience level and your purposes:

If you will never program in any language, you may not need to read any more than the "Introduction" through "The DOS XL Menu".

If you are an Atari BASIC programmer, you should definitely read "Using DOS XL with the Atari BASIC Cartridge" as well as Atari's BASIC reference manual before you start using DOS XL with Atari BASIC.

If you are an assembly language programmer, we would suggest reading this entire manual, paying special attention to "Using Assembly Language with DOS XL".

Finally, if you would like to automate DOS XL, allowing it to do several tasks for you while your computer is unattended, you need to read "Controlling DOS XL Without Being There".

Of course, regardless of your experience level or purposes, if you get tired of the restrictions of the DOS XL menu, you should read "Using the DOS XL Command Processor".

Whatever you choose to do, we hope that this manual and reference manual will help you. Written suggestions about these manuals are always helpful and carry much more impact than verbal comments. Your letters are always welcome.

Section 0: YOUR INDUS GT AND DOS XL

0.1 How Do You Get Started Using Your Indus GT and DOS XL?

It seems that new Indus GT users, whether or not the Indus GT is their first Atari diskette drive, always want to do one thing right away: see their new Indus GT operate in double density. Although we at Indus Systems would really recommend that every new user start with the DOS XL basics in order to get familiar with DOS XL and their Indus GT, we hereby submit to the majority's desires and provide, right here in the front of this manual, some quick instructions on how to get your Indus GT to operate in double density.

The first step in using double density is to create a double density version of your single density DOS XL System Master Diskette which came with your Indus GT. Which sections of this manual you need to read in order to do this depends upon your own experience level.

If you have never used any diskette drive or DOS before, you should read all of the "Introduction" section. This section will provide you with some background information which the rest of this manual will expect you to know. In addition, you should read the "Getting Started With DOS XL" section to find out how to get DOS XL started on your Atari.

If you are already familiar with using a non-Atari DOS but not a DOS on the Atari, you should read "What About Double Density?". Even if you are already experienced with single and double density on non- Atari DOS's, be sure to read the "What About Double Density?" section. Atari DOS's, in general, do not work with double density like most computers' DOS's.

All users should read "How Do You Keep Your DOS XL Diskette Safe?". Although our consumer support staff is always very nice and polite to any user who calls, you might find yourself a little embarrassed calling us because you've accidentally ruined your DOS XL System Master Diskette.

All users should also read "How Do You Make a Double Density DOS XL Diskette?". This section explains how to create a diskette which is in double density; but don't stop there. Once you have a double density DOS XL system master diskette, you can simply boot this diskette and your drive will be operating in double density.

Once you've followed all the directions in the sections of this manual indicated above, you can feel very confident that your Indus GT is operating in its normal finely-tuned state.

PROBLEM PREVENTOR: Never use the front panel buttons on your Indus GT to select the drive's emulation mode (as described in the Indus GT drive manual) when

using DOS XL. There is absolutely no case in which this would be proper. DOS XL provides its own commands for changing your Indus GT's emulation mode (or operating density), and these commands also notify DOS itself of a density change which the Indus GT's front panel switches do not. Also, care must be used when changing diskettes in your Indus GT if the change involves two diskettes of different densities. Such a change is permitted, but a density change command must be given to DOS XL to notify it of the change.

PROBLEM PREVENTOR: Note that most of the instructions on how to convert to using double density with your Indus GT fall under the major section "Some Advanced Capabilities of DOS XL". If you are a new user, please take note of this. Once you've had fun running your Indus GT in double density, please go back to the more simpler sections of this manual to learn the basics of operating DOS XL before leaping too far ahead. Please learn to walk before you try to run.

0.2 What About the Atari 1050's Double Density?

Your Indus GT does support the Atari 1050 double density diskette format, but DOS XL does not. What does this mean? It means that if you have a copy of Atari's DOS 3.0 or DOS 2.5, you can use it with your Indus GT in both single and 1050 double density modes. DOS XL does not support the 1050's double density format because this format provides only about 1.4 times (40% more) the storage capability of standard single density. DOS XL's double density format provides a full 2.0 times (100% more) the storage over single density. Whenever this manual refers to double density, it is referring to the 2.0 times double density and never the 1.4 times double density.

TABLE OF CONTENTS

0 - YOUR INDUS GT AND DOS XL.....	99
0.1 - How Do You Get Started Using Your Indus GT and DOS XL?.....	99
0.2 - What About The Atari 1050's Double Density?.....	100
1 - INTRODUCTION.....	105
1.1 - What is Required to Use DOS XL?.....	105
1.2 - Why Do You Need DOS XL?.....	105
1.3 - So What is a (Diskette) "File" Anyway?.....	106
1.4 - How Do You Use Your Other Non-Disk Devices?.....	109
1.5 - How Does DOS XL Accept Commands?.....	110
2 - GETTING STARTED WITH DOS XL.....	111
2.1 - How Do You Get DOS XL Running?.....	111
2.2 - What About Double Density?.....	112
2.3 - How Do You Use The DOS XL Menu?.....	113
2.4 - Is Your DOS XL Diskette Okay?.....	114
2.5 - How Do You Keep Your DOS XL Diskette Safe?.....	116
2.6 - How Do You Use Cartridge BASIC or Other Cartridges?.....	118
3 - THE DOS XL MENU.....	120
3.1 - What is the DOS XL Menu?.....	120
3.2 - How Do You "Copy Files" From the Menu?.....	121
3.3 - How Do You "Duplicate (a) Disk" From the Menu?.....	124
3.4 - How Do You "Erase Files" From the Menu?.....	127
3.5 - How Do You List The "Files On (a) Disk" From the Menu.....	128
3.6 - How Do You "Go to (an) Address" From the Menu?.....	130
3.7 - How Do You "Initialize (a) Disk" From the Menu?.....	131
3.8 - How Do You "Load (a) Binary" File From the Menu?.....	133
3.9 - How Do You "Protect Files" From the Menu?.....	134
3.10 - How Do You "Quit to DOS XL" Command Level From the Menu?.....	135
3.11 - How Do You "Rename (a) File" From the Menu?.....	135
3.12 - How Do You "Save (a) Binary File" From the Menu?.....	136
3.13 - How Do You Go "To (a) Cartridge" From DOS XL From the Menu?.....	137
3.14 - How Do You "Unprotect Files" From the Menu?.....	138
3.15 - How Do You Perform An "Extended Command" From the Menu?.....	138
4 - THE DOS XL COMMAND PROCESSOR.....	140
4.1 - Where Does The "Quit To DOS XL" Menu Item Leave You?.....	140
4.2 - DOS XL Intrinsic Commands.....	141
4.2.1 - How Do You Execute A Batch File From Command Level?.....	143
4.2.2 - How Do You Go To A CARtridge From Command Level?.....	143
4.2.3 - How Do You Change The Default Drive From Command Level?.....	144
4.2.4 - How Do You Get A DIRectory Listing From Command Level?.....	146
4.2.5 - How Do You ERASE Files From Command Level?.....	147
4.2.6 - How Do You LOAD A Binary File From Command Level?.....	149
4.2.7 - How Do You PROTECT Files From Command Level?.....	150

4.2.8 - How Do You <u>REName</u> A File From Command Level?	151
4.2.9 - How Do You <u>RUN</u> A Machine Language Program From Command Level?	152
4.2.10 - How Do You <u>SAVe</u> A Binary File From Command Level?	153
4.2.11 - How Do You <u>TYPe</u> A File To The Screen From Command Level?	155
4.2.12 - How Do You <u>UNProtect</u> Files From Command Level?	156
4.3 - DOS XL Intrinsic Batch Commands	157
4.3.1 - How Do You <u>END</u> A Batch File?	158
4.3.2 - How Do You Request <u>NO</u> -Screen Output From A Batch File? ..	158
4.3.3 - How Do You Display <u>REMARKS</u> From A Batch File?	159
4.3.4 - How Do You Request <u>SCREen</u> Output To Resume From A Batch File?	160
4.4 - Extrinsic DOS XL Commands	161
4.4.1 - How Do You <u>CLeAR</u> A <u>DiSK</u> From Command Level?	163
4.4.2 - How Do You <u>CONFiGure</u> Drive Densities From Command Level? ..	165
4.4.3 - How Do You <u>COPY</u> Files From Command Level?	167
4.4.4 - How Do You <u>DO</u> Multiple Commands At Once From Command Level?	170
4.4.5 - How Do You <u>DUP</u> A <u>DOuBLE</u> Density Diskette From Command Level?	171
4.4.6 - How Do You <u>DUP</u> A Single Density <u>DiSKette</u> from Command Level?	174
4.4.7 - How Do You <u>INITialize</u> A Diskette From Command Level?	176
4.4.8 - How Do You <u>INIT DOuBLE</u> Density Diskettes From Command Level?	180
4.4.9 - How Do You Get To The DOS XL <u>MENU</u> From Command Level?	182
4.4.10 - How Do You Initialize Your Atari 850 <u>RS-232</u> Ports?	183
4.4.11 - How Do You Make A Single To Double Density <u>COPY</u> ?	184
4.4.12 - How Do You Cause DOS XL To <u>VERiFY</u> or <u>NOt VERiFY</u> ?	188
5 - THE DOS XL BOOT PROCESS	190
5.1 - What Happens When DOS XL Is Booted?	190
5.2 - What Do The DOS SYS and DOSXL.SYS Files Do?	190
5.3 - What Does The AUTORUN.SYS File Do?	190
5.4 - What Does The STARTUP.EXC File Do?	191
5.5 - What Does The MENU.COM File Do?	191
6 - DOS XL AND THE 850 INTERFACE MODULE	193
6.1 - What Is The 850 Interface Module?	193
6.2 - How Do You Load The RS-232 Driver Under DOS XL?	193
6.3 - What About Errors In The 850's RS-232 Driver?	193
7 - SOME ADVANCED CAPABILITIES OF DOS XL	195
7.1 - How Do You Make a Double Density DOS XL Diskette?	195
7.2 - How Do You Use Two Drives In Different Densities?	203
7.3 - How Do You Initialize Different Density Diskettes?	205
7.4 - How Do You Copy Between Densities With Only One Indus GT?	206
7.5 - How Do You Copy Between Densities Using Two Drives?	207
7.6 - What Do You Do If You Have More Than Two Drives?	208
7.7 - How Do You Increase The Number Of Files You Can Have Open?	210
8 - USING DOS XL WITH THE ATARI BASIC CARTRIDGE	211
8.1 - How Does BASIC's "CLOSE" Statement Work With DOS XL?	212
8.2 - How Does BASIC's "ENTER" Statement Work With DOS XL?	213
8.3 - How Does BASIC's "GET" Statement Work With DOS XL?	214
8.4 - How Does BASIC's "INPUT" Statement Work With DOS XL?	214

8.5 - How Does BASIC's "LIST" Statement Work With DOS XL?.....	216
8.6 - How Does BASIC's "LOAD" Statement Work With DOS XL?.....	216
8.7 - How Does BASIC's "OPEN" Statement Work With DOS XL?.....	217
8.8 - How Does BASIC's "PRINT" Statement Work With DOS XL?.....	219
8.9 - How Does BASIC's "PUT" Statement Work With DOS XL?.....	220
8.10 - How Does BASIC's "SAVE" Statement Work With DOS XL?.....	220
8.11 - How Does BASIC's "XIO" Statement Work With DOS XL?.....	221
8.12 - How Do You Rename A File From Atari BASIC?.....	222
8.13 - How Do You Erase A File From Atari BASIC?.....	222
8.14 - How Do You Protect Files From Atari BASIC?.....	223
8.15 - How Do You Unprotect Files From Atari BASIC?.....	224
8.16 - How Do You Automatically Run BASIC When DOS XL is Booted?.....	224
9 - CONTROLLING DOS XL WITHOUT BEING THERE.....	226
9.1 - So What Is DOS XL Batch Processing Anyway?.....	226
9.2 - What Is Contained In A DOS XL Batch ".EXC" File?.....	227
9.3 - What Commands Are Special For Batch Files?.....	228
9.4 - How Is A Batch File Stopped?.....	228
9.4.1 - ... By DOS XL?.....	228
9.4.2 - ... By A Program?.....	228
9.5 - What Is Special About The STARTUP.EXC Batch File?.....	229
9.6 - How Do Execute Files Work?.....	229
10 - USING DOS XL WITH ASSEMBLY LANGUAGE.....	231
10.1 - Interfacing To I/O Routines.....	231
10.1.1 - The Structure Of The IOCB's.....	231
10.1.2 - The I/O Commands.....	235
10.1.2.1 - The Standard DOS XL Commands.....	235
10.1.2.1.1 - OPEN.....	236
10.1.2.1.2 - CLOSE.....	236
10.1.2.1.3 - STATUS.....	236
10.1.2.1.4 - GET TEXT.....	236
10.1.2.1.5 - PUT TEXT.....	236
10.1.2.1.6 - GET DATA.....	237
10.1.2.1.7 - PUT DATA.....	237
10.1.2.2 - Commands Unique To The Disk File Manager System.....	237
10.1.2.2.1 - ERASE, PROTECT, UNPROTECT.....	237
10.1.2.2.2 - RENAME.....	237
10.1.2.2.3 - NOTE And POINT.....	237
10.1.2.3 - FMS Extensions Of The OPEN Command.....	238
10.1.3 - Error Codes Returned.....	238
10.2 - Manipulation Of DOS XL.....	238
10.2.1 - SYSEQU.ASM.....	239
10.2.2 - CP Memory Locations.....	239
10.2.3 - Execute Parameters.....	239
10.2.4 - Default Drive Location.....	240
10.2.5 - Extrinsic Parameters.....	240
10.2.6 - RUNLOC.....	241

10.3 - Device Handlers.....	241
10.3.1 - The Device Handler Table.....	242
10.3.2 - Rules For Writing Device Handlers.....	242
10.3.2.1 - Device OPEN.....	243
10.3.2.2 - Device CLOSE.....	243
10.3.2.3 - Device PUT And GET BYTE Routines.....	243
10.3.2.4 - Device STATUS Routine.....	243
10.3.2.5 - Device Extended I/O Routine(s).....	244
10.3.2.6 - General Comments On Device I/O Routines.....	244
10.3.3 - Rules For Adding Things To OS.....	244
10.3.4 - An Example Program.....	245
11 - DISK FILE STRUCTURE.....	247
11.1 - Data Sectors.....	248
11.2 - Disk Directory.....	248
11.3 - Volume Table Of Contents (VTOC).....	251
12 - SYSTEM MEMORY MAP.....	252
12.1 - Atari Zero Page Map.....	252
12.2 - Atari System Memory Map - DOS XL Version 2.....	253
13 - ERRORS.....	254
13.1 - Types of Errors.....	254
13.1.1 - Hardware Errors.....	254
13.1.2 - Data Transfer Errors.....	254
13.1.3 - Device Driver Errors.....	254
13.1.4 - OS Errors.....	254
13.2 - Error Code Listing.....	254
14 - SHIFTING INTO SYNCHROMESH.....	258
14.1 - What Should You Already Know Before Reading This?.....	258
14.2 - What Is Synchromesh?.....	258
14.3 - How Do You Shift Into Synchromesh?.....	259
14.4 - How Do You Convert Your Existing Diskettes To Synchromesh?.....	261
14.5 - How Do You Automatically Activate Synchromesh When Booting?.....	262
14.6 - What About The New DOS XL's Auto-Density Feature?.....	263
14.7 - What About Synchromesh And Software Other Than DOS XL?.....	264
APPENDIX A: A SHORT GLOSSARY.....	265
APPENDIX B: A DECIMAL/HEX/BINARY CONVERSION TABLE.....	278
APPENDIX C: OTHER FILES ON YOUR DISKETTE.....	282
C.1 - CONFIG.BAS A Guide To Writing Your Own Density Utility.....	282
C.2 - GTRPM.COM A Speed Checking Utility For The Indus GT.....	285
C.2 - RAM130.COM A RamDisk Utility for 130XE Computers.....	286

Section 1: INTRODUCTION

This manual is intended for both the beginning and advanced user of the DOS XL operating system. Many of the advanced features of DOS XL which are not required for normal usage are discussed in later sections of this manual so as to avoid confusing first time users. In many cases, early sections of this manual will discuss the "simpler side" of some of the more advanced features and will then direct you to later discussions for the "advanced side" of that particular feature.

1.1 What is Required to Use DOS XL?

DOS XL will work equally well on all models of Atari computers, provided the model you are using has at least 48K of memory inside.

1.2 Why Do You Need DOS XL?

The purpose of DOS XL is to provide a way for your Atari computer (and you) to communicate with your disk drives, printer, and other peripherals. DOS XL contains commands and utilities which allow you to:

1. Organize the information and programs with which you are working into "files". This organizing is similar to the way you would organize information printed on paper using file folders and a filing cabinet.
2. Provide an easy means by which you can access this information whenever needed.
3. Make use of various pre-written specialized application programs (like word processors, spread sheets, and data managers) and programming tools (like higher powered BASICs, machine/assembly language processors, and program "debugging" aids).
4. Go from using DOS XL itself, to using a cartridge inserted into your Atari, to using any of the thousands of programs sold on diskette, back to using DOS XL itself.

But, in order for DOS XL to know exactly what you want it to do at any given moment, you need to "command" it. And "command" is truly the correct word for how you talk (using your Atari's keyboard) to DOS XL. Whatever you command DOS XL to do, it will do provided it knows how to do it and provided you have commanded it in a way it understands. Remember: DOS XL never actually "thinks" for itself (although beginners often find this hard to believe), it only does what you tell it to do regardless of whether or not what you told it is actually what you wanted it to do. Explaining to

you exactly how to command DOS XL to get it to do your bidding is this manual's sole purpose in life.

1.3 So What is a (Diskette) "File" Anyway?

Much like the way a phonograph record or a cassette tape can hold a number of songs, a single diskette can hold many distinct files of information (up to 64 files per diskette). These files can hold programs or data in text (human readable), binary (computer readable), or several other forms. Just like songs on a phonograph record, diskette files must have names so that you can tell DOS XL exactly which file you wish to use. This is slightly different from that slow and old fashioned method of saving files on cassette using one of the Atari Program Recorders, since cassette files did not have to be given a name. Often, DOS XL and also this manual will refer to a "file name" as "file specification", or simply "filespec". They all essentially mean the same thing. "File specification" simply refers to your "specifying a file's name".

The rules for creating a file name which DOS XL will understand (a "valid" file name) are as follows:

The file name is divided into two parts: the first part is referred to as the "primary name" and the second part is referred to as an "extension". When you create a new file name, you should make the "primary name" section something which will remind you exactly what information you have placed into that file. For instance, "CHECKS" might refer to a file containing information relating to balancing your checkbook. The extension is normally used to indicate the type of format in which the information in that file is saved. For instance, "TXT" would refer to a text file containing a letter you have written using a word processor. Many specialized applications programs will select special "standard" extensions for you.

The primary name section of the file name can consist of up to eight capital (upper case) letters (A-Z, lower case not permitted) or numbers (0-9) arranged in just about any order your little heart desires. There is, however, one restriction: the first letter of the primary name must be a letter and not a number. The primary name section can be as short as one letter, but at least one letter must be used.

The extension section of the file name can consist of up to three letters or numbers arranged in any order, and can even start with a number. The extension is completely optional; DOS XL does not require you to specify one if you don't want one. If you do use an extension following the name section, always separate the two sections with a period (.). For instance, "CHECKS.TXT".

The following are valid file names: GEORGE, TEMP.ABS, PROG1.SAV, SORT123, COPY.COM. The following file names would not be accepted by DOS XL (illegal file

names): NAMETOOLONG, TEMP.LONGEXTENSION, INUMBER.1ST, lowercas, NO-DASH.

The computer "hackers" who have been beating on computer keyboards for years have a sort of "standard" set of extensions which most people eventually learn sometime during their years of computer usage. To save you from waiting these years, here's a list of some of the more common extensions:

BAS for a "SAVE"d BASIC program (MYPROG.BAS)

LIS for a "LIST"ed BASIC program (MYPROG.LIS)

COM for a DOS XL command/utility program (COPY.COM)

EXC for a DOS XL execute file (STARTUP.EXC)

SYS for a DOS XL system file (DOS.SYS)

TXT for a wordprocessor or editor text file (LETTER.TXT)

In some cases, file names must be preceded by a drive specifier which tells DOS XL on which drive to search for a particular file. The format of a device specifier is:

Dn:

(or)

D:

where n is a digit from 1 to 4, depending on how many drives you have: If you just specify D:, drive 1 is assumed (this is very useful if you only have one drive). For example, D1:MYPROG.BAS tells DOS XL to use the file MYPROG.BAS on drive 1. D2:YOURPROG.LIS tells DOS XL to use the file YOURPROG.LIS on drive 2. D:MESSAGE.TXT tells DOS XL to use the file MESSAGE.TXT on drive 1

Whenever you command DOS XL to do something which causes it to create a new file on a diskette, DOS XL adds the name of that file to something called a "directory". By maintaining this directory, DOS XL knows where each file on your diskette is located just like your address book or telephone directory tells you where all your friends and associates are located. Whenever you tell DOS XL you wish to use one of the files on your diskette, DOS XL reads through this directory, entry by entry, until it finds the entry for the file you requested.

In many cases, you will not wish to specify to DOS XL one specific file; but rather a group of files with similar names. To make this possible, DOS XL allows you to use

"wild-card" characters as part of the file name. These wild-card characters will match any other letter or number when DOS XL goes searching through a diskette directory to find the file you have requested.

There are two wild-card characters DOS XL will accept. The first one is a question mark (?) which will match any single letter or number at the same position as the question mark in the file name. For instance, if the files YELL.TXT, BELL.TXT, SELL.BAS, PRELL.TXT, and SELF.TXT were listed in a diskette directory, a wild card file name of ?ELL.TXT would match YELL.TXT and BELL.TXT.

The second wild-card character is the asterisk or star (*). This character will match a group of zero or more characters. As the following example table shows, this wild-card character can be used alone or combined with the question mark in order to gain a lot of flexibility:

----- Wild-Card File Names -----

Directory	*ELL.TXT	SEL*.*	?ELL.*	*.*
YELL.TXT	Matches		Matches	Matches
BELL.TXT	Matches		Matches	Matches
SELL.BAS		Matches	Matches	Matches
PRELL.TXT	Matches			Matches
SELF.TXT		Matches		Matches
SELFISH.COM		Matches		Matches

As you can see, the wild card characters can be used in both the primary file name and the extension. It might appear that wild-card characters are used to tell DOS XL to find the first file which matches the wild-card file name you gave, but actually these characters are much more powerful. Instead of just stopping at the first file DOS XL finds which matches the wild-card file name you specified, DOS XL will continue to perform whatever command you gave it on any other files it can find on that diskette which also match the wild-card file name. This can save you a lot of command typing if you wish to command DOS XL to perform the same command on a large collection of files.

For many of the things you can command DOS XL to do it would not make any sense to specify more than one specific file, and DOS XL won't accept a wild-card file name when you give it these types of commands. The DOS XL menu commands for which it will accept wild- card file names are as follows:

Files on Disk
Copy Files
Erase Files
Protect Files
Unprotect Files

A full discussion of what these commands will cause DOS XL to do is provided later in this manual.

1.4 How Do You Use Your Other Non-Disk Devices?

All Atari Personal Computers consider everything which you have to attach to your computer via a cable (like your Indus GT) to be an "external device" (or "peripheral"). This includes your television set or display monitor. It also includes your computer's keyboard even though it is obviously a direct part of the computer unit. When prompted for a file name by DOS XL, sometimes you can enter the name of one of these other devices instead. These other devices are referred to by names consisting of a single letter optionally followed by a single digit used to define a specific device when more than one of the same kind exist, such as in the case of D1: and D2: for two diskette drives. The device name must be followed by a colon. The following is a list of device names which DOS XL will recognize:

C: The Program Recorder. This is a device very similar to a standard audio cassette recorder, but which Atari has heavily modified so that your Atari Computer can save and load information to/from it. You can use the recorder as either an input (load or read) or output (save or write) device, but never as both simultaneously.

D1:-D8: Diskette Drive(s). Unlike the program recorder, diskette drives can be used for input and output simultaneously. Since diskette drives can also access any piece of information recorded on a diskette directly without having to "rewind" or "fast-forward" a tape, you usually also have to specify a file name following the device code (D1:-D8:), as previously mentioned, so that DOS XL can tell the diskette drive which piece of information to input or output.

NOTE: If you use D: without a drive number, D1: is assumed.

E: Screen Editor. The screen editor simulates a very limited text editor/word processor using the keyboard as input and the display (television or monitor) as output. This is the editor you use when typing in a BASIC program. In many cases, DOS XL, BASIC, and many other programs will assume that you want to use this device (E:) unless you specify some other device.

K: Keyboard. This device code allows you to specify just the keyboard half of the full screen editor device. This device can be used for input only.

P: Printer. This device code allows you to send text to your printer if you have one. On old Atari computer configurations, output to the P: device was sent to a printer via Atari's 850 Interface Module. Atari's newer printers can be connected directly to your Atari computer without the added expense of this interface module.

R1:-R4: RS-232 Serial Ports. In addition to connecting a printer to an Atari computer, Atari's 850 Interface Module also permits your Atari computer to perform RS-232 communications. RS-232 is an extremely industry standard type of communications which permits just about any computer to talk to just about any other computer as well as an extremely large number of non-Atari peripherals like video terminals, non-Atari printers, plotters, and modems. These four RS-232 devices can be used for both input and output.

NOTE: If you use R: without a device number, R1: is assumed.

S: Screen Display (either television or monitor). This device code allows you to specify just the screen display half of the screen editor device. Both input and output can be performed to/from this device, thus permitting programs to both change the screen display and read what the screen is currently displaying.

1.5 How Does DOS XL Accept Commands?

A primary feature of DOS XL is the two different ways by which you can command it. You may choose either a menu mode or a Command Processor. In case you are unfamiliar with other menu driven programs such as Atari's own DOS, a menu is simply a list of commands which appear on the screen. You need simply choose one of the options listed before you. If additional information is required, you are further prompted by the program (DOS XL in this case) to type the necessary information. In this way, you need not remember all the special command words which DOS XL will understand; instead, you may simply select a command from the list.

The other way of commanding DOS XL is under DOS XL's Command Processor mode. In this mode, you are *not* shown a list of commands to choose from. Instead, you must remember (or look up in this manual) all the command words necessary in order to get DOS XL to do your bidding. Although this might at first be cumbersome, once several commands have been committed to memory, the command mode is much faster and easier to use. Also, certain advanced features of the DOS are available only from the Command Processor. Since using DOS XL from under the Command Processor mode is obviously for advanced Atari users, a discussion of its operation has been provided in the later sections of this manual.

The copy of DOS XL you have received with your Indus GT is set up so that you will be presented with the menu mode of command entry. It is recommended that this mode be used exclusively until you have gained a lot of familiarity with DOS XL.

Section 2: GETTING STARTED WITH DOS XL

2.1 How Do You Get DOS XL Running?

"Getting DOS XL Running" is referred to as "booting" DOS XL. "Booting" refers to how every DOS must "pull itself up by its boot straps", which in turn refers to how a DOS must essentially get itself running with only a bare minimum of assistance from the computer itself. After all, every other program you'll run has some sort of DOS (you may not see it) which loads the program into the computer's memory and starts it running; but the DOS itself has no one to help it.

Anyway, here's the step by step approach to booting DOS XL:

- 1) Connect your disk drive and any other peripherals to your Atari computer following the manufacturer's instructions for each peripheral.
- 2) Turn on your peripherals and your monitor or television, but leave your Atari computer turned off. Important reminder: Never leave any diskette inside any diskette drive when you are turning the drive's power on or off. All drives pass through a sort of "undefined" state when they are being granted or deprived of power. Very extensive circuitry has been built into your Indus GT to prevent it from altering information on your diskettes should they be left in the drive during this "undefined" state (after all, you have no control over a power black-out), but it is always safer to remove any diskettes first.
- 3) Insert the DOS XL diskette which came with your Indus GT into your disk drive (drive 1 if you have more than one drive). For both Indus and Atari drives, the label of the diskette you want to boot should be facing up and the oval cut which exposes the diskette's surface should be inserted first.
- 4) For the time being, make sure there are no cartridges inserted into your Atari computer (this includes any BASIC cartridge). It will probably be very common for you to boot DOS XL with cartridges installed (especially a BASIC cartridge) at a later time, but for now you'll want to keep things very simple.
- 5) Turn on your Atari computer and the rest is automatic: the disk drive will start doing things, and after a time the DOS XL copyright message will appear at the top of the screen. Then, a message will begin to appear, line by line, which begins with "Welcome to DOS XL...". This message is coming from something called a "start up file". Getting rid of this start-up file is discussed later in this manual. The last line from the start-up file is just "MENU". This is a command which instructs DOS XL to load the DOS XL menu. After a few more seconds, the menu program will finish loading, the screen will again clear, and the DOS XL menu will appear.

2.2 What About Double Density?

Once you have your DOS XL diskette booted, you will probably start asking yourself about the Indus GT's double density capability. But before starting to use double density, you will need to understand some differences between using single density versus double density. In truth, you will probably find occasion to use both densities. There are many various reasons for using one density versus the other, here are just a few:

Single Density: To be compatible with diskettes created or designed for Atari 810 or 1050 disk drives, you will need to use single density. Single density diskettes used with DOS XL are completely file compatible with Atari DOS 2.0S. All operations which work with Atari DOS will generally work with DOS XL when used under single density.

Are there exceptions? Yes. Several companies produce self booting disks (that is, you simply put them in the disk drive and turn on the computer, you don't need DOS XL) which make use of certain strange features available only in Atari's own DOS. There is nothing we can do to make DOS XL compatible with these disks! On the other hand, this is not really a problem, since (as we mentioned) these disks are generally self-booting (implying that they include a copy of Atari DOS on their disk). To use these diskettes, do nothing special. Simply follow their manufacturers' directions.

Double Density: Generally, most programs written with cartridge-based languages will work fine with double density DOS XL. This usually includes programs written in Atari BASIC, PILOT, LOGO, Optimized Systems Software BASIC XL, MAC-65, ACTION!, C/65, and more. Of course, if you yourself have written the program and have not made assumptions about the size and type of disk, your programs will run correctly also.

What doesn't work in double density? Programs which assume that sectors always contain 128 (or 125) characters. Programs which are self booting and which have special "protection" schemes which prevent you from copying them. Programs which try to perform some or all of the diskette drive input or output themselves without asking for the DOS's assistance. As mentioned above, though, these programs are usually distributed on self-booting disks, so you need do nothing special with them.

How do you use double density? The first thing you will need to do is create what is called a "Double Density System Master Diskette". This diskette is identical to the single density one we sent you, except it will be double density and have more storage capability. Before you can create this double density diskette, you will need to become more familiar with how to command DOS XL. Therefore, creating the Double Density System Master is explained later in this manual.

SPECIAL NOTE: Under DOS XL, a double density diskette will contain exactly the same number of sectors (units of storage) as a single density diskette. This confuses many beginning users. The difference between double density and single density under DOS XL is the size of the sectors. Double density sectors are twice as large as single density sectors, and therefore programs and other data saved on double density diskettes require fewer sectors of storage than they require on single density diskettes.

2.3 How Do You Use The DOS XL Menu?

When you boot the DOS XL diskette which came with your Indus GT, it will automatically place you (after it does a lot of other stuff) into the DOS XL menu. This menu looks something like this:

DOS XL MENU version 2.20
copyright (c) 1983 OSS, Inc.

Files on Disk	Protect Files
To Cartridge	Unprotect Files
Copy Files	Rename File
Duplicate Disk	Save Binary
Erase Files	Load Binary
Initialize Disk	Go to Address
Extended Command	Quit to DOS XL

Enter your selection.

Although the above sample does not show it, the first characters of each of the 12 commands in the list are in inverse video (dark characters on a lighted background). These characters are those which you would type to select a command. For example, to command DOS XL to "Rename File", you would simply type "R", in response to the "Enter your selection" prompt. For most of the menu commands, extra input is required. The menu will prompt you with appropriate messages whenever you are required to input more information, such as a file name.

Whenever you are prompted by the DOS XL menu to enter a filename or a filespec, you don't always have to specify the device name for the drive (D1-D8:). If you do not specify a device name, drive 1 is assumed (D1:). For example, if you typed "GEORGE" as a filename, the menu would assume that you meant "D1:GEORGE".

PROBLEM PREVENTOR: In general, you may not omit the drive specifier on names entered while using cartridge based products such as Atari BASIC or Optimized Systems Software BASIC XL. Except when working with the menu or DOS XL's Command Processor, you usually need to specify the entire file name (and often must enclose it in quotes, as in Atari BASIC).

2.4 Is Your DOS XL Diskette Okay?

In order to ensure that your DOS XL Master Diskette (the one which came with your Indus GT) is in good condition, you should view the names of the files contained on it. The DOS XL menu of commands should be visible on the screen, and the menu will prompt you with:

Enter your selection.

The first command in the menu is "Files on disk". This command allows you to view the names of the files on a diskette. First ensure that your DOS XL master diskette is still in drive 1. Then command DOS XL to list the names of the files on your diskette by pressing the "F" key on your keyboard.

The DOS XL menu program will respond to this command with:

Files on disk

Filespec:

In order to look at all files on the disk, simply press the <RETURN> key (Note: <RETURN> is used through-out this manual to indicate the key labelled "RETURN" and not the individual letters "R", "E", "T", "U", "R", and "N".)

The list of files on your master disk will appear and should look something like:

DOS	SYS	053
DOSXL	SYS	046
MENU	COM	025
CLRDSK	COM	023
COPY	COM	075
DO	COM	003
DUPDBL	COM	011
DUPDSK	COM	011
INIT	COM	006
INITDBL	COM	023
RS232	COM	001
SDCOPY	COM	086
SYSEQU	ASM	022
MEM	LIS	066
RS232FIX	COM	002
CONFIG	BAS	039
GTRPM	COM	045
VERIFY	COM	001
NOVERIFY	COM	001
GTSYNC	COM	027
STARTUP	EXC	003
RAM130	COM	007

115 FREE SECTORS

Hit RETURN for menu

Each of the files has a primary name and an extension. For example, the file COPY.COM has the primary name COPY and the extension COM. Note that in the file listing the period is not shown. Instead, there may be one or more spaces between the primary name and the extension. This format appears only in the file listing. You may never use this form for specifying files. If you are using file extensions, you must use a period with no intervening spaces, as in "D:TEST.LIS". File names are explained earlier in this manual.

Notice that all of the files on the master disk except the file "STARTUP.EXC" are preceded by an asterisk in the directory listing. An asterisk preceding a file implies that it has been protected from modification or erasure through the use of the DOS XL menu command "Protect Files". This method can also be used to protect your own files from change or deletion through accidental use of one of the DOS XL commands.

2.5 How Do You Keep Your DOS XL Diskette Safe?

Once you have successfully booted your master disk, you will now need to make a second (or "backup") copy. This permits you to put your DOS XL master diskette away in a safe place and only use the second copy you've made. That way if, for some unexplained reason, your second DOS XL diskette gets magnetically altered and will no longer boot, you can recreate it from your safely stored away master diskette.

First, for safety's sake, place a write protect tab over the write- enable notch on your DOS XL master disk, if it does not already have one. This will prevent any mistakes you may (or may not) make while using DOS XL from damaging your DOS XL master diskette. Note: Some copies of DOS XL may be distributed on diskettes which don't even have write-enable notches which need to be covered. In these cases, you won't have any notch to cover. Location and usage of the write- enable/protect notch is provided in your Indus GT Drive Manual.

The DOS XL booting process should leave you with the DOS XL menu of commands displayed on your screen. The following prompt will appear with the cursor below the menu.

Enter your selection.

What you do at this point depends upon whether you have one or two (or more) drives. If you have two or more drives, and your second drive is an Indus GT, then you'll need to read the section later in this manual which discusses configuring your Indus GT. The reason for reading this later configuration discussion at this point is because you will need to make sure your second drive is configured for single density. Once you've read that section, you can resume at this point. If you only have one drive then you won't need to be concerned about the configuration discussion. If you have a second drive which is not an Indus GT, an Atari 810, or an Atari 1050, then you should consult that drive's manual to see if the drive is "configurable". If it is, you will need to read the later discussion at this point. If it isn't, then you can just continue on here.

In response to the "Enter your selection" prompt, you'll want to type "D" for "Duplicate Disk". This will cause the DOS XL menu program to ask you:

Double density?

As mentioned before, the DOS XL system master which came with your Indus GT is single density; so you'll want to answer this question with "N<RETURN>" for "No". Later on when you are making other backups you would answer "Y" for "Yes" if the diskette you are copying is in double density.

Either the DUPDSK.COM (short for DUPLICATE DiSK) or DUPDBL.COM (short for DUPLICATE DOuBLE density disk) utility program will be read into memory, depending on whether you answered "N" or "Y" to the last prompt. The next prompt is:

Source disk (1,2,3,4) :

Normally, you will copy from drive 1 so type "1". The DOS XL menu will the prompt you with:

Destination disk (1,2,3,4) :

Your answer to this prompt is dependent upon whether you have one or more drives. If you only have one drive, then the answer is quite obviously "1". If you have two or more drives, then answer with "2" in order to speed up the copying process. Once you've entered your answer, you will then be asked:

Format destination disk (Y/N)?

Most blank diskettes are unformatted. That is, they are not yet prepared to hold any information. In order to copy files or diskettes to blank diskettes, they must first be formatted. Therefore, answer this question with "Y<RETURN>" for "Yes". If you know that your destination diskette is already formatted, answer "Y<RETURN>" anyway just to be consistent. At this point, the DUPDSK or DUPDBL utility will instruct you to either:

Insert source disk into drive 1
And hit RETURN when ready

or:

Insert source disk into drive 1
Insert destination disk into drive 2

And hit RETURN when ready depending upon whether you are using one or two drives for the copy.

Your master disk should still be in drive 1 at this point, which is the source diskette and drive. If you are using drive 2 for the copy, insert your blank diskette (or a diskette to be completely recopied thus losing any old information the diskette may have contained) into drive 2. Once you have the correct disk(s) in the correct drive(s), press "<RETURN>".

The busy light on the front of your source disk drive will come on, and the diskette duplication utility will respond by saying:

Reading source disk

If you are only using one drive for the copy, when the busy light on your drive goes out you will be prompted with:

Insert destination disk into drive 1
And hit RETURN when ready

The diskette duplication utility has read as much as possible of the source disk into your computer. At this time, remove your DOS XL master disk from drive 1 and insert a blank diskette or one which you no longer need the old information on it any longer. When the diskette is in, press "<RETURN>".

The program will respond:

Formatting destination disk

and, after a while,

Writing destination disk

Most of the time, the total information on a diskette is too large to hold in your Atari's memory at one time. This is the case for your DOS XL disk. Therefore, if you are only using a single drive to make the copy, you will be prompted to repeatedly insert your source and destination disks (the DOS XL master and the blank diskette, respectively) until the duplication is complete. Follow these prompts carefully until the diskette duplication utility responds:

Copy same disk again (Y/N)?

This means you, with DOS XL's help, have successfully created a backup copy of your DOS XL master diskette. Remove this backup DOS XL from the drive and place a write-protect tab over the diskette write-enable notch. You should also make a label for the diskette which indicates that it is your single density DOS XL System Diskette ("System Master Diskette" refers to the diskette you received with your drive.)

To get back to the main DOS XL menu, type "N<RETURN>" in response to the above question. The disk duplication utility program will respond with:

Hit RETURN for menu

After you press "<RETURN>", DOS XL will return you to the main command menu.

2.6 How Do You Use Cartridge BASIC or Other Cartridges?

How various cartridges work with DOS XL depends upon which particular cartridge is in use. All cartridges will work with DOS XL exactly the way they work with standard Atari DOS 2.0S. Certain cartridges, especially game cartridges, are designed not to work at all with any DOS. These types of cartridges are written in such a way that your Atari computer starts them running the minute the computer is turned on, before the

computer attempts to start booting the DOS. Because DOS is never booted, the cartridges don't require DOS and therefore there is no "using" DOS XL with these cartridges.

The other main type of cartridge is one which wants to use DOS for saving and loading programs, text, or other information. Most of these types of cartridges are programming language cartridges such as Atari's BASIC or Optimized Systems Software's BASIC XL and ACTION!. These cartridges will permit your DOS XL to be booted into the computer, and then the DOS XL will in turn automatically start the cartridge running (this is called "transferring control (of the computer) to the cartridge"). This means that if you boot DOS XL without Atari's BASIC cartridge in your computer, you end up with either the DOS XL menu or at DOS XL command level. But, if you boot DOS XL with the BASIC cartridge installed, you end up with BASIC's "READY" prompt.

There is a certain case in which DOS XL will not automatically transfer control to one of these cartridges. This is when the booted DOS XL diskette contains a file called "STARTUP.EXC". This is a special automatic command file from which DOS XL will take its commands when DOS XL is finished booting. The STARTUP.EXC file is an advanced feature of DOS XL which is discussed later in this manual.

The DOS XL diskette which came with your Indus GT contains a STARTUP EXC file which produces a series of single line messages prior to giving you the command menu. If the STARTUP.EXC file is "Erased" (the "erase" menu option is discussed later) from a copy of your DOS XL diskette (never alter your original DOS XL diskette) then those "hello" messages will no longer print and you will be placed directly in the command menu

Since a STARTUP EXC file can contain a command which tells DOS XL to transfer control to a cartridge, DOS XL will follow the commands in STARTUP.EXC rather than automatically giving the cartridge control. Since the STARTUP.EXC file on the diskette which came with your Indus GT never tells DOS XL to start the cartridge running, that copy of DOS XL will never automatically leave you in BASIC or any other cartridge. If you erase the STARTUP.EXC file, then DOS XL will automatically give control to any cartridge present (if the cartridge wishes control).

You can always tell DOS XL to transfer control to a cartridge by specifying the "To Cartridge" command on the DOS XL command menu. This command is discussed later.

Section 3: THE DOS XL MENU

The DOS XL menu was designed to be easy to use while allowing you access to the full power of both your Indus GT diskette drive and your Atari computer

For those of you who have previously used Atari DOS, here is a summary of the differences between the DOS XL menu and the Atari DOS menu

1) Loading the DOS menu The Atari DOS menu must be loaded in from the disk whenever you return to DOS from a cartridge. Since we felt that this process was too slow and cumbersome, we made sure that the DOS XL menu may be kept "resident" (in memory) at all times. This does occupy about 2,000 characters more memory, but this is more than offset by the extra ease-of-use. Once you become comfortable with DOS XL, you can then begin to learn how to issue commands directly to DOS XL without using the menu program; thereby freeing up these 2,000 characters of storage for other uses

2) Atari DOS supports the use of a special file in which to save user memory while accessing DOS functions (the MEM.SAV file) DOS XL neither supports nor needs this file.

3) The DOS XL menu only requires you to press a single key to access commands, whereas Atari DOS insists that you keep pressing the "<RETURN>" key after each menu selection.

3.1 What is the DOS XL Menu?

Whenever the menu is entered, the following list of commands will appear on the screen:

DOS XL MENU version 2.20
copyright (c) 1983 OSS, Inc.

Files on Disk	Protect Files
To Cartridge	Unprotect Files
Copy Files	Rename File
Duplicate Disk	Save Binary
Erase Files	Load Binary
Initialize Disk	Go to Address
Extended Command	Quit to DOS XL

When the DOS XL menu is visible on the screen, you are prompted with:

Enter your selection.

At that point, you should type the first letter of any of the DOS XL menu commands listed on the screen. If more input is required to complete the command, the menu will prompt you for more information. Unless the command loads a utility program, you may cancel a command at any time by hitting the [ESCAPE] key on the upper left of your keyboard. If the command loads a utility program (the only commands which do this are "Copy Files", "Duplicate Disk", and "Initialize Disk"), you may have to press the [RESET] key in order to cancel the command.

The following sections describe each menu command in detail. The commands are presented in alphabetical order, not the order in which they appear in the menu.

3.2 How Do You "Copy Files" From the Menu?

The "Copy Files" command menu item allows you to transfer files between diskettes or to different files on the same diskette. This command is most useful for copying one or a few files from one diskette to another. If you desire to transfer all or most of the files on a single diskette to another diskette, you should use the "Duplicate Disk" command menu item instead, as it will perform the operation much more rapidly.

To use the copy command, select "C" when the menu prompts you for a command selection. At that time, DOS XL will check for the COPY.COM file on the diskette in drive 1. This is the utility program which performs file transfers. If DOS XL does not find the COPY.COM program, you will be prompted to insert your DOS XL master disk as follows:

Copy Files

Insert MASTER disk and hit RETURN

If you receive this prompt, take out any disk in drive 1 and insert any DOS XL system disk which is in the same density as the diskette which was in drive 1 and press the <RETURN> key.

The menu will then prompt:

Copy Files

From file:

At this point, you should respond with a filespec specifying the file or files to be copied (e.g., D:GEORGE, D2:JUNK.LIS, etc.). For example, if you want to transfer the contents of the file "PROG1" on drive 1 to another diskette, you should type "D1.PROG1".

Notice that wild-cards may be used to refer to files using the COPY utility (e.g., TEMP.*, AB???.COM, etc.). As a special case, if you wish to copy all files on a disk to another disk, just use a filespec of Dn:, where n is the source drive number (e.g., D1). How to use wild cards is discussed earlier in this manual.

The COPY utility will then prompt:

To file:

You should respond with the destination filespec. In most cases you will want to transfer files from one diskette to another without changing their names. In this case you may refer to the destination filespec as just Dn:, where n is the destination drive number (e.g., D:, D1:, D2). In the above example, if you wanted to copy "PROG1" to a different diskette and you own only 1 drive, you should type 'D1'.

You will then be asked:

Single Drive?

If you own only a single drive as in the above example, or if you are performing this copy to another diskette in the same drive,

You type: Y<RETURN>

In any other case,

You type: N<RETURN>

The COPY.COM utility program will then be loaded from the diskette, and you will be prompted:

Insert disk(s) to be copied
and hit RETURN when ready

Make sure the diskette containing the file you are copying is in the drive you told the copy utility it would be in. If you are using more than one drive to make the copy, insert your destination disk into the proper drive also.

You type: <RETURN>

Before each file is copied, you will be asked:

Copy
Dn:filename
to Dn:filename?

If you wish to copy that particular file,

You type: Y<RETURN>

Otherwise,

You type: N<RETURN>

If you choose not to copy a file, a message will be printed to the screen verifying that the file was not copied.

Whenever you do choose to copy a file, the source file will be read into memory. If you are copying to another disk on the same drive, you will then be prompted to insert the destination disk as follows:

Insert 'to' disk and hit RETURN

If the destination file already exists, you will be asked:

To' file already exists
OK to overwrite?

If you wish to replace the old file with the source file,

You type: Y<RETURN>

Otherwise,

You type: N<RETURN>

If the destination file has previously been guarded against modification by using the DOS XL menu "Protect Files" command (i.e., the file is preceded by an asterisk in the "Files on Disk" listing of the disk), the COPY utility program will not be able to overwrite that file. The protection must first be removed using the "Unprotect Files" menu item before any writes to that file may occur!

The COPY utility reads as much as possible of the source file into memory at one time. If the source file is too large to fit into memory and you are copying on a single drive, you will again be prompted:

Insert 'from' disk and hit RETURN

Re-insert your source disk and continue to carefully follow the directions of the prompts until the entire file is copied.

When a file has been completely copied, a verification message will be printed on the screen. When all files have been copied, you will be prompted:

Hit RETURN for menu

To return to the list of menu commands,

You type: <RETURN>

PROBLEM PREVENTOR: The "Copy Files" command should not be used to copy from single to double density diskettes if you own only 1 disk drive. Copying between two different densities using only one drive is discussed as a special case later in this manual.

PROBLEM PREVENTOR: The "Copy Files" options should never be used to copy the file "DOS.SYS" onto another diskette. DOS.SYS is a special file which is handled in a very special way by DOS XL (in order to remain fully compatible with Atari's own DOS). Because of this special handling, using "Copy Files" to copy DOS.SYS will result in the "to" DOS.SYS file containing two copies of the DOS.SYS file, and in many cases the "to" diskette will be unbootable. Only the "Initialize Disk" option should be used to place a copy of DOS.SYS onto a diskette. After DOS.SYS has been placed onto a diskette using "Initialize Disk", an "all files" copy can then be performed (by specifying the "*" file name). Since you will already have placed DOS.SYS on the "to" diskette, "Copy Files" will ask if it is "OK to overwrite?" the DOS.SYS file. Simply answer "N" for "no", and "Copy Files" will move on to copying the other files.

PROBLEM PREVENTOR: When using "Copy Files" with only a single drive, it will not bother to ask you to "Insert 'from' disk and hit RETURN" if you answered an "OK to overwrite?" question with "N" for "no". Therefore, always remember to insert your "from" disk before answering this question with "N". "Copy Files" will remember to ask you to "Insert 'from' disk and hit RETURN" after it is done copying the file if you answered "OK to overwrite?" with "Y" for "yes".

3.3 How Do You "Duplicate (a) Disk" From the Menu?

The "Duplicate Disk" menu item allows you to quickly copy the entire contents of a diskette to another diskette. If you wish to copy only one or just a few files from one diskette to another, or if you need to preserve some of the files already on the disk you wish to copy to, the "Copy Files" menu item should be used instead.

PROBLEM PREVENTOR: The "Duplicate Disk" menu item writes entirely new information to the destination diskette, thus completely erasing all files which previously existed there. Carefully select the desired destination diskette to avoid accidentally destroying your program disks.

To select the "Duplicate Disk" menu item, type "D" when you are prompted to enter a command selection.

You will then be asked:

Duplicate Disk
Double density?

If your source disk was formatted under single density,

You type: N<RETURN>

If the source disk is double density,

You type: Y<RETURN>

After you answer this question, DOS XL will check for the DUPDSK.COM (for single density) or DUPDBL.COM (for double density) file on the diskette in drive 1. This is the utility program which performs full diskette duplication. If DOS XL does not find the utility program it needs, you will be prompted to insert your DOS XL master disk as follows:

Duplicate Disk
Insert MASTER disk and hit RETURN

If you receive this prompt, take out any disk in drive 1 and insert any DOS XL system disk which is in the same density as the diskette which was in drive 1 and press the <RETURN> key.

Once loaded, the diskette duplication utility will prompt you with:

Source disk (1,2,3,4) :

Normally, you will copy from drive 1 so,

You type: 1<RETURN>
Next you will be prompted with:

Destination disk (1,2,3,4) :

If you have only a single drive, or you wish to use drive 1 as your destination drive,

You type: 1<RETURN>

If you wish to use a drive other than 1 for a destination drive,

You type: n<RETURN>

where "n" is the number of the desired destination drive.

Once you've specified the destination drive, you will be asked:

Format destination disk (Y/N)?

Most blank diskettes are unformatted. That is, they are not yet prepared to hold disk files. In order to copy files or diskettes to blank diskettes, they must first be formatted. Therefore,

You type: Y<RETURN>

At this point, the disk duplication utility will instruct you to either:

Insert source disk into drive 1
And hit RETURN when ready

or:

Insert source disk into drive 1
Insert destination disk into drive n
And hit RETURN when ready

In either case, follow the directions given by the utility. Once you have the diskette(s) inserted,

You type: <RETURN>

At this point, the light on the front of your disk drive will come on, and the disk duplication utility will respond by saying:

Reading source disk

If the destination drive is the same as the source drive, you will be prompted:

Insert destination disk into drive n
And hit RETURN when ready

At this time, remove your source diskette from drive 1 and insert a blank diskette. When this has been done,

You type: <RETURN>

The program will respond:

Formatting destination disk

and, after a while,

Writing destination disk

Most of the time, the total information on a diskette is too large to hold in your Atari's memory at one time. This is the case for your DOS XL disk. Therefore, you will be prompted to repeatedly insert your source and destination disks until the duplication is complete. Follow these prompts carefully until the disk duplication utility responds:

Copy same disk again (Y/N)?

You type: N<RETURN>

At this point, you will be prompted:

Hit RETURN for menu

To return to the DOS XL menu,

You type: <RETURN>

3.4 How Do You "Erase Files" From the Menu?

The "Erase Files" menu item allows you to delete one or more files from a diskette. This menu item should be used with care since only very advanced users can recover an erased file (if at all).

If you use the "Erase Files" menu item to attempt to erase a file which has previously been protected (i.e., the file name is preceded by an asterisk in the directory listing), you will be given the error message "FILE PROTECTED". If you desire to erase this file, you must first remove the protection by using the "Unprotect Files" command. Note that protecting files is an excellent way of guarding against accidental erasure.

To use this command, select "E" when the menu prompts you for a command selection. The menu will then prompt:

Erase Files

Filespec to erase:

You should respond with the name of the file you wish to erase. If you wish to erase a group of files, you may use wild-card characters in the filespec. However, be very sure

you know what you are erasing. Wild-card characters are discussed earlier in this manual.

You will then be asked,

Are you sure?

If you feel the filespec you entered was correct,

You type: Y<RETURN>

If you wish to abort the "Erase Files" command,

You type: N<RETURN>

If you answered "Y", all files which match the selected filespec will be removed from the diskette. The menu will then prompt:

Hit RETURN for menu

To return to the menu of commands,

You type: <RETURN>

3.5 How Do You List The "Files On (a) Disk" From the Menu?

The "Files on Disk" menu item allows you to view the names of any or all files on a diskette.

To use this command simply select "F" when prompted by the menu for a command selection. Then insert the desired diskette into one of your disk drives (or drive 1 if you have only one drive). At that point, the menu will prompt,

Files on disk

Filespec:

The requested filespec instructs DOS XL which files on the disk to look for and display. The following table gives some examples of filespecs and the corresponding lists of files they display:

<u>Filespec</u>	<u>Files listed</u>
GEORGE	The file having the name GEORGE, if such a file exists.
JUNK.SAV	The file having the primary name JUNK and the extender SAV, if such a file exists.
AB?	Any file not having an extender whose name is three characters long where the first two are AB. This filespec matches ABC, ABX, AB1, etc.
CAT*	Any file whose name begins with CAT. The filespec matches CAT, CATCHER, CATTLE, etc.
JOHN.??X	Any file whose primary name is JOHN and whose extender is three characters long ending in X. This matches JOHN.ABX, JOHN.XXX, etc.
**	All files on the diskette. This filespec may be abbreviated by just <RETURN>.
D1:	All files on the diskette in drive 1.
D2:	All files on the diskette in drive 2.

NOTE: After entering the filespec you desire, you can optionally enter a space and request an "output" specifier -- similar to the intrinsic command processor level DiRectory command discussed later in this manual. For instance, entering:

Files on disk

Filespec: D1: P:

would result in a directory of all of the files on drive one being sent to your printer.

After entering the filespec, press <RETURN>. DOS XL will then give you a listing of all the files on the diskette which match your filespec. If an asterisk (*) prints in front of the file name on the listing, then the file is protected from being erased or altered. The number following the file name is the number of sectors on the diskette which the file occupies. A sector can contain about 125 characters in single density, and about 253 in double density.

Following this listing, you will get:

Hit RETURN for menu

So, just type <RETURN> to return to the menu.

3.6 How Do You "Go to (an) Address" From the Menu?

The menu item "Go to Address" is normally only used by very advanced Atari users. It allows you to command DOS XL to pass control of your computer to a machine language program already residing in your Atari computer's memory. This program should have previously been loaded into memory using the DOS XL menu "Load File" command, or an equivalent method.

To use the "Go to Address" command, type 'G' when the menu prompt "Enter your selection." appears. At that time, the menu will prompt:

Go to Address

Address:

You should respond with the hexadecimal address of the location in memory to which DOS XL is to transfer control (to which it is to jump). For example, if a machine language program resides at location \$5000 (the dollar sign indicates hexadecimal), you would respond with "5000". Note that although the number is a hexadecimal value, you should not precede it with a dollar sign when you enter it.

Be sure that the address you enter is correct; for, in general, if you pass control to a location in memory which does not contain the desired machine language program, control of your computer will be lost and the keyboard will "hang" (not respond to you). In some cases, hitting the [RESET] key on your computer's keyboard will return control to you. Most of the time, however, you will be forced to turn off the power to your computer and repeat the boot process.

Once you press <RETURN> following the address, control will be passed to the machine language routine located at the desired address. If that routine returns to the menu with a 6502 RTS instruction, you will be instructed to:

Hit RETURN for menu

To return to the menu of commands,

You type: <RETURN>

NOTE: This menu item is strictly for very advanced Atari users. If you don't understand some of the terms and procedures discussed for using it, don't worry. That probably just means you don't have any need to use it.

3.7 How Do You "Initialize (a) Disk" From the Menu?

The "Initialize Disk" command allows you to format blank diskettes so that you may use them to store program and data files. If you wish to create a bootable diskette rather than just a data diskette, you will normally want to duplicate your DOS XL master disk. In this case you should use the "Duplicate Disk" command rather than the "Initialize Disk" command. If you want to duplicate any of your diskettes using the "Duplicate Disk" command, you do not need to format them first using the "Initialize Disk" command, for the "Duplicate Disk" utility will perform the format operation if you desire.

PROBLEM PREVENTOR: The "Initialize Disk" command writes entirely new information to the desired diskette, thus erasing completely all files which previously existed there. Carefully select the diskette to initialize to avoid accidentally destroying your program disks.

To use this command, select "I" when prompted for a command selection. At that point, DOS XL will check for the presence of the INIT.COM utility on the diskette in drive 1. If it is not there, you will be prompted:

Initialize Disk

Insert MASTER disk and hit RETURN

after which you should insert a DOS XL system disk which is of the same density as the diskette you remove from drive 1. Then hit the <RETURN> key.

The INIT utility program will be loaded into memory and you will be presented with the four options of the INIT program. They are:

1. Format disk only
2. Format disk and write DOS.SYS
3. Write DOS.SYS only
4. Reformat boot tracks only
5. Exit to DOS XL

PROBLEM PREVENTOR: The "I" (INIT) option may normally be used only to initialize diskettes of the same density as the operating density of the drive used for the initialization.

PROBLEM PREVENTOR: Normally, you should use the "Duplicate Disk" command to copy your DOS XL master to create a spare bootable disk. However, option 2 of the "Initialize Disk" command may be used to create a bootable disk. Do not, however, use option 2 if you have booted the system with an Optimized Systems Software SuperCartridge inserted. In that configuration, DOS XL will not properly write the DOS.SYS file. In order to use option 2 of the "Initialize Disk" command, first remove the SuperCartridge and then reboot the system. After using option 2 to create a

bootable disk, the DOSXL.SYS file should be copied onto that disk if it is to be used with a SuperCartridge.

PROBLEM PREVENTOR: You must not be using an extended memory copy of DOS XL while initializing new diskettes. You must use the standard version of DOS XL. (See discussion of the DOSXL.XL and DOSXL.SUP files elsewhere in this manual.) If you are using the OSS Supercartridge version of DOS XL (DOSXL.XL), then all you need to do is power off your computer, remove any Supercartridge, and then power your computer back on to reboot the standard DOS XL version. If you have a 64K Atari computer ("XL" series computer) and have renamed DOSXL.XL to DOSXL.SYS in order to use the extended memory, you must rename DOSXL.SYS to some other name (normally just DOSXL without the SYS extension), and then turn your computer off and then on again to reboot the standard DOS XL version. (Note: extended memory DOS XL users who use the DOSXL.XL copy of DOS may find it easier to simply keep some DOS system diskettes laying around which are not set up to use the extended memory, that way you can simply boot these diskettes instead of always renaming DOSXL.SYS to something else.)

PROBLEM PREVENTOR: When you use option 2 of the initialization menu, the copy of DOS XL which will be written to your newly initialized diskette will expect to find the menu program (MENU.COM) when the new diskette is booted. But, the initialization utility does not place MENU.COM on your newly initialized diskette for you. In order to boot this new diskette, you must first use the "Copy Files" command menu item to copy MENU.COM from one of your DOS XL system diskettes onto your newly initialized diskette. If you forget to do this, the new DOS XL diskette will start to boot but will "die" (stop working) before it says anything on the screen.

PROBLEM PREVENTOR: Option 4 of the initialization menu has to do with special formatting required for optimum performance under synchromesh. Specifying option 4 will destroy any existing data on your diskette. Refer to Section 14 of this manual for a complete discussion of synchromesh and its initialization requirements.

If you wish to create a bootable disk,

You type: 2<RETURN>

If you wish to create just a data disk,

You type: 1<RETURN>

Once you've selected your initialization option, you will be asked:

Drive (1,2,3,4):

You should respond with the desired drive number (always 1, if you have only one drive), followed by <RETURN>.

After selecting the drive to use for the initialization, you will be asked:

Option n drive n - Are you sure (Y/N)?

If you are happy with your entries so far,

You type: Y<RETURN>

Otherwise,

You type: N<RETURN>

If you typed "Y", the specified command will be executed. Once the initialization is completed, the initialization utility will prompt you with:

HIT RETURN FOR NEW FUNCTION

Once you press <RETURN>, you will again be presented with the four options

If you have more disks to initialize, repeat the above steps. Otherwise,

You type: 5<RETURN>

and you will be returned to the DOS XL menu.

3.8 How Do You "Load (a) Binary" File From the Menu?

The "Load Binary" menu item allows you to read a binary file from disk into the memory of your Atari computer. This command can be used to load binary object of assembly language programs, or binary data to be used by such programs. The file you wish to load should have previously been written to disk using the DOS XL menu "Save File" command, or an equivalent method.

PROBLEM PREVENTOR: Do not use this command to load Atari BASIC or BASIC XL programs into memory. Instead, just use the LOAD command from the BASIC cartridge (i.e., after you have been given the "READY" prompt).

To use the "Load Binary" command, type "L" when prompted to enter your command selection. The menu will then prompt:

Load Binary

Filename:

You should respond with the name of the previously saved file you wish to load. For example, if you wish to load into memory the file "FILE1.OBJ" on drive 1, you should type "D:FILE1.OBJ".

At this point, DOS XL will access the disk to read in the binary file. You will then be asked.

Hit RETURN for menu

To return to the DOS XL menu of commands,

You type: <RETURN>

NOTE: This menu item is intended for the very advanced Atari user. If you don't fully understand this discussion, don't worry about it. That probably just means you have no need to use this menu item.

3.9 How Do You "Protect Files" From the Menu?

In many cases you will have created files on your disks which you know you will hardly ever need to modify. There is a way to guard these files so that you need not worry about accidentally deleting or modifying their contents. The "Protect Files" command allows you to protect files from renaming, erasure, or modification. These files will then be preceded by an asterisk in a directory listing when you use the "Files on Disk" command. If in the future you desire to remove the protection afforded by this command, you should use the "Unprotect Files" command.

To use this command, select "P" when the menu prompts you for a command selection. The menu will then prompt:

Protect Files
Filespec to protect:

You should respond with the name of the file you wish to protect. If you wish to protect a group of files, you may use wild-card characters in the filespec. Wild-card characters are discussed earlier in this manual.

At this point the disk will be accessed and the files will be protected. The menu will then prompt:

Hit RETURN for menu

To return to the menu of commands,

You type: <RETURN>

3.10 How Do You "Quit to DOS XL" Command Level From the Menu?

The "Quit to DOS XL" command is used to pass control from the DOS XL menu to the DOS XL Command Processor. Although almost all the functions you need from DOS may be accomplished from the DOS XL menu, certain advanced commands and features are accessible only from the Command Processor mode.

To use this command, type "Q" when prompted by the menu to enter a command selection. At that point, control will be transferred to the Command Processor mode. In place of the menu, the prompt "D1:" will appear at the upper left corner of the screen. A short discussion of Command Processor mode (or command level) is provided later in this manual.

3.11 How Do You "Rename (a) File" From the Menu?

The "Rename File" command may be used to change the file name associated with a file of information. This command does not alter or delete any information contained in the file. Rather, the file will only show up with a different name in the directory listing when using the "Files on Disk" command.

PROBLEM PREVENTOR: If you attempt to rename a file which has been protected against modification (i.e., the file name is preceded by an asterisk in the directory listing), you will be given the error message "FILE PROTECTED". If you desire to rename this file, you must first remove the protection by using the DOS XL menu command, "Unprotect Files".

To use the "Rename File" menu item, select "R" when the menu prompt, "Enter your selection." appears. You will then be asked:

Rename File

Old name:

You should respond with the current name of the file whose name you wish to change. For example, if you want to change the name of the file "D:GEORGE" to "D:PROG1", you should type "D:GEORGE".

The menu will then respond,

New name:

At this point you should type the new name you wish the file to have. In the above example, you should type "PROG1" at this time. Notice that you must not use a device

specifier (i.e., D:, D2:, etc.) in the new name; you should type just "PROG1", not "D:PROG1".

You will then be asked,

Are you sure?

If you are satisfied that you have entered both file names correctly,

You type: Y<RETURN>

If instead you wish to abort the rename operation,

You type: N<RETURN>

If you answered with "Y", the designated file will be renamed, and you will be prompted:

Hit RETURN for menu

To return to the list of menu commands,

You type: <RETURN>

3.12 How Do You "Save (a) Binary File" From the Menu?

The "Save Binary" command allows you to write a portion of your Atari computer's memory to a disk file. This command can be used to save to disk binary object of assembly language programs, or binary data to be used by such programs.

PROBLEM PREVENTOR: Do not use this command to save Atari BASIC or BASIC XL programs from memory. Instead, just use the SAVE command from the BASIC cartridge (i.e., after you have been given the "READY" prompt).

PROBLEM PREVENTOR: If you attempt to save binary data to a file which has been protected against modification (i.e., the file name is preceded by an asterisk in the directory listing), you will be given the error message "FILE PROTECTED". If you desire to rename this file, you must first remove the protection by using the DOS XL menu command, "Unprotect Files".

To use the "Save Binary" command, type "S" when prompted to enter your command selection. The menu will then prompt:

Save Binary
Filename:

You should respond with the name you wish the saved file to have. For example, if you wish to write memory from locations \$4000 to \$4100 (the dollar signs indicate hexadecimal addresses) to the file "FILE1.OBJ" on drive 1, you should type "D:FILE1.OBJ".

It is recommended that binary object file names have either the extension "OBJ", or "COM". In the former case, "OBJ" would indicate that the file was an assembly language OBJECT file for a program or data. The second extension, "COM", indicates that the program is a system utility program which was either included with your DOS XL master disk or written by you or another user.

Once you've specified the file name and press <RETURN>, you will be prompted with:

Starting address:

You should respond with the hexadecimal value of the first address you wish to write to disk. In the above example, the starting address was \$4000 so you should type "4000". Note that although the value is hexadecimal, you should not precede the number with a dollar sign.

The menu will then prompt with:

Ending address:

You should respond with the hexadecimal value of the last address you wish to save. In the previous example, you should enter "4100".

At this point, DOS XL will access the disk to write out the binary file. You will then be instructed to:

Hit RETURN for menu

To return to the DOS XL menu of commands,

You type: <RETURN>

NOTE: This menu item is intended for use by very advanced Atari users. If you don't understand parts of the discussion of this menu item don't worry. Chances are you won't need to use this menu item anyway.

3.13 How Do You Go "To (a) Cartridge" From DOS XL?

The menu item "To Cartridge" permits you to instruct DOS XL to start running (transfer control to) an installed cartridge. (BASIC, for instance.)

To use this command, select "T" when prompted by the menu for a command selection. At that time, DOS XL will transfer control to any cartridge you have installed in your Atari. If the installed cartridge is Atari BASIC, you will then see BASIC's "READY" prompt. If you are using some other cartridge, you should see whatever prompt that

cartridge produces. If no cartridge was inserted, the error message "NO CARTRIDGE" will be displayed.

If the "To Cartridge" command is used after any of the following commands are selected:

- Copy Files
- Duplicate Diskette
- Initialize Diskette
- Extended Command
- Load Binary

a coldstart will be performed by the cartridge, thus erasing any program which was in memory. Therefore, if you wish to go to the menu to execute any of these commands, remember to first write any program you are working on to disk. This is accomplished in Atari BASIC or Optimized Systems Software's BASIC XL by using the SAVE command in the BASIC cartridge.

3.14 How Do You "Unprotect Files" From the Menu?

The "Unprotect Files" menu item removes the protection status placed on a file by the "Protect Files" menu item. This in turn allows these files be renamed, erased, or modified. These files will no longer then be preceded by an asterisk in a directory listing when you use the "Files on Disk" command.

To use this command, select "U" when the menu prompts you for a command selection. The menu will then prompt with:

Unprotect Files
Filespec to unprotect:

You should respond with the name of the file you wish to unprotect. If you wish to unprotect a group of files, you may use wild-card characters in the filespec. Wild-card characters are discussed earlier in this manual.

At this point the disk will be accessed and the files will be unprotected. The menu will then prompt with:

Hit RETURN for menu

To return to the menu of commands,

You type: <RETURN>

3.15 How Do You Perform An "Extended Command" From the Menu?

This command may be used to pass a command line to the DOS XL Command Processor. Although almost all the functions you need from DOS may be accomplished from the DOS XL menu, certain advanced commands and features are accessible only

from the Command Processor mode. The "Xtended Command" function of the DOS XL menu may be used to access from the menu those commands available only from the Command Processor. The Command Processor's commands are briefly discussed later in this manual.

To use the "Xtended Command" function, select "X" when prompted by the menu "Enter your selection.". At that time, the menu will prompt with:

Xtended Command
Command:

You should respond with the DOS XL command you wish to have executed. For example, if you wish to use the "RS232" command, you should type "RS232".

PROBLEM PREVENTOR: Many of the DOS XL commands accessible by the "Xtended Command" function perform their operations by loading utility programs from a DOS XL system disk. If you wish to use a command which employs a utility program (one of the ".COM" files on a DOS XL system diskette), you should insure that a DOS XL system disk is first inserted into drive 1.

Once you press <RETURN> after entering the extended command, the desired command will be passed to the DOS XL Command Processor and executed. When the command is finished executing, the menu will prompt you with:

Hit RETURN for menu

To return to the DOS XL menu of commands,

You type: <RETURN>

PROBLEM PREVENTOR: The following commands should not be used from the menu via the "X" command:

CONFIG SDCOPY INITDBL

These commands alter the density selection(s) for the disk drives and thus alter the amount of memory used for disk buffers. To be safe, always use them only from the Command Processor Level.

Section 4: THE DOS XL COMMAND PROCESSOR

4.1 Where Does The "Quit To DOS XL" Menu Item Leave You?

The DOS XL menu program is actually just a very special utility program which has been added to the DOS XL operating system itself. DOS XL normally likes to accept the commands you give it through its "Command Processor". This is a very fancy name for a piece of DOS XL which interprets the English-like commands you type into some action which DOS XL is to perform for you.

The menu utility program is really nothing more than a helper for the beginning DOS XL user. All it does is translate the little single letter menu selection you make into the harder to remember English like commands, and then sends these commands to the DOS XL Command Processor for the commands to be acted upon.

When you specify 'Quit to DOS XL' when using the DOS XL command menu program, the menu program essentially just stops running by transferring control of your Atari directly to the DOS XL Command Processor. When you are using the Command Processor rather than the menu, you are said to be at "Command Level". You can always tell when you are talking (using your Atari keyboard) to the DOS XL Command Processor, because the Command Processor will prompt you with

D1:

This "D1", which appears to the left of the cursor, serves two purposes. First, it is the Command Processor's prompt for you to enter a new command. Second, it indicates that drive one (D1:) is currently the "default" drive. The default drive is the one which DOS XL will use whenever you provide a filespec which doesn't explicitly give a disk drive device specifier. For instance, DOS XL would use the default drive when you use filespecs like GEORGE, HERNY.TXT, MYPROG.BAS. If you explicitly give a drive specification as part of your filespec (D1:GEORGE, D3:HENRY.TXT, D2:MYPROG.BAS), DOS XL will use the drive you explicitly specified. The default drive is also the one DOS XL will go to when you enter a Command Processor command which requires DOS XL to load a special utility program from your system diskette. For instance, the COPY command requires DOS XL to load the COPY.COM program from your currently selected default drive. Changing the default drive is discussed later in this section.

The way in which you must type any DOS XL command, along with the way you must type any required/optional additional information required by the command (the command parameters), is called the "syntax" of the command. If you do not type the command you wish to issue to DOS XL using the correct "syntax" for that command, DOS XL will either do the wrong thing (if it thinks you meant something else which it

did understand), or it will give you an error message telling you it didn't understand what you wanted.

In the descriptions of the commands below, special symbols are used to summarize each command's syntax. These symbols have the following meaning.

<> Angle Brackets: These are used to surround the description of a parameter. They are used to indicate that you are not supposed to type what appears between them as part of the command, but rather to substitute a file's name (<file-name>), a drive identifier (<drive-id>), or some other piece of information in place of the <token>. The <token>s are simply place holders for some other varying piece of information which you must supply. Exactly what you should substitute for each <token> depends upon the command you are issuing, and therefore each <token> you should give with a command is detailed with the discussion of that command.

<RETURN> This is a special <token> which is used to represent the key labelled "RETURN" on your Atari keyboard.

[] Square Brackets These are used to surround the sections of a command which are optional and therefore need not be typed. Square brackets are sometimes nested one inside the other. For instance, [[<drive-id>]<file-name>] indicates that the entire thing is optional and therefore need not be typed, or just <file-name> can be typed, or <drive id> and <filename> can be typed. However, <drive-id> cannot be typed alone.

Lower Case Letters: These are used for <token> names to further emphasize the fact that the <token> itself is not supposed to be typed, but rather some piece of information is supposed to be substituted for the <token>.

Upper Case Letters: Whenever upper case letters appear in a command description, they must be typed exactly as they appear (or not at all if, and only if, they appear as optional within square [] brackets).

Spaces (blanks): Spaces only appear in command descriptions where ever you must type them. Spaces are never placed in a command description simply to enhance readability.

Other characters: All other characters should be treated exactly like upper case letters. They must be typed exactly as they appear (or not at all if, and only if, they appear as optional within square [] brackets). The only exception to this is the hyphen/dash (-) which is often used as part of <token-names>.

4.2 DOS XL Intrinsic Commands

Intrinsic Commands are one class of commands which can be given anytime the Command Processor's prompt (D#:) appears. Intrinsic commands differ from extrinsic

commands by the fact that everything needed to process these commands is already contained within the DOS XL which was loaded into memory when you booted your system. DOS XL does not need to go back to your system diskette in order to get more information when you issue an intrinsic command, therefore you don't need to have your DOS XL diskette in the disk drive when you issue one of these commands

The following is a summary of the intrinsic commands:

```
@<batch-file>
CAR[TRIDGE]
D#
DIR[ECTORY] [<drive id>][<file spec>] <list-spec>
ERA[SE] [<drive-id>][<file-spec>]
LOA[D] [<drive-id>][<file-name>]
PRO[TECT] [<drive-id>][<file-spec>]
REM[ARK] <any-text>
REN[AME] [<drive id>]<old name> <new-name>
RUN [<entry-address>]
SAV[E] [<drive id>]<file name> <starting-address> <ending-address>
TYP[E] [<drive-id>]<file-name> <list-spec>
UNP[ROTECT] [<drive-id>]<filespec>
```

Note that all intrinsic commands may be abbreviated to their first three characters. As a matter of fact, DOS XL only looks at the first three characters while testing for an intrinsic command. Each of the commands will be covered in detail later in this manual, however, to give you a feel of the intrinsic commands, let's look at the DIRECTORY command. While looking at these examples, assume the "D1." at the beginning of each line is the default drive and has been displayed on the screen by the Command Processor.

```
D1 DIRECTORY
D1 DIRTY
D1 DIR
D1 DIR *.*
D1:DIR D1:
D1:DIR D1:*.
D1 DIR D2:
D1:DIR D2:*.
D1.DIR *OBJ
D1:DIR D2 *ASM
```

list names of all files on disk in drive one

```
.. .. .. .. ..
.. .. .. .. ..
.. .. .. .. ..
.. .. .. .. ..
.. .. .. .. ..
.. .. .. .. ..
.. .. .. .. ..
.. .. .. .. ..
.. .. .. .. ..
.. .. .. .. ..
```

list names of all files with .OBJ extension
list names of all files with .ASM extension
on drive two

4.2.1 How Do You Execute a Batch File From Command Level

Command Syntax:

@<batch-file>

Command Token(s):

<batch-file>

This is the name of the file containing the batch commands for DOS XL to be executing. Only the primary part of the file name can be given, DOS XL assumes the full name to be "<batch-file>.EXC".

Command Option(s):

None

Description:

The @ command tells DOS XL to begin taking commands from a batch file. This file is a text file which may contain both intrinsic and extrinsic DOS XL commands.

The "END" command is used within the batch file to tell DOS XL to stop taking its commands from the file and return to taking commands from the keyboard. In addition, the "CARtridge" command will cause DOS XL to return to taking commands from the keyboard after the "CARtridge" command has been executed.

See "Controlling DOS XL Without Being There" for more details.

Example(s):

Suppose the file TEST.EXC contains the following commands:

DIR D:<RETURN> DIR D2:<RETURN> END<RETURN>

Issuing the command:

@TEST<RETURN>

would tell DOS XL to start taking commands from the file "TEST.EXC". This would cause DOS XL to give a directory listing of the files on the diskette in drive one, followed by a listing of files on the diskette in drive two.

4.2.2 How Do You Go To a CARtridge From Command Level?

Command Syntax:

CARTRIDGE

Command Token(s):

None

Command Option(s):

None

Description:

The "CAR"tridge command allows the user to enter a cartridge from the command level of DOS XL. The cartridge will retain control of your Atari computer until a cartridge dependent command is given telling the cartridge program to return control to DOS XL. (For the Atari BASIC cartridge, this command is "DOS".)

SPECIAL NOTE: Some cartridges will not return control to DOS, normally because they are not intended to be used together with DOS. Most game cartridges are designed this way

If no cartridge is present, DOS XL will respond with an error message.

Example(s):

Given that the Atari BASIC cartridge is installed, typing:

CAR<RETURN>

will start BASIC running

4.2.3 How Do You Change The Default Drive From Command Level?

Command Syntax.

D<1-4>.

Command Token(s):

<1-4>

This indicates a single digit from "1" to "4" which indicates which drive is to become the new default drive.

Command Option(s):

None

Description:

Whenever the DOS XL's Command Processor is ready to accept a command from you, it prompts you with "D#:". This prompt serves a secondary purpose. It reminds you which disk drive is currently selected as the default drive.

Anytime you specify a filename to Command Processor (as part of either an intrinsic or extrinsic command), if you omit the disk specifier, the Command Processor prefixes the filename with the same three characters with which it prompted you. For example, when DOS XL is first booted, the current default drive is drive one, the Command Processor is prompting you with "D1:."; and the Command Processor would see a command like "PROTECT MYFILE.TXT" as "PRO D1:MYFILE.TXT".

If you have more than one drive, however, it is sometimes convenient to designate a drive other than drive one as the default disk drive. So, if you type "D2:" in response to the DOS XL prompt, the Command Processor will begin displaying a new prompt, "D2.", and any files given without a drive designator will be presumed to be on drive two.

Note that DOS XL actually supports D1: through D8:, but most standard drives may only be addressed as D1: through D4:.

SPECIAL NOTE: Unless DOS XL is modified as discussed under "What Do You Do If You Have More Than Two Drives?", it will only accept drives D1: and D2:.

Example(s).

Given that the Command Processor is currently prompting you with

D1:

if you typed:

DIR<RETURN>

you would then get a directory listing for the diskette in drive one. If you then typed:

D2:<RETURN>

the Command Processor would begin prompting you with

D2:

and if you then typed:

DIR<RETURN>

you would get a directory listing for the diskette in drive two since that would now be your default drive. Finally, typing:

D1:<RETURN>

would restore your default drive to being drive one.

4.2.4 How Do You Get a DIRectory listing From Command Level?

Command Syntax:

DIR[ECTORY] [<drive-id>][<file-spec>] [<list-spec>]

Command Token(s):

<drive-id>

This is an optional parameter which, if used, tells DOS XL to list the directory of files from the specified drive rather than the default drive. If <drive-id> is not included as part of the command, DOS XL will assume the default drive.

<file-spec>

This is an optional parameter which, if used, tells DOS XL to limit the directory display to just those files which meet the <file-spec>. Wildcard characters can be included as part of <file-spec> (see "So What is a Diskette File Anyway?" for discussion of wildcard characters), thus permitting DIRectory listings of certain groups of files.

<list-spec>

This is an optional parameter which, if used, tells DOS XL where to send the directory listing instead of the screen. See Problem Preventor note below.

Command Option(s):

None

Description:

The DIRectory command searches the disk directory of the specified disk (or the current default drive, if <drive-id> is omitted) for all files matching <file-spec>. The names of all files matching the specifier are then printed to the screen, together with the length of the file (in sectors). An asterisk preceding the file's name indicates that the file is protected from erasure, writing, or renaming.

If <list-spec> is included as part of the command, the directory listing will be sent to that file or device instead of to the screen.

PROBLEM PREVENTOR: If <list-spec> is a file rather than a device, the file should be on a drive other than the one from which the directory listing is being produced. Sending a directory listing to a file on the same drive as that from which the directory listing is being produced will not, in general, work.

Example(s):

For example, issuing the command:

DIR D1: P:<RETURN>

will send to the printer a listing of all files on drive one. And the command:

DIR AB*.C??<RETURN>

will display on the screen a listing of all files on the diskette in the default drive which match the file specification "AB*.C?". Given that the diskette contains the following files, the table show which files will be listed and which won't:

ABX.CXX	listed
ABX.BXX	not listed
ACX.CXX	not listed
AB.CUR	listed
BB.CUR	not listed
ABCDEF.CNN	listed
ABCDEF.BNN	not listed

And, just:

DIR<RETURN>

will display on the screen a listing of all files on the diskette in the default drive

4.2.5 How Do You **ERASE** Files From Command Level?

Command Syntax:

ERA[SE] [<drive-id>]<file-spec>

Command Token(s):

<drive-id>

This is an optional parameter which, if used, tells DOS XL to erase the files from the specified drive rather than the default drive. If <drive id> is not included as part of the command, DOS XL will assume the default drive

<file-spec>

This is a required parameter which tells DOS XL which file(s) are to be erased. Wildcard characters can be included as part of <file-spec> (see "So What is a Diskette File Anyway?" for discussion of wildcard characters), thus permitting the erasure of certain groups of files.

Command Option(s):

None

Description:

The ERASE command permanently removes files from a disk. All files matching the <file spec> on the specified drive (or the current default drive, if <drive id> is omitted) will be erased from the disk. These files will no longer be shown when a DIRectory command is issued, nor will they be available for any type of file access. If DOS XL cannot find any files on the diskette which match <file-spec>, it will respond with "FILE NOT FOUND"

PROBLEM PREVENTOR: This command causes the irreversible deletion of files from the disk. It should be used with care. Use the PROtect command to guard files against accidental erasure.

Example(s):

Typing the command.

ERASE *.BAK<RETURN>

will erase all files with an extension of .BAK that are unprotected and that reside on the current default drive. The command:

ERA D2:DUP.SYS<RETURN>

will erase the file named DUP.SYS from disk in disk drive number two. All UNProtected files on the default drive can be erased with the single command:

ERA *.*<RETURN>

PROBLEM PREVENTOR: Use this command with caution!

4.2.6 How Do You LOAD a Binary File From Command Level?

Command Syntax:

LOA[D] [<drive-id>]<file-name>

Command Token(s):

<drive-id>

This is an optional parameter which, if used, tells DOS XL that the file to be LOAded should come from the specified drive rather than the default drive. If <drive-id> is not included as part of the command, DOS XL will assume the default drive.

<file-name>

This is a required parameter which tells DOS XL which file is to be LOAded.

Command Option(s):

None

Description:

The LOAd command allows the user to load binary load image files into user memory. The files must be compatible with the normal binary object files used by Atari's own DOS. Such files are produced by Atari's Assembler/Editor Cartridge as well as most upgraded products such as Optimized Systems' ACTION compiler and MAC/65 assembler.

PROBLEM PREVENTOR: LOAding binary image files is a DOS XL function required by very advanced programmers. Most DOS XL users have no use for this command, and therefore need not understand how to use it.

Example(s):

Typing:

LOA FASTGAME.COM<RETURN>

will cause DOS XL to LOAd the binary image file FASTGAME.COM into memory. DOS will not automatically transfer control to this file (start it executing) unless the file contains certain load information which causes DOS XL to transfer control. See "Using DOS XL With Assembly Language" for a full discussion.

4.2.7 How Do You PROtect Files From Command Level?

Command Syntax:

PRO[TECT] [<drive-id>]<file-spec>

Command Token(s):

<drive-id>

This is an optional parameter which, if used, tells DOS XL to protect the files on the specified drive rather than the default drive. If <drive-id> is not included as part of the command, DOS XL will assume the default drive.

<file-spec>

This is a required parameter which tells DOS XL which file(s) are to be protected. Wildcard characters can be included as part of <file-spec> (see "So What is a Diskette File Anyway?" for discussion of wildcard characters), thus permitting the protection of certain groups of files.

Command Option(s):

None

Description:

The PROtect command protects files on a disk from future ERAsure, RENaming, or any other alteration (including the writing of any data into the file). All files matching the <file spec> on the specified drive (or the current default drive, if <drive id> is omitted) will be protected. These files will then be shown on a DIRectory listing with asterisks/stars (*) in front of their names. If DOS XL cannot find any files on the diskette which match <file spec>, it will respond with "FILE NOT FOUND"

Example(s):

Typing the command:

PROTECT *.BAK<RETURN>

will protect all files with an extension of .BAK that reside on the current default drive. The command:

PRO D2:DUP.SYS<RETURN>

will protect the file named DUP.SYS on the disk in disk drive number two. All files on the default drive can be protected with the single command:

PRO * * <RETURN>

4.2.8 How Do You **REName** a File From Command Level?

Command Syntax:

REN[AME] [<drive-id>]<old-name> <new-name>

Command Token(s):

<drive-id>

This is an optional parameter which, if used, tells DOS XL to rename the file on the specified drive rather than the default drive. If <drive-id> is not included as part of the command, DOS XL will assume the default drive

<old-name>

This is a required parameter which tells DOS XL which file is to be renamed

<new-name>

This is a required parameter which tells DOS XL what the new name of the file is to be

Command Option(s):

None

Description:

The **REName** command changes the name of a file on a disk from <old-name> to <new-name>. The renamed file will then be shown on a **DIRectionary** listing with its new name. If DOS XL cannot find a file on the diskette which matches <old-name>, it will respond with "FILE NOT FOUND".

PROBLEM PREVENTOR: Although DOS XL will accept wild card characters ("*" and "?") as part of <old-name>, **REName** should not be used with wild-card characters. Using wild card characters as part of the **REName** command can permanently damage your diskette directory, preventing you from accessing your files.

PROBLEM PREVENTOR: When using both DOS XL and Atari DOS, it is possible to use the rename command to create two files with the same name. If this condition occurs, use the **COPY** command with the query (-Q) option to transfer the two files to separate disks where they may then be renamed back.

Example(s).

Typing the command:

RENAME MYFILE.NEW MYFILE.OLD<RETURN>

will change the name of the file "MYFILE.NEW" on the default drive to "MYFILE.OLD". The command:

REN D2.HELLO.TXT GOODBYE.TXT<RETURN>

will rename the file "HELLO.TXT" on the disk in disk drive number two to "GOODBYE.TXT".

4.2.9 How Do You RUN a Machine Language Program From Command Level?

Command Syntax:

RUN [<entry-address>]

Command Token(s):

<entry-address>

This is an optional parameter which, if present, tells DOS XL the memory address to which control is to be transferred in order to begin execution of the machine language program. The address must be supplied as a hexadecimal number. If <entry-address> is not supplied, the address contained in the DOS XL "RUNLOC" field is used instead. See "Using DOS XL With Assembly Language" for a discussion of "RUNLOC".

Command Option(s):

None

Description:

The RUN command allows the user to execute a binary load image file once it has been LOAded into user memory. The correct <entry-address> or contents of "RUNLOC" (see "Using DOS XL With Assembly Language" for a discussion of "RUNLOC") are very dependent upon the particular machine language to be executed using the RUN command.

PROBLEM PREVENTOR: RUNNING binary image files is a DOS XL function required by very advanced programmers. Most DOS XL users have no use for this command, and therefore need not understand how to use it. Since there is no way for DOS XL to check and see if the <entry-address> supplied is actually the start of a valid machine language program, your Atari computer will probably "die" (stop talking to you) if you supply an invalid <entry-address> (or the contents of "RUNLOC" are invalid). If this happens, you will need to turn your Atari computer off and then on again in order to "bring it back to life" (reincarnate?) it.

SPECIAL NOTE: Many standard programs designed to be executed under DOS XL, as well as most of the DOS XL extrinsic commands, will set "RUNLOC" to their special re-execute (warm start) entry address. Thus, for example, if you return to the DOS XL Command Processor to perform only intrinsic commands, you may be able to

re-start the last program or DOS XL extrinsic command by simply typing "RUN<RETURN>". At the time of writing this, Optimized Systems' BASIC A+ and MAC/65 (for example) both support this capability: simply type "RUN<RETURN>" from Command Processor to re-start these two programs.

Example(s):

Typing:

RUN 4EFD<RETURN>

will cause DOS XL to transfer control of your Atari computer to the binary image file already loaded into memory and who's entry (first instruction) address is (hopefully) at 4EFD ("JMP \$4EFD"). Alternately:

RUN<RETURN>

will cause DOS XL to transfer control of your Atari computer to the binary image file already loaded into memory and who's entry address is (hopefully) contained in the DOS XL memory location "RUNLOC" ("JMP (RUNLOC)").

4.2.10 How Do You SAVe a Binary File From Command Level?

Command Syntax:

SAV[E] [<drive-id>]<file-name><starting-address><ending-address>

Command Token(s):

<drive-id>

This is an optional parameter which, if used, tells DOS XL that the file is to be SAVED to the specified drive rather than the default drive. If <drive-id> is not included as part of the command, DOS XL will assume the default drive.

<file-name>

This is a required parameter which tells DOS XL the name of the file under which to SAvE the binary memory image.

<starting-address>

This is the memory address, in hexadecimal, of the first byte which DOS XL is to write to the file.

<ending-address>

This is the memory address, in hexadecimal, of the last byte which DOS XL is to write to the file.

Command Option(s):

None

Description:

The SAVE command allows the user to write portions of memory to disk files in standard binary file format. The two addresses define the portion of memory to be written to disk; the second address must be greater than or equal to the first. A file which has been 'SAVED' may later be returned to memory using the LOAD command.

PROBLEM PREVENTOR: SAVING binary image files is a DOS XL function required by very advanced programmers. Most DOS XL users have no use for this command, and therefore need not understand how to use it.

Example(s):

The command:

SAVE PAGE4000 IMG 4000 40FF<RETURN>

will save the 256 byte "page" of memory at \$4000 to the disk file PAGE4000.IMG on the default drive.

4.2.11 How Do You TYPE a File To The Screen From Command Level?Command Syntax:

TYP[E] [<drive-id>]<file-name> <list-spec>

Command Token(s):

<drive-id>

This is an optional parameter which, if used, tells DOS XL which drive contains the diskette on which the file to be TYPed is located. If <drive-id> is not included as part of the command, DOS XL will assume the default drive.

<file-name>

This is a required parameter which tells DOS XL the name of the file you wish TYPed.

<list-spec>

This is an optional parameter which, if used, tells DOS XL where to send the typed file listing instead of the screen. This parameter can be used to specify either a device (such as "P." for the printer), or another disk file.

Command Option(s):

None

Description:

The TYPE command instructs DOS XL to copy a text file to the screen, another file, or device. If the optional <list-spec> is not specified, the text file you specify will be copied to the screen.

Example(s):

To view the commands in the "STARTUP.EXC" file included as part of your DOS XL System Master diskette from Future Systems, issue the command:

TYP STARTUP.EXC<RETURN>

(This command assumes that your DOS XL System Master diskette is in the default drive.) If the optional <list-spec> is specified, the text file will be copied to the <list-spec> device or file. For example, to copy the "STARTUP.EXC" file to the printer, issue the command:

TYP STARTUP.EXC P:<RETURN>

Another use of the TYPE command is to create a short text file. For instance, you can create a new "STARTUP.EXC" batch file via the following:

TYPE: STARTUP.EXC<RETURN>

This command tells DOS XL that you wish to copy text from the screen Editor to the disk file "STARTUP.EXC". See "How Do You Use Your Other Non-Disk Devices" for a discussion of the screen Editor ("E:" device). When the screen Editor is the source "file", as in this example, you are actually the source "file" since input from the screen Editor comes from the Atari computer's keyboard. This means you will require a way to tell DOS XL when you are finished typing the "source file". To do this, you hold down the key labelled "CONTROL" or "CTRL", and then type the "3" key. This will create a signal to DOS XL which tells it that you have finished typing the "source file". When you use the screen Editor as the "source file", you cannot use the cursor movement keys to edit any line on except the line you are currently typing. It is this restriction which makes this command a little difficult to use for creating anything but short text files.

Finally, the TYPE command may also be used to copy TEXT files from one disk file to another by using disk file names for both <file-name> and <list-spec>. For example:

TYP STARTUP.EXC UPSTART.EXC<RETURN>

will copy the "STARTUP.EXC" file to the "UPSTART.EXC" file.

4.2.12 How Do You UNProtect Files From Command Level?

Command Syntax:

UNP[ROTECT] [<drive-id>]<file-spec>

Command Token(s):

<drive-id>

This is an optional parameter which, if used, tells DOS XL to unprotect the files on the specified drive rather than the default drive. If <drive-id> is not included as part of the command, DOS XL will assume the default drive.

<file-spec>

This is a required parameter which tells DOS XL which file(s) are to be unprotected. Wildcard characters can be included as part of <file-spec> (see "So What is a Diskette File Anyway?" for discussion of wildcard characters), thus permitting the unprotection of certain groups of files.

Command Option(s):

None

Description:

The UNProtect command unprotects files on a disk, permitting future ERASure, RENaming, or any other alteration (including the writing of any data into the file). All files matching the <file-spec> on the specified drive (or the current default drive, if <drive-id> is omitted) will be unprotected. These files will no longer be shown on a DIRectory listing with asterisks/stars (*) in front of their names. If DOS XL cannot find any files on the diskette which match <file-spec>, it will respond with "FILE NOT FOUND".

Example(s):

Typing the command:

```
UNPROTECT *.BAK<RETURN>
```

will unprotect all files with an extension of .BAK that reside on the current default drive. The command:

```
UNPD2:DUP.SYS<RETURN>
```

will unprotect the file named DUP.SYS on the disk in disk drive number two. All files on the default drive can be unprotected with the single command

```
UNP *.*<RETURN>
```

4.3 DOS XL Intrinsic Batch Commands

Intrinsic batch commands differ from standard intrinsic commands since they are only functional when used inside a batch (EXC) file. Like standard intrinsic commands, intrinsic batch commands differ from extrinsic commands by the fact that everything needed to process these commands is already contained within the DOS XL which was loaded into memory when you booted your system. DOS XL does not need to go back to your system diskette in order to get more information when you issue an intrinsic command from within a batch file, therefore you don't need to have your DOS XL diskette in the disk drive because your batch file contains one of these commands. However, you may still need your DOS XL diskette in the drive if that is where the batch file from which DOS XL is taking its commands is located

The following is a summary of the intrinsic batch commands:

```
END  
NOS[CREEN]  
REM[ARK] [<any-text>]  
SCR[EEN]
```

Note that all intrinsic batch commands may be abbreviated to their first three characters. As a matter of fact, DOS XL only looks at the first three characters while testing for an intrinsic batch command.

4.3.1 How Do You END a Batch File?

Command Syntax:

END

Command Token(s):

None

Command Option(s):

None

Description:

The END command causes DOS XL to stop reading commands from a batch file and to resume prompting the user for commands. This command has no effect outside of a batch file.

Example(s):

Examples are provided under "How Do You Execute a Batch File From Command Level" and "Controlling DOS XL Without Being There", as well as with the examples for the other intrinsic batch commands.

4.3.2 How Do You Request NQ-Screen Output From a Batch File?

Command Syntax:

NOS[SCREEN]

Command Token(s):

None

Command Option(s):

None

Description:

Normally, all commands encountered during batch execution are displayed on the screen as if they were typed in by the user. The NOScreen command can be used to prevent the commands from displaying. All commands within the batch file will then no longer be displayed until the batch file is stopped for any reason or a SCReen command is encountered. This command is only effective from within a batch file

Example(s):

Given the execution of a batch file containing the following commands:

```
DIR<RETURN>
NOS<RETURN>
REM THIS MESSAGE WILL NOT BE DISPLAYED
DIR<RETURN>
SCR<RETURN>
REM THIS MESSAGE WILL BE DISPLAYED
DIR<RETURN>
END<RETURN>
```

all three DIRectory listing will appear on the screen, but the second DIRectory command itself won't be displayed by DOS XL (the second DIRectory listing will appear to have been produced for no reason). The SCReen command will reverse the effect of the NOScreen command, thus permitting the third DIRectory command to be displayed. The NOScreen command will be displayed by DOS XL because it has yet to be executed and therefore the displaying of commands has yet to be suppressed. Similarly, the SCReen command will not be displayed since it has yet to be executed and therefore the displaying of commands has yet to be resumed.

4.3.3 How Do You Display **RE**Marks From a Batch File?

Command Syntax:

REM[ARK] [<any-text>]

Command Token(s):

<any-token>

This can be any random text your little heart desires.

Command Option(s):

None

Description:

The REMark intrinsic batch command is used to place messages inside batch files which are displayed by DOS XL (provided NOScreen hasn't been executed) as the batch

file execution progresses DOS XL completely ignores this command except for displaying the command.

Example(s):

A batch file containing the following commands:

```
NOS<RETURN>
REM THIS MESSAGE WILL NOT BE DISPLAYED<RETURN>
SCR<RETURN>
REM THIS MESSAGE WILL BE DISPLAYED<RETURN>
END<RETURN>
```

will only display the second REMark command.

4.3.4 How Do You Request SCReen Output to Resume From a Batch File?

Command Syntax:

SCR[EEN]

Command Token(s):

None

Command Option(s):

None

Description:

Normally, all commands encountered during batch execution are displayed on the screen as if they were typed in by the user. The NOScreen command can be used to prevent the commands from displaying. All commands within the batch file will then no longer be displayed until the batch file is stopped for any reason or a SCReen command is encountered. This command is only effective from within a batch file.

Example(s):

Given the execution of a batch file containing the following commands:

```
DIR<RETURN>
NOS<RETURN>
REM THIS MESSAGE WILL NOT BE DISPLAYED
DIR<RETURN>
SCR<RETURN>
REM THIS MESSAGE WILL BE DISPLAYED
```

DIR<RETURN>
END<RETURN>

all three DiRectory listings will appear on the screen, but the second DiRectory command itself won't be displayed by DOS XL (the second DiRectory listing will appear to have been produced for no reason). The SCReen command will reverse the effect of the NOScreen command, thus permitting the third DiRectory command to be displayed. The NOScreen command will be displayed by DOS XL because it has yet to be executed and therefore the displaying of commands has yet to be suppressed. Similarly, the SCReen command will not be displayed since it has yet to be executed and therefore the displaying of commands has yet to be resumed.

4.4 Extrinsic DOS XL Commands

The extrinsic commands are machine language programs which are run by DOS XL's Command Processor. Any standard Atari binary file containing the ".COM" extension may be used as a DOS XL extrinsic command. The DOS XL "COPY" command is one such extrinsic command. If you perform the DiRectory command to view the contents of your DOS XL System Master diskette, you will see a file named "COPY.COM". The program in the "COPY.COM" file is what is executed when the "COPY" command is typed.

Remember, extrinsic commands are not actually part of the DOS XL operating system. Whenever an extrinsic command is executed from DOS XL, the system must go looking on the diskette for a ".COM" file associated with the particular extrinsic command issued and load that file into your computer. For example, when you issue the extrinsic command "DUPDSK" the system will go looking on the diskette in drive one for a file called "DUPDSK.COM". If no ".COM" file having the same name as the command is on the diskette, the system will respond with a "FILE NOT FOUND" error. So remember whenever you issue an extrinsic command to the system, its ".COM" file must be on the diskette for the command to execute properly.

Whenever you type any command to DOS XL, the first three characters of the command are compared to the intrinsic command list contained within the Command Processor. If the command is not in the intrinsic list, it is assumed to be extrinsic. Because the Command Processor first checks its own internal intrinsic command list, no extrinsic command program may start with three characters which match any of the intrinsic commands. For example, an extrinsic command program named "PROCESS3.COM" could not be executed by simply typing "PROCESS3", since DOS XL would view that as the intrinsic command "PROtect". There are two simple solutions to this problem should you encounter it:

1) Rename the extrinsic ".COM" file to a name which doesn't begin with an intrinsic command. Note: the ".COM" extension must still be used.

2) Execute the extrinsic command using a LOAD and then RUN intrinsic command sequence. For example, the extrinsic command "PROCESS3" could be executed by doing:

```
LOAD PROCESS3 COM<RETURN>
RUN<RETURN>
```

After the DOS XL Command Processor has searched its own internal list of intrinsic commands and found that the command you typed doesn't match any of those, it will do the following:

- 1) If you did not type a drive identifier ("D1.", "D2.", etc.) in front of your command, the Command Process will place the default drive identifier in front of your command.
- 2) Place the extension ".COM" after your command. Note: the Command Processor will place ".COM" after your command regardless of whether or not you specified a different extension, so it is not possible to override the ".COM" extension when issuing an extrinsic command.
- 3) Attempt to locate the ".COM" file on the specified drive. If it cannot locate the file, it will respond with a "FILE NOT FOUND" error.
- 4) Test the contents of the file to make sure it is proper Atari binary file format. See "How Do You LOAD a Binary File From Command Level?" for a discussion of the Atari binary file format.
- 5) Load the contents of the file (the program) into memory, and then execute the program.

NOTE: If the Command Processor has a problem performing any step in the above procedure, it will respond with an appropriate error message.

SPECIAL NOTE: The above procedure shows that you can prefix an extrinsic command with a drive identifier in order to cause the Command Processor to take the associated ".COM" file from a drive other than the default drive.

PROBLEM PREVENTOR: Never attempt to supply any extension (including ".COM") as part of any extrinsic command you type. As the above procedure shows, the Command Processor always appends the ".COM" extension to the extrinsic command you type regardless of when you have typed a different extension. This means that if you type the command "COPY.COM", the Command Processor will go looking for the program file "COPY.COM.COM" and, of course, not find it.

Most of the extrinsic commands you will use (such as "COPY") are supplied as part of your DOS XL System Master diskette. The number of possible extrinsic commands is not, however, limited to these few. If you have experience writing assembly/machine

language programs for your Atari computer, you can write an extrinsic command to perform virtually any function. See "Using DOS XL With Assembly Language" for a discussion of how to write extrinsic commands

SPECIAL NOTE: It is not possible to write extrinsic commands using Atari cartridge BASIC. Extrinsic commands must be in a machine language form in order for the Command Processor to execute them, and therefore either an assembler must be used (such as Atari's Editor/Assembler Cartridge), or a higher level language compiler (such as Optimized System's ACTION! Compiler).

Most of the extrinsic commands supplied on your DOS XL System Master diskette can be easily re-executed once they have terminated by simply issuing the RUN intrinsic command. Exceptions to this rule are the extrinsic commands "COPY", "SDCOPY" and "CONFIG". This feature may also work with other extrinsic commands you may have received from somewhere other than your DOS XL System Master diskette, it depends upon the particular extrinsic command.

PROBLEM PREVENTOR: You can only issue intrinsic commands between the time the extrinsic command terminated and you re-execute it using the RUN intrinsic command.

The following is a discussion of each extrinsic command supplied as a standard part of your DOS XL System Master diskette.

4.4.1 How Do You CLear a DISK From Command Level?

Command Syntax:

CLRDSK

Command Token(s):

None

Command Option(s):

None

Description:

This utility is used to force your non-Atari disk drive to initialize a diskette just like the Atari 810 disk drive does. Hopefully any program that does not work with a diskette initialized in your non-Atari disk drive will work after you initialize the diskette using the CLRDSK extrinsic command.

NOTE: CLRDSK formats the diskette first, then writes zeroes to all sectors except the directory, boot and VTOC sectors.

SPECIAL NOTE: Your Indus GT drive should not require the CLRDSK extrinsic command. The Indus GT initializes its single density diskette just like Atari's 810 drive when you use any of the other INITIALization extrinsic commands supplied with DOS XL. The CLRDSK extrinsic command has been distributed as part of your Indus GT DOS XL System Master diskette in case you own some other manufacturer's drive which does not perform diskette initializations properly. (Not everybody's perfect.)

Example(s):

With the DOS XL System Master diskette in drive one, and the default drive set to one (Command Processor is prompting you with "D1:."), you would type:

CLRDSK<RETURN>

Once the Command Processor loads and executes CLRDSK.COM, CLRDSK will ask you:

Drive to clear?

You can then respond by typing "1" followed by the <RETURN> key. This will tell CLRDSK you wish to clear the diskette you are about to insert into drive one. CLRDSK will then prompt you with:

Insert disk and hit return

This prompt allows you to remove your DOS XL System Master diskette and insert the diskette you wish to clear.

PROBLEM PREVENTOR: Whichever diskette you insert at this time will completely lose any information it may have previously contained, so it is not a good idea to choose the diskette on which you've placed all of your relatives addresses and birthdates (unless, of course, you wish to be dis-owned by your entire family).

Once you've inserted an "okay to erase" diskette, press the <RETURN> key to tell CLRDSK to proceed. The clearing process takes about one minute and fifty seconds to perform when using an Indus GT. Other manufacturer's drives will probably take longer. When CLRDSK has finished clearing your diskette, it will ask you:

Clear another disk?

to which you can either respond "Y" for yes followed by the <RETURN> key, or "N" for no followed by the <RETURN> key. If you respond with "N", CLRDSK will return you to the Command Processor. If you respond with "Y", CLRDSK will go back to the "Drive to clear?" question above.

4.4.2 How Do You CONFIGure Drive Densities From Command Level?

Command Syntax:

CONFIG [<setting>] [<setting>] [<setting>] [<setting>] [-N]

Command Token(s):

<setting>

These optional command parameters, if used, tells CONFIG how to configure one or more of the drives on your system. Each <setting> consists of two or three characters. The first character is always the number of the drive you wish to configure ("1"-"8"). The second one or two characters are used to specify the mode into which the drive is to be placed. "S" indicates single density, "D" indicates double density, and "DD" indicates double density and double sided. NOTE: Your Indus GT does not support the "DD" parameter, and the version of DOS XL supplied with your Indus GT does not support double sided drives. CONFIG does, however, still accept the "DD" parameter even though you should not use it.

Command Option(s):

-N

This command option, if used, tells CONFIG not to display the listing of how each drive attached to your system is configured

Description:

If no parameters are given, this command simply reports the configuration of all drives currently attached to your Atari computer.

If one or more parameters are given, they are presumed to be requests for CONFIG to tell the disk drives you specified (as the first character of each parameter) to configure themselves in the way you specified (as the second and third characters of each parameter). At the same time as CONFIG is telling your drives to change their operating modes/densities, it is also telling the DOS XL system itself that these changes are being performed. This is the very important difference between changing the operating densities of your Indus GT(s) using the CONFIG command rather than by using the front panel switches on your Indus GT(s). If you use the front panel switches on the Indus GT(s) to change their operating densities, the DOS XL system is never notified of the change, and therefore DOS XL and your Indus GT(s) get confused next time they try to talk to each other.

Normally, CONFIG will display a listing of all current configuration of all drives attached to your Atari. This listing will be suppressed if the "-N" option is used.

PROBLEM PREVENTOR: Do not try to re-CONFIGure the drive in which you have your DOS XL System Master diskette (usually drive one) unless you have a DOS XL System Master diskette recorded in the same density as that to which you are re-CONFIGuring the drive. If you do not have the second DOS XL System Master diskette

available, then, on the drive changes densities, it will no longer be able to read the "CONFIG.COM" program file off your system master diskette and therefore you will be unable to re-CONFIGure your drive again. You will then be forced to re-boot your Atari computer.

PROBLEM PREVENTOR: At the time of writing this, Atari did not supply a disk drive which will respond to the CONFIG command. The Atari 810 drive is only single density, and therefore attempting to re-CONFIGure it would be useless anyway. The Atari 815 drive (a seldom seen beast) is only double density, and therefore attempting to re-CONFIGure it would also be useless. And last, but not least, the Atari 1050 drive's enhanced density operating mode is not compatible with DOS XL (and most other drive manufacturer's double density modes), and therefore re-CONFIGuring the 1050 from single density (which is compatible with DOS XL) to double density (which isn't) would also be useless. Most other non-Atari disk drives support both single density and a DOS XL compatible double density, and therefore most of those drives will respond to a CONFIGure command. However, there may be limited cases in which a manufacturer's double density drive will not respond to the DOS XL CONFIGure command. If you have one of these drives, you should know that the drive would not be considered "industry standard"; and therefore you should contact the drive's manufacturer (or your dealer) to see if your drive can be adjusted. **NOTE:** If you have a single density only drive, then it would be acceptable for it to not respond to the CONFIGure command since it does not support a double density operating mode. All Indus GT drives do support the CONFIGure command.

Example(s):

With the DOS XL System Master diskette in drive one, and the default drive set to one (Command Processor is prompting you with "D1:"), if you typed:

```
CONFIG ID 2S<RETURN>
```

then once the Command Processor loads and executes CONFIG.COM, CONFIG would begin trying to "ask" each of the eight drives which DOS XL will support to answer back with their current operating density. If a particular drive number doesn't answer, CONFIG will assume that no drive is attached to your Atari with that given number. If the drive answers, but tells CONFIG that it doesn't understand CONFIG's request for operating density information, then CONFIG will assume that the drive is "unconfigurable" (such as Atari drives). If the drive does supply operating density information, CONFIG will assume that the drive is "configurable" and therefore CONFIG will accept a re-configuration parameter for that drive.

With the parameters listed in the example command above, if CONFIG found that drive one is configurable, it would then command drive one to change to double density operating mode. Likewise, if CONFIG found that drive two is configurable, it would

then command drive two to change to single density operating mode. Parameters given for non-attached/non-existent or unconfigurable drives are ignored by CONFIG.

Since the option "-N" command option was not specified as part of the example command, CONFIG would then go ahead and display a table of the status of all eight of the possible drives. The last thing CONFIG will do before terminating back to the Command Processor is to tell DOS XL to re-initialize itself (this is not quite as dramatic as booting). This is necessary due to the changes to the operating densities of some of the drives attached to your Atari computer.

4.4.3 How Do You COPY Files From Command Level?

Command Syntax:

COPY <source-spec> [<target-spec>] [-F][Q][S][W]

Command Token(s):

<source-spec>

This required parameter tells the COPY extrinsic command the name of the file (or group of files if the wild card characters "*" and/or "?" is used) which is to be copied to the target file(s). See "So What is a Diskette File Anyway?" for a discussion of wild-card characters. This parameter can optionally include a drive identifier in front of the source file name. If the drive identifier is not used, the default drive is assumed.

<target-spec>

This is an optional parameter which, if used, tells the COPY extrinsic command the name of the file (or group of files if the wild-card characters "*" and/or "?" are used) which is to receive the source file(s). See "So What is a Diskette File Anyway?" for a discussion of wild-card characters. This parameter can optionally include a drive identifier in front of the target file name. If the drive identifier is not used, the default drive is assumed. If no target filespec is given, but a target drive identifier is given, then COPY will assume that the target names are to be the same as the source names. If you omit the entire <target-spec> parameter, COPY will assume you wish to copy the files between two different diskettes using only a single drive. The target names will be assumed to be the same as the source names in this case.

Command Option(s):

-F

Unless you specify this command option, COPY will not overwrite a target file which already exists.

-Q

If you specify this command option, COPY will display each file before it is copied, and then ask you if you desire the file to be copied.

-S

If you specify this command option, you will be informing COPY that the copy is to be performed between two different diskettes using a single drive. This option will cause COPY to prompt you to exchange your source and target diskettes at the appropriate times during the copying process.

-W

Unless you specify this command option, COPY will attempt to begin the copying process just as soon as it is executed by the Command Processor. If you specify this command option, COPY will tell you it is waiting for you to insert the proper diskettes before it begins the copying processes. This option is normally used when either the source or target drive is the one from which the Command Processor must load "COPY.COM", but the diskette containing "COPY.COM" is not one of the diskettes involved in the copying process.

Description:

The COPY extrinsic command copies one or more files without making any changes in the source file(s). If you provide a <target-spec>, all files matching the <source-spec> will be copied to the files indicated by the <target-spec>, which may be on the same or a different diskette. If you omit <target-spec> from the command line, those files indicated by the <source-spec> would be copied to files having the same name on the same drive but different diskettes. This enables the copying of files between diskettes using just a single drive system.

PROBLEM PREVENTOR: COPY cannot be used to copy between diskettes of two different densities using a single drive. The "SDCOPY" extrinsic command must be used for this purpose. COPY can be used to copy between diskettes of different densities on two different drives, or between diskettes of the same density (either single or double) on a single drive.

PROBLEM PREVENTOR: The COPY extrinsic command should never be used to copy the file "DOS.SYS" onto another diskette. DOS.SYS is a special file which is handled in a very special way by DOS XL (in order to remain fully compatible with Atari's own DOS). Because of this special handling, using COPY to copy DOS.SYS will result in the target DOS.SYS file containing two copies of the DOS.SYS file; and in many cases the target diskette will be unbootable. Only the INITIALIZE extrinsic commands should be used to place a copy of DOS.SYS onto a diskette. After DOS.SYS has been placed onto a diskette using an INITIALIZE extrinsic command, an "all files" copy can then be performed (by specifying the "*" file name). Since you will already have placed DOS.SYS on the target diskette, COPY will ask if it is "OK to overwrite?" the DOS.SYS file. Simply answer "N" for "no", and COPY will move on to copying the other files.

PROBLEM PREVENTOR: When using COPY with only a single drive, it will not bother to ask you to "Insert 'from' disk and hit RETURN" if you answered an "OK to overwrite?" question with "N" for "no". Therefore, always remember to insert your "from" disk before answering this question with "N". COPY will remember to ask you to "Insert 'from' disk and hit RETURN" after it is done copying the file if you answered "OK to overwrite?" with "Y" for "yes".

Example(s):

With the DOS XL System Master diskette in drive one, and the default drive set to one (Command Processor is prompting you with "D1:"), if you type.

COPY *.*

then once the Command Processor loads and executes COPY.COM, COPY will begin to copy all files on the current diskette in the default drive to another diskette to be placed in the same drive. COPY will prompt you with

Insert 'to' disk and hit return

when it is time to swap diskettes. When you have swapped the diskettes, press the <RETURN> key to tell COPY that it may proceed. When COPY needs you to re-insert the first diskette again, it will prompt you with:

Insert 'from' disk and hit return

to which you should respond with the <RETURN> key once you've re-inserted the first diskette.

HELPFUL HINT: For this particular COPY function, the "DUPDSK" extrinsic command would generally be faster.

If you type the command:

COPY *.COM D3: -F

COPY will copy all files having an extension of ".COM" from the current diskette in the default drive to the current diskette in drive three (which, if drive three is the same as the default drive, will cause problems). If the file(s) already exist on the diskette in drive three, they will be erased and rewritten because of your specifying the "-F" command option.

If you type the command:

COPY D2:C*.* D1: -Q

COPY will ask you each time it finds a file starting with the letter "C" whether or not you wish the file to be copied from the diskette in drive two to the diskette in drive one. If you wish to tell COPY to copy the file, you should answer with "Y" for "yes" followed by the <RETURN> key. To tell COPY not to copy the file, you would answer with "N" for "no" followed by the <RETURN> key.

If you type the command:

COPY D1:TEST D2:NEWTEST

COPY will copy the file "TEST" on the diskette in drive one to the file "NEWTEST" on the diskette in drive two.

If you type the command:

COPY D1:TEST D1:NEWTEST -S

COPY will copy the file "TEST" on the diskette in drive one to the file "NEWTEST" on the diskette which you will place into drive one when requested by COPY.

4.4.4 How Do You DO Multiple Commands at Once From Command Level?

Command Syntax:

DO [<command>[;<command>[;<command>[;<command>[...]

Command Token(s):

<command>

This is an optional parameter which, if used, consists of various commands which you wish to issue in sequence. These <command>s are not restricted to just Command Processor intrinsic/extrinsic commands, see below.

Command Option(s):

None

Description:

The DO command can be used in two ways. The first way allows you to issue several commands on one line. The semicolon (;) is used to separate commands which DO should pretend are on separate lines. The second way, in which you do not enter anything after the DO command, causes the DO extrinsic command to prompt you for each command line you wish to be "DO"ed.

PROBLEM PREVENTOR: Some extrinsic commands which inspect the Command Processor's command line themselves to find parameters for their own use cannot be used with the DO extrinsic command. One example of such an extrinsic command is

the DOS XL 'COPY' extrinsic command. "COPY" will not work correctly with DO because, on execution, COPY inspects the command line to find its source and target file specifications.

Example(s):

An example of how the DO command is not restricted to just Command Processor intrinsic/extrinsic commands would be:

```
DO CAR;RUN "D1 MENU"<RETURN>
```

This DO command would result in the issuing of, first, a Command Processor CARtridge intrinsic command; and, second, an Atari BASIC cartridge RUN command. The two commands would, first, start the Atari BASIC cartridge executing (if inserted into your computer), and, second, tell Atari BASIC to RUN the BASIC program "MENU" from drive one. This would be a very common command to place into a "STARTUP EXC" file in order for your Atari computer to boot directly into running a BASIC program. See "What Does The STARTUP.EXC File Do?" for a further discussion.

As another example, the same sort of trick would work with Atari's Assembler/Editor Cartridge as well as Optimized System's MAC/65 Cartridge.

```
DO CAR;ENTER "D PROGRAM ASM",ASM,#P,#D OBJECT<RETURN>
```

In this example, the Assembler/Editor Cartridge would first be executed, then the cartridge would be instructed to enter (load) the assembler source file "PROGRAM.ASM" from the default drive; and then the cartridge would be instructed to assemble the source file into machine language.

4.4.5 How Do You Duplicate a Double Density Disk From Command Level?

Command Syntax:
DUPDBL

Command Token(s):
None

Command Option(s):
None

Description:

The DUPDBL extrinsic command will prompt you for the numbers of the drives containing the source and destination diskettes, and will ask whether it should format (initialize) the destination diskette prior to duplicating. The entire source diskette will then be copied to the destination diskette in a manner somewhat faster than the COPY extrinsic command would provide. The two diskettes, however, must be double density DOS XL diskettes originally formatted/initialized while using this version of DOS XL. If you specify that the destination drive is the same as the source drive, the program will prompt you to swap the diskettes when needed during the duplication process.

See "How Do You Copy Between Densities With Only One Indus GT?" or "How Do You Copy Between Densities Using Two Drives?" for a discussion of mixed density diskette duplication.

PROBLEM PREVENTOR: Do not attempt to use DUPDBL to duplicate single density diskettes. This can have disastrous results. The DUPDSK extrinsic command is designed for duplicating single density diskettes.

PROBLEM PREVENTOR: The DUPDBL extrinsic command will completely replace any information contained on whatever destination diskette you use with the information contained on the source diskette. If you use as a destination diskette a diskette which contains your secret formula for winning at the horse race track, you can forget about coming out ahead there for a while.

PROBLEM PREVENTOR: When DUPDBL is finished duplicating a diskette, it will ask you if you wish it to "Copy same disk again (Y or N) ?" You cannot safely duplicate a different source diskette by answering "Y" for "yes" to this question. In many cases, DUPDBL will still be holding some information in memory which came from the first source diskette, and if you tell DUPDBL to "Copy same disk again", it writes this information from the first source diskette to the new destination diskette, regardless of whether or not you changed source diskettes.

Example(s):

With the DOS XL System Master diskette in drive one, and the default drive set to one (Command Processor is prompting you with "D1:"), if you type:

DUPDBL<RETURN>

then once the Command Processor loads and executes DUPDBL.COM, DUPDBL will request:

Source Disk Drive (1,2,3,4):

to which you should respond with the number of the drive which (will) contain(s) your source diskette followed by the <RETURN> key. DUPDBL will then request:

Destination Disk Drive (1,2,3,4):

to which you should respond with the number of the drive which (will) contain(s) your destination diskette followed by the <RETURN> key. DUPDBL will then request

Format Destination Disk (Y or N):

to which you should respond with "Y" for "yes" followed by the <RETURN> key if your destination diskette is brand new and has yet to be initialized, or 'N' for "no" followed by the <RETURN> key if you are using an old diskette which was previously initialized.

At this point, DUPDBL is ready to begin; so it will prompt you with:

Put Source Disk In Drive #

where '#' is the drive number you specified as containing the source diskette. If you specified a different drive as containing the destination diskette, then DUPDBL will, at the same time, prompt you with:

Put Destination Disk In Drive #

where '#' is the drive number you specified as containing the destination diskette. The last thing DUPDBL will prompt you with is:

When Ready, Hit RETURN

You should place the indicated diskette(s) into the indicated drive(s) and then press the <RETURN> key to tell DUPDBL it can proceed. If you specified two different drives as source and destination drives, then DUPDBL will be able to complete the entire duplication process without any further assistance from you. If you specified the same drive for both source and destination, DUPDBL will prompt you with:

Put Source Disk In Drive #

when it needs to read the source diskette, and:

Put Destination Disk In Drive #

when it needs to write the destination diskette. After either of these prompts, DUPDBL will prompt you with:

When Ready, Hit RETURN

to notify you that you need to press the <RETURN> key in order for DUPDBL to proceed. When DUPDBL is finished duplicating your diskettes, it will ask you:

Copy same disk again (Y or N) ?

If you wish to make another duplicate of the source diskette, you should respond with "Y" for "yes" followed by the <RETURN> key. If you do not wish to make another duplicate, you should respond with "N" for "no" followed by the <RETURN> key (See Problem Preventor note above.) If you answer "yes", DUPDBL will prompt you for the destination disk. DUPDBL does not go back and re-ask you the drive number questions again. If you answer "no", DUPDBL will terminate and leave you back with the Command Processor.

4.4.6 How Do You DUPlicate a Single Density DISK From Command Level?

Command Syntax

DUPDSK

Command Token(s)

None

Command Option(s)

None

Description:

The DUPDSK extrinsic command will prompt the user for the drive numbers containing the source and destination diskettes, and will ask whether to format (initialize) the destination diskette. The entire source diskette will then be copied to the destination diskette in a manner somewhat faster than the COPY extrinsic command would provide. The two disks, however, must be of the same size and type. If the destination drive is the same as the source drive, the program will prompt the user to swap diskettes during the duplication process.

See "How Do You Copy Between Densities With Only One Indus GT?" or "How Do You Copy Between Densities Using Two Drives" for a discussion of mixed density diskette duplication.

PROBLEM PREVENTOR: Do not attempt to use DUPDSK to duplicate double density diskettes. This will have disastrous results. The DUPDBL extrinsic command is designed for duplicating double density diskettes.

PROBLEM PREVENTOR: The DUPDSK extrinsic command will completely replace any information contained on whatever destination diskette you use with the information contained on the source diskette. If you use as a destination diskette a

diskette which contains your automobile's mileage per tank full for the last five years, you can no longer get about computing your average miles per gallon for a while.

PROBLEM PREVENTOR: When DUPDSK is finished duplicating a diskette, it will ask you if you wish it to Copy same disk again (Y or N, ?). You cannot safely duplicate a different source diskette by answering 'Y' (or 'yes') to this question. In many cases, DUPDSK will still be holding some information in memory which came from the first source diskette, and if you tell DUPDSK to 'Copy same disk again', it writes this information from the first source diskette to the new destination diskette, regardless of whether or not you changed source diskettes.

Example(s).

With the DOS XL System Master diskette in drive one, and the default drive set to one (Command Processor is prompting you with 'Drive, if you type

DUPDSK<RETURN>

then once the Command Processor loads and executes DUPDSK.COM, DUPDSK will request:

Source Disk Drive (1,2,3,4):

to which you should respond with the number of the drive which (will) contain(s) your source diskette followed by the <RETURN> key. DUPDSK will then request:

Destination Disk Drive (1,2,3,4):

to which you should respond with the number of the drive which (will) contain(s) your destination diskette followed by the <RETURN> key. DUPDSK will then request:

Format Destination Disk (Y or N).

to which you should respond with "Y" for 'yes' followed by the <RETURN> key if your destination diskette is brand new and has yet to be initialized, or 'N' for 'no' followed by the <RETURN> key if you are using an old diskette which was previously initialized.

At this point, DUPDSK is ready to begin, so it will prompt you with:

Put Source Disk in Drive #

where "#" is the drive number you specified as containing the source diskette. If you specified a different drive as containing the destination diskette, then DUPDSK will, at the same time, prompt you with:

Put Destination Disk In Drive #

where "#" is the drive number you specified as containing the destination diskette. The last thing DUPDSK will prompt you with is:

When Ready, Hit RETURN

You should place the indicated diskette(s) into the indicated drive(s) and then press the <RETURN> key to tell DUPDSK it can proceed. If you specified two different drives as source and destination drives, then DUPDSK will be able to complete the entire duplication process without any further assistance from you. If you specified the same drive for both source and destination, DUPDSK will prompt you with:

Put Source Disk In Drive #

when it needs to read the source diskette, and:

Put Destination Disk In Drive #

when it needs to write the destination diskette. After either of these prompts, DUPDSK will prompt you with:

When Ready, Hit RETURN

to notify you that you need to press the <RETURN> key in order for DUPDSK to proceed. When DUPDSK is finished duplicating your diskettes, it will ask you:

Copy same disk again (Y or N) ?

If you wish to make another duplicate of the source diskette, you should respond with "Y" for "yes" followed by the <RETURN> key. If you do not wish to make another duplicate, you should respond with "N" for "no" followed by the <RETURN> key. (See Problem Preventor note above.) If you answer "yes", DUPDSK will prompt you for the destination disk. DUPDSK does not go back and re-ask you the drive number questions again. If you answer "no", DUPDSK will terminate, leaving you with the Command Processor.

4.4.7 How Do You INITialize a diskette From Command Level?**Command Syntax:**

INIT

Command Token(s):

None

Command Options(s):

None

Description:

The INIT extrinsic command allows you to initialize a diskette so that it may be read from or written to by other commands or programs. You must INITIALize brand new diskettes before your Atari can read or write information to/from them.

PROBLEM PREVENTOR: INITIALizing a diskette which has existing programs or data on it is a sure way of sending those programs or data into the great computerized black hole, from which no program or data has ever returned. This is, of course, okay if you no longer need those programs or data.

PROBLEM PREVENTOR: The extrinsic command INIT is only used to INITIALize diskettes in the same density as the current operating mode of the drive you select to perform the INITIALization. If you only have a single drive and only a single density DOS XL System Master diskette, you must use the INITDBL extrinsic command in order to create a double density system master diskette. See "How Do You Make A Double Density DOS XL Diskette?" for a discussion of exactly that subject. If you have two or more drives, you can re-CONFIGure one of your secondary drives into double density mode, and then use this INIT extrinsic command.

PROBLEM PREVENTOR: You should always use diskettes equal in quality to the information which you are storing onto them. If you don't value the programs or data which you are storing onto your diskettes, then feel free to use poor quality diskettes. If you value the programs or data you are storing onto your diskettes, use only good quality diskettes. We at Future Systems feel that if you felt enough about quality to purchase our Indus GT, you should also be using equivalent quality diskettes. Your diskettes work as a team with your disk drives; and if one member of the team is no good, then the entire team will look bad.

PROBLEM PREVENTOR: In almost every case, you will need to INITIALize a diskette which came from a non-Atari computer before you can use it on your Atari. And this INITIALization process will toss any programs or data into that same computerized black hole referenced above. Do not try to take a diskette from a non-Atari computer over to your Atari, then INITIALize it, and then try to read any programs or data which was recorded by the other computer using your Atari. This is not the way to do this! Trying to read information from diskettes used on one type of computer using another type of computer is an extremely complex job. If you are trying to do this, it is possible that some software company might have a program which will assist you; but at the time of writing this, we at Future Systems did not know of the availability of such a program

PROBLEM PREVENTOR: If you are using DOS XL with either an Optimized Systems' SuperCartridge or an Atari XL series computer, and the DOS XL System Master diskette from which you booted your system contains the file DOSXL.SYS, then do not use options two or three (see below) to write DOS.SYS (the DOS XL operating system file) to the disk. NOTE: Your original DOS XL System Master diskette from Future does not contain a DOSXL.SYS file, we have left it up to you to create this file just to be safe (see "What Do The DOS.SYS, DOS.XL, DOS.SUP, and DOSXL.SYS files do?"). In order to use option two or three, you must re-boot your system using a diskette which does not contain a DOSXL.SYS file. You can do this by either renaming DOSXL.SYS to some other file name (such as just DOSXL) on your current system master diskette, re-boot your system, perform your INITIALization, rename the file back to DOSXL.SYS, and finally re- boot your system again. Of course, an easier way to do this is to simply keep a system master diskette around which does not contain DOSXL.SYS on it. When you wish to INITIALize, simply boot that diskette.

PROBLEM PREVENTOR: Options two and three of INIT (see below) only write DOS.SYS to the diskette. They do not write DOSXL.SYS. If you are using a DOSXL.SYS file on your system, you will need to COPY it from one of your existing system masters over to any new existing master you create.

The INIT extrinsic command, when executed, will present you with a menu of the following options:

1. FORMAT DISK ONLY
2. FORMAT DISK AND WRITE DOS.SYS
3. WRITE DOS.SYS ONLY
4. REFORMAT BOOT TRACKS ONLY
5. EXIT TO DOS XL

Option one can be used to create what is commonly referred to as a "data diskette". A "data diskette" is normally a diskette which does not contain the operating system. (DOS XL in this case) and therefore cannot be booted. "Data diskette" is nothing more than a term someone invented to refer to such a diskette. There are no restrictions on what you can save onto a "data diskette". You can put program files, extrinsic command files, or any other types of files, as well as data files, onto a "data diskette". The advantage of creating a data diskette is that, without the DOS XL system files being on such a diskette, there is more room left for your own program or data files. It takes about 26 seconds for this option to be completed using an Indus GT, and possibly a little longer using a different diskette drive.

Option two creates a bootable system diskette. It starts by creating a "data diskette" just like in option one, but then finishes by adding the DOS XL system file "DOS.SYS" to the diskette. NOTE: Option two does not place any extrinsic command files, the MENU.COM (DOS XL menu) file, or the DOSXL.SYS file onto the diskette. These are all optional files as far as DOS XL is concerned, and therefore it leaves the COPYING of them onto the new diskette up to you. It takes about 35 seconds for this

option to be completed using an Indus GT, and possibly a little longer using a different diskette drive.

Option three can be used to convert a "data diskette" into a "system diskette" NOTE: This option only writes DOS.SYS and a little bit of other information necessary to make the diskette bootable onto the diskette. This option assumes that you have previously INITIALIZED the diskette using one of the other options. This option only writes the DOS.SYS file, just like option two. It takes about 10 seconds for this option to be completed using an Indus GT, and possibly a little longer using a different diskette drive.

Option four is used to reformat the boot or system tracks of a diskette that has been previously INITIALIZED while Synchronesh was active. A full discussion of Synchronesh and its operation appears in Section 14 of this manual, a thorough understanding of the Synchronesh information should be had prior to using Option four of the INIT menu.

Option five is "the way out". It tells INIT that you are finished INITIALIZING diskettes, and that you wish to return to DOS XL command level (or menu level if you came from the menu).

Example(s):

With the DOS XL System Master diskette in drive one, and the default drive set to one (Command Processor is prompting you with "D1:"), if you type

INIT<RETURN>

then once the Command Processor loads and executes INIT.COM, INIT will request:

1. FORMAT DISK ONLY
2. FORMAT DISK AND WRITE DOS.SYS
3. WRITE DOS.SYS ONLY
4. REFORMAT BOOT TRACKS ONLY
5. EXIT TO DOS XL

ENTER FUNCTION NUMBER:

The normal selection if you wish to create a new bootable DOS XL diskette would be to choose option two (format disk and write DOS.SYS). REMEMBER: As explained in the Problem Preventor note above, this option cannot be used if you booted using a DOSXL.SYS file. To choose option two, type "2" followed by the <RETURN> key. After you have chosen any option (except the exit to DOS XL option), INIT will request:

ENTER DRIVE (1,2,3 OR 4):

INIT is asking you for the number of the drive which (will) contain(s) the diskette to be INITIALIZED. Assuming you only have one drive, you would type "1" for drive one followed by the <RETURN> key. INIT will then confirm your entries shown below, then ask you:

FUNCTION 2; DRIVE 1

ARE YOU SURE (Y OR N): (don't answer this question until you read below)

If you respond "Y" for "yes" to the yes/no question, INIT will immediately begin initializing the diskette in the drive you specified. If you respond "N" for "no", INIT will return you to the INITIALIZATION options menu. Assuming everything is okay and you wish to proceed with initializing the diskette, make sure you have the diskette you wish to be INITIALIZED in the drive you specified, and then respond with "Y" for "yes" followed by the <RETURN> key.

INIT will then proceed to perform whatever INITIALIZATION option you selected. Once INIT is finished, it will respond with:

TASK TERMINATED NORMALLY

HIT RETURN FOR NEXT FUNCTION

INIT will, of course, respond with an appropriate error message rather than "task terminated normally" if something went wrong during the INITIALIZATION process. To return to the INIT options menu, type the <RETURN> key. From the menu, you can either initialize another diskette or "exit to DOS XI". Assuming that you have just INITIALIZED the only diskette you wish to INITIALIZED, select option "4" from the menu and INIT will return you to DOS XL.

4.4.3 How Do You INITIALIZE DOUBLE Density Disks From Command Level?

Command Syntax:
INITDBL

Command Token(s):
None

Command Options(s):
None

Description:

The INITDBL extrinsic command allows you to initialize a diskette in double density so that it may be read from or written to by other commands or programs. You must initialize brand new diskettes before your Atari can read or write information to/from them.

PROBLEM PREVENTOR: Initializing (INIT/INITDBL) a diskette which has existing programs or data on it is a sure way of sending those programs or data into the great computerized black hole, from which no program or data has ever returned. This is, of course, okay if you no longer need those programs or data.

PROBLEM PREVENTOR: The extrinsic command INITDBL is only used to initialize diskettes in double density when the operating mode of the drive you select is single density. If you have more than one drive, it would probably be better if you re-CONFIGure one of your secondary drives into double density mode, and then use the INIT extrinsic command.

PROBLEM PREVENTOR: Please read all the Problem Preventor notes under "How Do You INITIALize Diskette From Command Level".

The only function INITDBL performs is essentially a double density version of option two when using the INIT extrinsic command. INITDBL reconfigures the disk drive you specify into double density operating mode, commands the drive to initialize your diskette, then INITDBL writes a copy of DOS.SYS (the DOS XL operating system file) onto the diskette so that the diskette is bootable, and finally reconfigures the drive back to single density. (Note that once INITDBL reconfigures the drive back to single density, the drive can no longer read the double density diskette which is in it.) Once INITDBL is finished, the diskette will be a bootable double density DOS XL system diskette, but it won't contain any of the extrinsic command files or the DOS XL menu program MENU.COM. (Note: "How Do You Make A Double Density DOS XL Diskette?" explains the creation process for a complete double density DOS XL System Master diskette.)

PROBLEM PREVENTOR: The drive you specify for use with INITDBL must start out in single density mode; and once INITDBL has finished its work, it will return the drive to single density mode. This means that the drive will not be able to read the double density diskette it just created unless you re-CONFIGure the drive to double density. See "How Do You CONFIGure Drive Densities From Command Level?" for a discussion of the CONFIG extrinsic command, as well as a Problem Preventor note relating to re-CONFIGuring your first (or only) drive.

Example(s):

With the DOS XL System Master diskette in drive one, and the default drive set to one (Command Processor is prompting you with "D1:."), if you type:

INITDBL<RETURN>

then once the Command Processor loads and executes INITDBL.COM, INITDBL will then ask:

DRIVE TO INITIALIZE?

Assuming you only have one drive, you would type "1" for drive one followed by the <RETURN> key. INITDBL will then respond with:

INSERT DISK AND HIT RETURN

This gives you a chance to change diskettes in the drive before initialization begins. Once you have the diskette to be initialized in the drive you specified, type the <RETURN> key and INITDBL will initialize the diskette. This process takes about 40 seconds using an Indus GT, and possibly longer when using other manufacturers' drives. When INITDBL is finished, it will automatically terminate back to the Command Processor.

4.4.9 How Do You Get to the DOS XL MENU From Command Level?**Command Syntax:**

MENU

Command Token(s):

None

Command Option(s):

None

Description:

The MENU extrinsic command provides you with a simpler, although less powerful, way of commanding DOS XL to do your bidding. It was designed as a way for the beginning user to "get acquainted" with the features of DOS XL before becoming swamped by the DOS's almost infinite capabilities. The MENU extrinsic command is all that need be issued to go from command level to the DOS XL menu.

The entire "The DOS XL Menu" section of this manual is devoted to a discussion of how you can use the DOS XL menu.

Example(s):

With the DOS XL System Master diskette in drive one, and the default drive set to one (Command Processor is prompting you with "D1:."), if you type:

MENU<RETURN>

then once the Command Processor loads and executes MENU.COM, MENU will display the standard DOS XL menu:

Files on Disk	Protect Files
To Cartridge	Unprotect Files
Copy Files	Rename File
Duplicate Disk	Save Binary
Erase Files	Load Binary
Initialize Disk	Go to Address
Extended Command	Quit to DOS XL

The "The DOS XL Menu" section of this manual contains examples of using each one of the functions listed above.

4.4.10 How Do You Initialize Your Atari 850 RS-232 Ports?

Command Syntax:

RS232

Command Token(s):

None

Command Option(s):

None

Description:

If you do not own an Atari 850 Interface Module, then this command is of absolutely no use to you. The DOS XL RS232 extrinsic command is functionally equivalent to Atari DOS's AUTORUN.SYS file, which attaches the R: 850 RS-232 communications drivers to your operating system provided it finds an 850 Interface Module attached to your Atari Computer. When the RS232 extrinsic command is executed, it loads a small piece of control software which remains in your system until you reboot. This software handles the communications between your (or somebody else's) programs and the 850's RS-232 communication ports. This software is loaded into your computer's memory starting at the location pointed to by a system value called "LOMEM". Once the software is loaded, the value of "LOMEM" is adjusted to reflect the fact that this software is now resident inside your computer's memory.

PROBLEM PREVENTOR: If you do not own an 850 Interface Module then you need not understand this discussion at all. If you own an 850 Interface Module strictly for interfacing to a printer using the P: (printer) port and not the R: (RS-232) ports, then you need not understand this discussion. If you use software which requires the use of the RS-232 ports on your 850 Interface Module or you write strictly BASIC programs which use the RS-232 ports, then you should at least understand that part of the discussion which deals with executing the RS-232 extrinsic command. And finally, if you are an assembly language programmer, then you will also need to understand the adjustment of the "LOMEM" memory pointer. If you are an assembly language programmer, then you should also see "Using DOS XL With Assembly Language".

PROBLEM PREVENTOR: Due to a bug in the software contained with Atari's 850 Interface Module, hitting the <RESET> key will destroy the proper "LOMEM" value, effectively ignoring the space occupied by the RS232 communications software. See "What About Errors in the 850's RS-232 Driver?" for a discussion of a possible solution to this problem.

PROBLEM PREVENTOR: Atari's 850 Interface Module is sometimes too intelligent for its own good. In particular, you cannot generally re-execute the RS232 extrinsic command a second time without turning the 850 module off and back on again. This is because the RS232 extrinsic commands requires a special response from the 850 module during initialization, and the 850 module will generally only provide that response once after having been turned on.

Example(s):

With the DOS XL System Master diskette in drive one, and the default drive set to one (Command Processor is prompting you with "D1:"), if you type:

RS232<RETURN>

then once the Command Processor loads and executes RS232.COM, RS232 will initialize your 850 Interface Module, set up the resident communications driver, and then terminate back to command level.

Examples relating to the use of the RS-232 ports on your Atari 850 Interface Module are contained in the manual which came with your 850 module.

4.4.11 How Do You Make a Single to Double Density COPY?

Command Syntax:

SDCOPY <source-spec> [<target-spec>] [-F][Q][R][V]

Command Token(s):

<source-spec>

This required parameter tells the SDCOPY extrinsic command the name of the file (or group of files if the wild-card characters "*" and/or "?" are used) which is to be copied to the target file(s). See "So What is a Diskette File Anyway?" for a discussion of wild-card characters. The parameter should not include a drive identifier since SDCOPY assumes you will be using drive one (see Discussion below).

<target-spec>

This is an optional parameter which, if used, tells the SDCOPY extrinsic command the name of the file (or group of files if the wild-card characters "*" and/or "?" are used) which is to receive the source file(s). See "So What is a Diskette File Anyway?" for a discussion of wild-card characters. This parameter should not include a drive identifier in front of the target file name since SDCOPY assumes you will be using drive one (see Discussion below). If the drive identifier is not used, the default drive is assumed. If no target filespec is given, but a target drive identifier is given, then SDCOPY will assume that the target names are to be the same as the source names. If you omit the entire <target-spec> parameter, SDCOPY will assume you wish to copy the files between two different diskettes using only a single drive. The target names will be assumed to be the same as the source names in this case.

Command Option(s):

-F

Unless you specify this command option, SDCOPY will not overwrite a target file which already exists.

-Q

If you specify this command option, SDCOPY will display each file before it is copied, and then ask you if you desire the file to be copied.

-R

If you specify this command option, you will be informing SDCOPY that the copy is to be performed from a double density diskette to a single density diskette. This is reverse (-R) to SDCOPY's default direction of from a single density diskette to a double density diskette.

-V

If you specify this command option, SDCOPY will produce more verbose messages as the copying proceeds.

Description:

The SDCOPY extrinsic command copies one or more files, using only drive one, from a single density diskette to a double density diskette (or vice versa if you specify the -

R command option), without making any changes in the source file(s). If you provide a <target-spec>, all files matching the <source-spec> will be copied to the files indicated by the <target-spec>. If you omit <target-spec> from the command line, those files indicated by the <source-spec> will be copied to files having the same name on the target diskette.

PROBLEM PREVENTOR: SDCOPY cannot be used to copy between diskettes in two different drives. If you have more than one drive available, a far easier approach to copying between densities would be to CONFIGURE one drive to single density, and the other drive to double density, and then simply use the standard COPY extrinsic command. SDCOPY is a specialized extrinsic command which, if you are a single drive user, provides you with a means of copying files between two different density diskettes.

PROBLEM PREVENTOR: The SDCOPY extrinsic command should never be used to copy the file "DOS.SYS" onto another diskette. DOS.SYS is a special file which is handled in a very special way by DOS XL (in order to remain fully compatible with Atari's own DOS). Because of this special handling, using SDCOPY to copy DOS.SYS will result in the target DOS.SYS file containing two copies of the DOS SYS file; and in many cases the target diskette will be unbootable. Only one of the INITIALIZE extrinsic commands should be used to place a copy of DOS.SYS onto a diskette. After DOS.SYS has been placed onto a diskette using an INITIALIZE extrinsic command, an "all files" SDCOPY can then be performed (by specifying the "*.*)" file name). Since you will already have placed DOS.SYS on the target diskette, SDCOPY will ask if it is "OK to overwrite?" the DOS SYS file. Simply answer "N" for "no", and SDCOPY will move on to copying the other files.

PROBLEM PREVENTOR: SDCOPY will not bother to ask you to "Insert 'from' disk and hit RETURN" if you answered an "OK to overwrite?" question with "N" for "no". Therefore, always remember to insert your "from" disk before answering this question with "N". SDCOPY will remember to ask you to "Insert 'from' disk and hit RETURN" after it is finished copying the file if you answered "OK to overwrite?" with "Y" for "yes".

Example(s):

With the DOS XL System Master diskette in drive one, and the default drive set to one (Command Processor is prompting you with "D1:."), if you type:

```
SDCOPY *.*<RETURN>
```

then once the Command Processor loads and executes SDCOPY.COM, SDCOPY will begin to copy all files on the current single density diskette in the default drive to a double density diskette to be placed in the same drive. SDCOPY will prompt you with:

Insert 'to' disk and hit return

when it is time to swap diskettes. When you have swapped the diskettes, press the <RETURN> key to tell SDCOPY that it may proceed. When SDCOPY needs you to re-insert the first diskette again, it will prompt you with:

Insert 'from' disk and hit return

to which you should respond with the <RETURN> key once you've re-inserted the first diskette.

PROBLEM PREVENTOR: This is the only way to copy all the information from a single density diskette to a double density diskette when you only have a single drive. Because single density diskettes and double density diskettes have different sector sizes, none of the DUPLICATE DISK extrinsic commands can be used to convert information recorded on a single density diskette to double density format.

If you type the command:

SDCOPY *.COM -RF<RETURN>

SDCOPY will copy all files having an extension of ".COM" from the current double density diskette in drive one to a single density diskette to be placed in drive one when requested by SDCOPY. Note that the copy will be performed from a double density diskette to a single density diskette because you specified the "-R" for "reverse" option. If the file already exists on the single density diskette, it will be erased and rewritten because of your specifying the "-F" command option.

If you type the command:

SDCOPY C*.* -Q<RETURN>

SDCOPY will ask you each time it finds a file starting with the letter "C" whether or not you wish the file to be copied from the single density diskette to the double density diskette. If you wish to tell SDCOPY to copy the file, you should answer with "Y" for "yes" followed by the <RETURN> key. To tell COPY not to copy the file, you should answer with "N" for "no" followed by the <RETURN> key.

If you type the command:

SDCOPY TEST NEWTEST<RETURN>

SDCOPY will copy the file "TEST" from the single density diskette to the file "NEWTST" on the double density diskette.

If you type the command:

COPY TEST NEWTEST -R

COPY will copy the file "TEST" on the double density diskette to the file "NEWTEST" on the single density diskette which you will place into drive one when requested by SDCCOPY.

4.4.12 How Do You Cause DOS XL To VERIFY Or NOt VERIFY What It Writes?

Command Syntax:

VERIFY

NOVERIFY

Command Token(s):

None

Command Option(s):

None

Description:

These utility programs allow DOS XL to write information to the disk drive in either of two modes. In the "VERIFY" mode, every sector written to the disk is re-read and compared against the sector still in the computer's memory that was intended to have been written. If the sector does not pass this verifying check, an error 144 is returned to your computer and then to your program. In the "NOVERIFY" mode a re-read and compare after write is not performed.

It should be noted that the normal write process (without VERIFY turned on) produces extremely reliable results -- every sector written is re-read, and, although it is not compared with the sector in memory, it is checked for a correct CRC value. This CRC value is a complex mathematic operation that is performed on the data by the disk drive or computer prior to writing the particular sector. The chances are much less than one in a million that a sector could be written incorrectly and still match its originally calculated CRC value.

However, if you are running a program which is especially sensitive to data loss, or if you have a disk drive which is operating marginally, or if you are simply very cautious, you may wish to use DOS XL in the verify mode instead. To do so, simply type:

VERIFY

in response to the "D1:" prompt. Of course, to change your mind later, you may simply type:

NOVERIFY

instead.

Of course, to use either of these commands, the files **VERIFY.COM** and/or **NOVERIFY.COM** must be present on the disk. So use a copy of your master disk or copy these files to your working disk.

Section 5: THE DOS XL BOOT PROCESS

5.1 What Happens When DOS XL Is Booted?

The process of loading the DOS XL operating system into your Atari's memory is somewhat different than the process for loading other DOS's. Also, deleting or adding certain files to a bootable disk can affect what DOS XL will do while booting. In order for you to modify this process and thereby customize your system, this section describes the steps which are followed in the boot process.

5.2 What Do The DOS.SYS and DOSXL.SYS Files Do?

While most other DOS's reside only in the DOS.SYS file on a bootable disk, DOS XL actually occupies two separate files. The first file, DOS.SYS must be on any disk to make it bootable. At the beginning of the boot process, this file is loaded into memory. At that time, this DOS (it is actually a complete DOS in itself) checks to see if an Optimized Systems Software SuperCartridge is inserted. If not, the DOS begins to scan for the AUTORUN.SYS file (discussed later). If a SuperCartridge is inserted, the DOS tries to load the DOSXL.SYS file off of the disk. If this file is found it loads over the top of part of the DOS, already in memory and also into a portion of the SuperCartridge. This newly loaded code will then become the DOS of the machine. This DOS saves the user 5K of memory by occupying memory which is bank-switched with the SuperCartridge by taking advantage of special hardware within the cartridge. If you desire not to load this special DOS file, DOSXL.SYS, simply rename the file to a name other than DOSXL.SYS (perhaps SAVXL.SYS).

NOTE: The SuperCartridge is a product of Optimized Systems Software and is available from your local Atari dealer. For more information concerning the SuperCartridge, you should contact your dealer. The DOSXL.SYS version of DOS will not operate properly if Synchromesh is activated -- you can choose to take advantage of the extra storage that the DOSXL.SYS offers OR you can operate at Synchromesh speeds, but for the meantime, you cannot do both.

5.3 What Does The AUTORUN.SYS File Do?

Once the DOSXL.SYS file is either loaded or skipped, DOS XL searches the disk for a file called AUTORUN.SYS (note that there is no such file on the DOS XL master diskette which came with your Indus GT). If this file is found, it is loaded into memory just as if you had issued a "Load Binary" menu command.

The most common use Atari users find for the AUTORUN.SYS file is to load the RS-232 communications driver for their Atari 850 Interface Module into memory. Under DOS XL, this can be easily accomplished by simply renaming the file "RS232.COM" to "AUTORUN.SYS" on a copy of your DOS XL system diskette (never alter the original DOS XL System Master which came with your Indus GT). The RS232.COM file is discussed later in this manual.

5.4 What Does The STARTUP.EXC File Do?

If the file AUTORUN.SYS is not found, or if the program it contains returns to DOS in a special manner when it is completed (6502 RTS instruction), DOS XL will continue the boot process by searching for the file STARTUP.EXC. This file is a text file which contains commands for the DOS XL Command Processor to automatically perform. On your DOS XL System Master Diskette provided with your Indus GT there is a STARTUP.EXC file which contains REMARK commands for just printing messages to the screen, and the command MENU, which causes the Command Processor to automatically load and start the DOS XL menu. (A different method of automatically loading the command menu is discussed later)

PROBLEM PREVENTOR: Certain cartridge-based products, including Atari Writer from Atari, Inc., will not work properly if your boot disk contains a STARTUP.EXC file. If you are using a product such as Atari Writer, make a special boot disk as follows:

- 1) Duplicate your master disk onto a blank one.
- 2) Erase the file STARTUP.EXC on that disk

You should now use this disk for booting DOS XL before running Atari Writer or other cartridge based products which won't function correctly when using a DOS XL diskette which contains a STARTUP.EXC file.

5.5 What Does The MENU.COM File Do?

If the STARTUP.EXC file is not found, the final step of the boot process is the loading of the DOS XL menu. The DOS will search the disk for the file MENU.COM. If that file is found, it will be loaded into memory and will be given control of your Atari. If the file MENU.COM is not found, the DOS XL Command Processor will remain in control. Regardless of whether control is passed to the menu program or left with the Command Processor, if there is a cartridge inserted, final control will be given to that cartridge. A full discussion of the command menu program is provided earlier in this manual.

PROBLEM PREVENTOR: When you use option 2 of the Initialize Disk function from the DOS XL Menu, the copy of DOS XL which will be written to your newly initialized diskette will expect to find the menu program (MENU.COM, when the new diskette is booted. But, the initialization utility does not place MENU.COM on your newly initialized diskette for you. In order to boot this new diskette, you must first use the "Copy Files" command menu item to copy MENU.COM from one of your DOS XL system diskettes onto your newly initialized diskette. If you forget to do this, the new DOS XL diskette will start to boot but will "die" (stop working) before it says anything on the screen.

Section 6: DOS XL AND THE 850 INTERFACE MODULE

6.1 What Is The 850 Interface Module?

The 850 Interface Module is a special communications interface produced by Atari. It gives your Atari computer the ability to communicate with other computer devices and peripherals which use standard parallel (usually printers) and RS 232 serial (many printers, plotters, modems, etc.) communications techniques. In order to use the RS 232 serial type of communications provided by Atari's 850 Interface Module, you must first load a special piece of software (called a "driver") into your Atari computer's memory. Atari DOS 2.0S automatically loads this RS-232 device driver into your Atari computer's memory whenever you boot DOS 2.0S. Under DOS XL, you can also cause the RS-232 driver to be automatically loaded when the DOS is booted, but you also have other options.

If you don't happen to own an Atari 850 Interface Module, then you can save yourself some reading by skipping this section; you probably won't find it very useful.

6.2 How Do You Load The RS-232 Driver Under DOS XL?

When using Atari DOS 2.0S, the only way to load the RS-232 device driver (Rn) contained in the 850 Interface Module is through the use of an AUTORUN.SYS file. This option is also available to you as a DOS XL user, as discussed earlier as part of the AUTORUN.SYS file. Another option is, however, available to you. After booting DOS XL, you can simply issue the following commands:

1) From the DOS XL menu:

You type: X

(for eXtended command)

and then, when prompted for a command,

You type: RS232<RETURN>

2) Or, from the DOS XL Command Processor:

You type: RS232<RETURN>

Either sequence of commands will cause the RS-232 device driver which is actually contained within the 850 itself to be loaded into your Atari computer. You can then use the four RS-232 serial ports on your Atari 850 Interface Module exactly as described in the Atari manual which came with your 850.

6.3 What About Errors In The 850's RS-232 Driver?

PROBLEM PREVENTOR: Unfortunately, the device driver which loads in from the 850 Interface Module is not perfect. The most serious flaw occurs when you push the

[RESET] key after the RS-232 driver has been loaded into memory. Under certain circumstances, your Atari computer will "hang", freezing the keyboard, after pressing the [RESET] key. For this reason, many Atari reference books recommend that you never press [RESET] after loading the RS-232 driver. Under DOS XL, however, there is a solution to this and other problems. On your master diskette which came with your Indus GT there is a file called "RS232FIX.COM". This file is almost identical to the "RS232.COM" file which is normally used to load the RS232 handler. The difference is that RS232FIX attempts to correct some of the known bugs in the driver when the driver is loaded.

You may ask, "Why not just include RS232FIX on the DOS XL master disk and leave off RS232?" Well, Atari has produced several versions of the 850 Interface Module. Future Systems and Optimized Systems Software has almost no way of knowing whether RS232FIX works correctly with all 850 versions so, rather than introducing new problems, both the original RS232 and the modified RS232FIX are included.

To test the "RS232FIX.COM" file with your 850 module, either:

1) Using the DOS XL menu:

You type: X

(for eXtended command)

When prompted for a command,

You type: RS232FIX<RETURN>

2) Or using the DOS XL command processor:

You type: RS232FIX<RETURN>

If the RS-232 driver loaded in this way seems to work properly, you may use it exclusively for loading the RS-232 driver, ignoring the original RS232 command.

Section 7: SOME ADVANCED CAPABILITIES OF DOS XL

DOS XL is capable of performing several more advanced operations than those discussed in the previous chapters. Most of the advanced features are only accessible by using the DOS XL Command Processor (they are not directly contained as part of the command menu). Since a few of these advanced features may be required by beginning DOS XL users (depending upon exactly how many and which peripheral devices you own for your Atari), you may want to be or need to be familiar with these features. In particular, if you wish to transfer files from a single density diskette to a double density diskette (or vice versa) and/or if you wish to use more than two disk drives, you should read this section.

For most of the operations we will discuss in this section, you will be using the DOS XL Command Processor. As you probably recall from earlier discussions in this manual, you may leave the command menu and issue commands directly to the Command Processor by specifying the "Q" ("Quit to DOS XL") menu item. Once you've typed "Q" from the command menu, you will be greeted with the Command Processor's "D1." prompt; as also discussed previously in this manual. (If you have not read these previous discussions, you should do so now)

PROBLEM PREVENTOR: Always remember, when using the Command Processor's CONFIG, INIT, COPY, and SDCOPY commands, as described below, you must have a DOS XL system diskette in drive 1 when you type the command. If you do not, you will get a "FILE NOT FOUND" error message. This message will not be referring to any files you may have specified as part of your command, but rather to the fact that the utility program which the Command Processor required could not be found on the diskette.

7.1 How Do You Make A Double Density DOS XL Diskette?

This section assumes that you were shipped DOS XL in single density only. And since you have only a single density copy of DOS XL, we provide here two sets of step-by-step instructions on how to create a double density copy of DOS XL: one set of instructions for menu mode and one for command processor (advanced) mode. For both sets, the instructions assume that you have already booted a single density DOS XL diskette, and that you are using your Indus GT as drive one. NOTE: It may be possible to use another manufacturer's double density drive as drive one, it all depends upon how the other manufacturer's drive was designed (just being double density isn't enough). To be safe, you should use your Indus GT.

PROBLEM PREVENTOR: Do not use your original master disk from Future Systems for the procedure you are about to follow. Be sure and use a copy of your master, instead. Since you may need to rename a file, you cannot have a write protect tab on the DOS XL diskette you use (the computer will need to write on the diskette).

This can be very dangerous if you are using your only copy of DOS XL, hence the need for using only a copy of your master disk and never the original.

7.1.1 ...If I Want To Use The DOS XL Menu?

Step 1: Boot your copy of a single density DOS XL system diskette, then type "MENU" followed by the <RETURN> key. This will execute the DOS XL "MENU" program. NOTE: The MENU program will be automatically executed if you boot a duplicated copy of your DOS XL diskette from Future Systems. If your computer responds with BASIC's READY prompt, you must type DOS and then <RETURN> to reach the DOS and or DOS MENU.

Step 2: Select the "Files on Disk" menu item. DOS XL will then request "Filespec:". You should simply press the <RETURN> key. This step will give you a listing of all files on your DOS XL system diskette.

Step 3: Examine the list of files to see if the file "DOSXL.SYS" is listed. If it isn't, skip ahead to Step 7.

Step 4: Select the "Unprotect Files" menu item. DOS XL will then request "Filespec to unprotect.". You should respond with "DOSXL.SYS" followed by the <RETURN> key. This step will cause DOS XL to "unprotect" (allow you to rename or otherwise alter) the file "DOSXL.SYS". DOS XL has not actually altered the file, it has simply "unprotected" it.

Step 5: Select the "Rename File" menu item. DOS XL will then request "Old name.". You should respond with "DOSXL.SYS" followed by the <RETURN> key. DOS XL will next request "New name:". You should respond with "DOSXL" followed by the <RETURN> key. And, just to be safe, DOS XL will ask "Are You Sure?". You should respond with "Y" for yes followed by the <RETURN> key. This step will cause DOS XL to change the name of the file "DOSXL.SYS" to just "DOSXL" to insure that you are not running an extended memory copy of DOS XL (see Problem Preventor note under "How Do You Initialize a Disk From the Menu?").

Step 6: Turn your computer's power off and then on again. This step will cause your computer to re-boot a standard (not extended memory) copy of DOS XL. If the copy of DOS XL you booted doesn't automatically execute the DOS XL menu for you, then skip ahead to Step 8.

Step 7: Select the "Quit to DOS XL" menu item. DOS XL will then respond with "D1:". This step will cause DOS XL to terminate the menu program and leave you in Command Processor (advanced) mode.

Step 8: Type "INITDBL" followed by the <RETURN> key. The INITDBL program will request "Drive to initialize?". You should respond with "1" for drive one and then the

<RETURN> key. INITDBL will then request "Insert Disk and Hit Return". You should then remove your DOS XL system diskette and insert the diskette to be initialized. NOTE: This step will permanently erase any previous programs or data you may have on whatever diskette you insert (so please don't use the diskette containing your last seven year's tax records). Once you have inserted a diskette, press the <RETURN> key to tell INITDBL to begin. This process takes about forty (40) seconds using an Indus GT, and longer when using most other manufacturer's drives. When INITDBL is finished, "D1:" will be displayed. This step will initialize a diskette in double density

Step 9: Remove the new double density diskette from the drive and re-insert your DOS XL system master diskette. Then type "SDCOPY *.* -Q" followed by the <RETURN> key. The first thing the program SDCOPY will do is request "Insert disk(s) to be copied and hit return when ready". Since you will be copying the DOS XL system master diskette which you already have in the drive, simply press the <RETURN> key to tell SDCOPY to begin. Each time SDCOPY is about to copy the next file on your DOS XL system master diskette, it will ask you if you wish that file copied. Since you wish all the files to be copied (with the exception of DOS.SYS), you should respond with "Y" for yes followed by the <RETURN> key. For the file DOS.SYS, respond with "N" for no followed by the <RETURN> key. INITDBL has already placed DOS SYS onto your double density diskette, and if you tell SDCOPY to copy it, everything will get all messed up. DOS.SYS is the only file you should tell SDCOPY not to copy. SDCOPY should copy DOSXL.SYS, DOSXL.XL, and/or DOSXL SUP (if any of them are present) along with any other files. Whenever you tell SDCOPY to go ahead and copy a file, it will sometimes request "Insert 'to' disk and hit return" or "Insert 'from' disk and hit return". The "to" disk is your double density diskette, and the "from" disk is your DOS XL system master. Whenever SDCOPY displays one of these messages, simply insert whichever diskette is being requested and then press the <RETURN> key. When the SDCOPY process has been completed, "D1:" will be displayed. This step copies all the files from your single density DOS XL system master diskette to your new double density DOS XL system master diskette.

Step 10: Type "MENU" followed by <RETURN> to get back to the DOS XL menu.

Step 11: If you did not perform Steps 4 through 6 above (your "Files on disk" display did not contain the file 'DOSXL.SYS'), then you can skip ahead again to Step 14 at this point.

Step 12: Select the "Rename File" menu item. DOS XL will request "Old Name:". You should respond with "DOSXL" followed by the <RETURN> key. DOS XL will then request "New Name:". You should respond with "DOSXL SYS" followed by the <RETURN> key. And last, DOS XL will ask "Are You Sure?". You should respond with "Y" for yes followed by the <RETURN> key. This step will rename the file DOSXL back to DOSXL.SYS.

Step 13: Select the "Protect Files" menu item. DOS XL will request "Filespec to Protect:". You should respond with "DOSXL SYS" followed by the <RETURN> key

This step will cause DOS XL to re-"protect" the DOSXL.SYS file from any future alterations (until you ask DOS XL to "unprotect" it).

Step 14: Select the "Files on Disk" menu item. DOS XL will request "Filespec:". You should respond by typing just the <RETURN> key. DOS XL will then display the list of files on your single density DOS XL system master diskette. There are two things you should take note of on this display: the size (in number of sectors used) of the file "DOS.SYS" (this is the three digit number following the file name), and the number of "free sectors" which is displayed at the end of the list of file names. Remember both of these numbers for later.

Step 15: Turn your Atari computer off. Remove your single density DOS XL system master diskette from drive one. Insert your new double density DOS XL system master diskette into drive one. Turn your Atari computer back on again. This step will cause your Atari computer to re-boot DOS XL using the double density version.

Step 16: If, when you previously booted your single density DOS XL system master diskette, the menu program was automatically executed, then your new double density DOS XL system master diskette should also automatically execute the menu. If your double density DOS XL system master diskette doesn't automatically execute the DOS XL menu for you, you will need to type "MENU" followed by the <RETURN> key at this point (or type "DOS" and then <RETURN> if you were previously greeted by BASIC's READY prompt).

Step 17: If you did not perform Steps 4 through 6 above (your "Files on disk" display did not contain the file "DOSXL.SYS"), then you can skip ahead again to Step 22 at this point.

Step 18: Select the "Rename File" menu item. DOS XL will request "Old Name:". You should respond with "DOSXL" followed by the <RETURN> key. DOS XL will then request "New Name:". You should respond with "DOSXL.SYS" followed by the <RETURN> key. And last, DOS XL will ask "Are You Sure?". You should respond with "Y" for yes followed by the <RETURN> key. This step will rename the file DOSXL back to DOSXL.SYS on your double density DOS XL system master diskette.

Step 19: Select the "Protect Files" menu item. DOS XL will request "Filespec to Protect:". You should respond with "DOSXL.SYS" followed by the <RETURN> key. This step will cause DOS XL to re-"protect" the DOSXL.SYS file from any future alterations (until you ask DOS XL to "unprotect" it).

Step 20: If, at this point, you wish to re-boot your system using the extended memory version of DOS XL you were using before from your single density DOS XL system master diskette, turn your computer's power off and then on again. This step will cause your computer to re-boot the extended memory copy of DOS XL. If the copy of DOS XL you booted automatically executes the DOS XL menu for you, then skip ahead to

Step 22. Again, if you are greeted by BASIC's READY prompt, typing "DOS" and then <RETURN> will turn control back over to DOS.

Step 21: Type "MENU" followed by the <RETURN> key. This step will execute the DOS XL menu.

Step 22: Remove your new double density diskette from the drive and place a write protect tab over the write protect notch!! Remember, this is your new double density DOS XL system master diskette. Master diskettes should only be used to create other "work" diskettes on which you can place your own programs or data. You should not use your master diskettes as work diskettes.

Step 23: Select the "Files on Disk" menu item. DOS XL will request "Filespec." You should respond with just the <RETURN> key. DOS XL will then display all the files on your new double density DOS XL system master diskette. This listing will look just like the one from your single density diskette, with the exception of the number of sectors used by each file and the number of "free sectors".

Step 24: Compare the number of "free sectors" on the double density "Files on Disk" display with the number of "free sectors" you took note of from the single density "Files on Disk" display. You now have a lot more free sectors in which to store programs or data. (The miracles of modern science!)

Step 25: Compare the number of sectors used by the DOS.SYS files (the three digits following the file's name) with the number you took note of from the single density "Files on Disk" display. The reason why DOS.SYS uses half as many sectors on your double density diskette as it did on your single density diskette is because the sectors on your double density diskette are twice as large! This means all your files will use only half as many sectors on a double density diskette as they do on a single density diskette. So, not only does your double density DOS XL system master diskette have more free sectors available for use (since the files which are there are now taking up fewer sectors), but these free sectors can hold twice as much information. NOTE: A double density diskette has exactly as many sectors on it as a single density diskette, but double density sectors hold twice as much information as single density sectors. This means that only half as many double density sectors are required to hold the same amount of information, thus leaving more free sectors available for other information.

Step 26: Have fun with your new double density diskette and your Indus GT!!

7.1.2 ...If I Want To Use The Command Processor (Advanced) Mode?

Step 1: Boot your copy of a single density DOS XL system diskette. If the diskette you booted automatically executes the DOS XL menu for you, select the "Quit to DOS

XL" menu item in order to get back to Command Processor (advanced) mode. If you are greeted with BASIC's READY prompt, type "DOS" and then <RETURN>.

Step 2: Type "DIR" followed by the <RETURN> key. This step will give you a listing of all files on your DOS XL system diskette.

Step 3: Examine the list of files to see if the file "DOSXL SYS" is listed. If it isn't, skip ahead to Step 7.

Step 4: Type "UNP DOSXL.SYS" followed by the <RETURN> key. This step will cause DOS XL to "unprotect" (allow you to rename or otherwise alter) the file "DOSXL.SYS". DOS XL has not actually altered the file, it has simply "unprotected" it

Step 5: Type "REN DOSXL.SYS DOSXL" followed by the <RETURN> key. This step will cause DOS XL to change the name of the file "DOSXL.SYS" to just "DOSXL" to insure that you are not running an extended memory copy of DOS XL (see Problem Preventor note under "How Do You Initialize a Disk From Command Level?").

Step 6: Turn your computer's power off and then on again. This step will cause your computer to re-boot a standard (not extended memory) copy of DOS XL. If the copy of DOS XL you booted doesn't automatically execute the DOS XL menu for you, then skip ahead to Step 8. If you are greeted with BASIC's READY prompt, typing "DOS" and then <RETURN> will cause you to leave BASIC and enter DOS.

Step 7: Select the "Quit to DOS XL" menu item. DOS XL will then respond with "D1:". This step will cause DOS XL to terminate the menu program and leave you in Command Processor (advanced) mode.

Step 8: Type "INITDBL" followed by the <RETURN> key. The INITDBL program will request "Drive to initialize?". You should respond with "1" for drive one and then the <RETURN> key. INITDBL will then request "Insert Disk and Hit Return". You should then remove your DOS XL system diskette and insert the diskette to be initialized. NOTE: This step will permanently erase any previous programs or data you may have on whatever diskette you insert (so please don't use the diskette containing your last seven year's tax records). Once you have inserted a diskette, press the <RETURN> key to tell INITDBL to begin. This process takes about forty (40) seconds using an Indus GT, and longer when using most other manufacturer's drives. When INITDBL is finished, "D1:" will be displayed. This step will initialize a diskette in double density.

Step 9: Remove the new double density diskette from the drive and re-insert your DOS XL system master diskette. Then type "SDCOPY *.* -Q" followed by the <RETURN> key. The first thing the program SDCOPY will do is request "Insert disk(s) to be copied and hit return when ready". Since you will be copying the DOS XL system master diskette which you already have in the drive, simply press the <RETURN> key to tell SDCOPY to begin. Each time SDCOPY is about to copy the next file on your

DOS XL system master diskette, it will ask you if you wish that file copied. Since you wish all the files to be copied (with the exception of DOS SYS), you should respond with "Y" for yes followed by the <RETURN> key. For the file DOS SYS, respond with "N" for no followed by the <RETURN> key. INITDBL has already placed DOS SYS onto your double density diskette, and if you tell SDCOPY to copy it, everything will get all messed up. DOS.SYS is the only file you should tell SDCOPY not to copy. SDCOPY should copy DOSXL.SYS, DOSXL.XL, and/or DOSXL SUP (if any of them are present) along with any other files. Whenever you tell SDCOPY to go ahead and copy a file, it will alternately request "Insert 'to' disk and hit return" or "Insert 'from' disk and hit return". The "to" disk is your double density diskette, and the "from" disk is your DOS XL system master. Whenever SDCOPY displays one of these messages, simply insert whichever diskette is being requested and then press the <RETURN> key. When the SDCOPY process has been completed, "D1" will be displayed. NOTE: This step can be time consuming, but you shouldn't have to do it again some other time. This step copies all the files from your single density DOS XL system master diskette to your new double density DOS XL system master diskette.

Step 10: If you did not perform Steps 4 through 6 above (your "DIR" display did not contain the file "DOSXL.SYS"), then you can skip ahead again to Step 13 at this point.

Step 11: Type "REN DOSXL DOSXL.SYS" followed by the <RETURN> key. This step will rename the file DOSXL back to DOSXL.SYS

Step 12: Type "PRO DOSXL.SYS" followed by the <RETURN> key. This step will cause DOS XL to re-"protect" the DOSXL.SYS file from any future alterations (until you ask DOS XL to "unprotect" it).

Step 13: Type "DIR" followed by the <RETURN> key. DOS XL will then display the list of files on your single density DOS XL system master diskette. There are two things you should take note of on this display: the size (in number of sectors used) of the file "DOS.SYS" (this is the three digit number following the file name), and the number of "free sectors" which is displayed at the end of the list of file names. Remember both of these numbers for later.

Step 14: Turn your Atari computer off. Remove your single density DOS XL system master diskette from drive one. Insert your new double density DOS XL system master diskette into drive one. Turn your Atari computer back on again. This step will cause your Atari computer to re-boot DOS XL using the double density version.

Step 15: If, when you previously booted your single density DOS XL system master diskette, the menu program wasn't automatically executed, then your new double density DOS XL system master diskette shouldn't automatically execute the menu. If your double density DOS XL system master diskette does automatically execute the DOS XL menu for you, you will need to select the "Quit to DOS XL" menu item. (If your screen shows READY, type "DOS" and then <RETURN>)

Step 16: If you did not perform Steps 4 through 6 above (your "DIR" display did not contain the file "DOSXL.SYS"), then you can skip ahead again to Step 20 at this point.

Step 17: Type "REN DOSXL DOSXL.SYS" followed by the <RETURN> key. This step will rename the file DOSXL back to DOSXL.SYS on your double density DOS XL system master diskette.

Step 18: Type "PRO DOSXL.SYS" followed by the <RETURN> key. This step will cause DOS XL to re-"protect" the DOSXL.SYS file from any future alterations (until you ask DOS XL to "unprotect" it).

Step 19: If, at this point, you wish to re-boot your system using the extended memory version of DOS XL you were using before from your single density DOS XL system master diskette, turn your computer's power off and then on again. This step will cause your computer to re-boot the extended memory copy of DOS XL. If the copy of DOS XL you booted automatically executes the DOS XL menu for you, then you will need to select the "Quit to DOS XL" menu item. (A READY message on your screen can be replaced by DOS prompts by typing "DOS" and then <RETURN>).

Step 20. Remove your new double density diskette from the drive and place a write protect tab over the write protect notch!! Remember, this is your new double density DOS XL system master diskette. Master diskettes should only be used to create other "work" diskettes on which you can place your own programs or data. You should not use your master diskettes as work diskettes.

Step 21: Type "DIR" followed by the <RETURN> key. DOS XL will then display all the files on your new double density DOS XL system master diskette. This listing will look just like the one from your single density diskette, with the exception of the number of sectors used by each file and the number of "free sectors".

Step 22: Compare the number of "free sectors" on the double density "DIR" display with the number of "free sectors" you took note of from the single density "DIR" display. You now have a lot more free sectors in which to store programs or data. (The miracles of modern science!)

Step 23: Compare the number of sectors used by the DOS.SYS files (the three digits following the file's name) with the number you took note of from the single density "DIR" display. The reason why DOS.SYS uses half as many sectors on your double density diskette as it did on your single density diskette is because the sectors on your double density diskette are twice as large! This means all your files will use only half as many sectors on a double density diskette as they do on a single density diskette. So, not only does your double density DOS XL system master diskette have more free sectors available for use (since the files which are there are now taking up fewer sectors), but these free sectors can hold twice as much information. NOTE: A double

density diskette has exactly as many sectors on it as a single density diskette, but double density sectors hold twice as much information as single density sectors. This means that only half as many double density sectors are required to hold the same amount of information, thus leaving more free sectors available for other information.

Step 24: Have fun with your new double density diskette and your Indus GT!!

7.2 How Do You Use Two Drives in Different Densities?

DOS XL version 2.351 is compatible with and capable of controlling any mixture of up to eight single density and/or double density (Indus GT) disk drives. If you have one or more drives only capable of single density (such as Atari's 810 or, when under DOS XL version 2.351, Atari's 1050) as well as one or more Indus GT's capable of double density operation, we would suggest that you connect your double density Indus GT drive as drive 2 while creating your first double density DOS XL system diskette, and then as drive 1 for long-term usage. (See your Indus GT Owners Manual for switch settings, etc.). The long-term setup will allow you to boot DOS XL in either single or double density mode.

Although your Indus GT drive is capable of either single or double density operation, you can generally predict which density it will be in when power to your Atari computer is turned on. If it is drive 1, it will automatically acquire the density of the DOS XL diskette you are booting. If it is other than drive 1, your Indus GT will use the following rules to determine which density it is operating under, with rule 1 being first priority:

- 1) If there is a diskette in the drive, it will automatically change (if necessary) to operate in the density of that diskette when it receives its first command from DOS XL. (The only exception to this is if the first command is to format the diskette.)
- 2) If there is no diskette in the drive, but there has been a diskette read or written (accessed) by that drive since the drive was turned on, the drive will remain in the density of the last diskette which was accessed.
- 3) If the drive has not accessed a diskette since it was turned on, it will default to using the density switch setting on the back of the drive. (See your Indus GT Owners Manual.)

PROBLEM PREVENTOR: Since rule 3 is last priority for your Indus GT in determining the density under which it will be operating, you can see that the switch on the back of the Indus GT is certainly not a "force the density" switch. The diskette currently in the drive, or the diskette which was last in the drive, has more influence over the drive's operating density than the back panel switch.

There are, of course, no switches to be set on single density only drives like the Atari 810 or, in the case of using DOS XL and even Atari DOS 2.0S, the Atari 1050 drive.

DOS XL as shipped is set up to handle one or two disk drives and up to three simultaneously open files in double density mode (i.e., Three BASIC "OPEN" statements without an intervening "CLOSE"). If you own three or more disk drives, or you require more files open at one time, you must change some of the settings contained within DOS XL. This is discussed later in this manual

While booting, DOS XL automatically asks each drive the density under which the drive is operating. From then on, if you want to change a drive's density (by changing the diskette in the drive to one of a different density), you must use the CONFIG command from DOS XL's Command Processor. You should never use the front panel buttons to change the Indus GT's operating density since this will not notify DOS XL that a change has occurred.

CONFIG has several advanced options, which are discussed elsewhere in this manual. For our purposes, however, we need to learn three of its abilities before going on. Remember, the following commands must be performed using the Command Processor and not the menu, so you will have to use "Q" to get out of the menu first.

1 If you wish to find out what density DOS XL believes each drive is, following the Command Processor prompt:

D1:

You type: CONFIG<RETURN>

The table which is printed will tell you the density under which each disk drive is operating as well as other information regarding your drives. If a drive is not capable of double density operation, it is noted as "can't configure". Up to eight drives will be reported, and the system will even tell you which drives you don't have.

2. If you wish to change a drive from single to double density, following the Command Processor prompt:

D1:

You Type: CONFIG 1D<RETURN>

or you type: CONFIG 2D<RETURN>

or any other drive number which you wish to change.

In general, you specify the drive number you want to configure and then use a "D" to indicate double density. Any configurable drive may be changed this way. When

CONFIG does its thing, it will also print the complete drive table to show you the change. If you first set your Indus GT to display the drive's type information (use the "DRIVE TYPE" button on the front of your Indus GT), you will be able to see the drive change from type "A" (single density, or "Atari 810 emulation mode") to type 'b' (lower case "B" for double density, or "Atari 815 emulation mode")

PROBLEM PREVENTOR: If you use CONFIG to change the density of the drive in which you have your DOS XL system diskette, then the drive will no longer be able to read that diskette. Since CONFIG is a program which DOS XL must load off the diskette in order to change the drive's density back to its original density, this will cause you a problem unless you have already created a copy of your DOS XL diskette in the correct density. Essentially this means that you should wait to try this little CONFIG trick until you read through this entire discussion.

3. If you wish to change a drive from double to single density, following the Command Processor's prompt:

D1:

You Type: CONFIG IS<RETURN>

or you type: CONFIG 2S<RETURN>

In general, you specify the drive number you want to configure and then use an "S" to indicate Single density. Any configurable drive may be changed this way. Just like when changing to double density, CONFIG will print a new drive table.

7.3 How Do You Initialize Different Density Diskettes?

As was noted in the previous discussion concerning the "Initialize Disk" menu item, that menu item should only be used to initialize a disk which is the same density as the booted master disk (or the current operating density of whichever drive is being used for the diskette initialization). Using the Command Processor, however, there are several other possibilities. And there is one exception.

1. If you have a single drive system, you may initialize a double density diskette even if you have booted a single density master (as is the case with the DOS XL System Master which came with your Indus GT). To do so, following the Command Processor prompt:

D1:

You Type: INITDBL<RETURN>

INITDBL is a Command Processor command which, when it has loaded from the DOS XL master disk, will simply ask you which drive you wish to use (presumably 1, in this case) It will then automatically configure the drive to double density, format the diskette, write DOS SYS to the diskette, and then reconfigure the drive back to single density.

PROBLEM PREVENTOR: Do not use INITDBL when you have booted a double density master disk Use menu option "I" instead.

2 If you have a multiple drive system, you may use CONFIG to configure drive 2 (or 3 or any other drive) to the density you desire. Then, following the Command Processor prompt:

D1:

You Type: INIT<RETURN>

and the INIT utility will load and run, presenting choices identical to those presented by the "I" menu option. Or, following the Command Processor prompt

D1.

You Type: MENU<RETURN>

and the DOS XL menu will be reloaded and reactivated, and you may then use menu option "I". The actual rule is that you may initialize any diskette to the density of the drive it is placed in.

7.4 How Do You Copy Between Densities With Only One Indus GT?

This section applies only to those with one drive and that drive must be an Indus GT. If you have two or more drives, see the next section.

If you would like to copy one or more files from a single density diskette to a double density diskette (or vice versa), you must first have a diskette which has been formatted (initialized) to the proper density. If you do not have such a diskette, we suggest that you read the discussion above for assistance in initializing such a diskette.

Then, after having used the 'Q' option of the menu, and following the Command Processor prompt:

D1.

you type:

SDCOPY D1:*. * D1:*. * -Q<RETURN>

or you type:

SDCOPY D1:*. * D1:*. * -QR<RETURN>

The first form will copy files from single to double density. The second form will copy files from double to single density.

SDCOPY will load in and then allow you to place your source ("from") diskette (in case it's not the system diskette already in the drive) in the drive. SDCOPY will then read the directory of the source disk and give you a chance to say Yes or No about each file in the directory. If you answer Yes, the file will be copied to your destination ("to") disk. Since you have only a single drive, you will have to swap diskettes at least once for each file (long files may require two or three swaps). SDCOPY will tell you when it needs the diskettes to be swapped.

SUGGESTION: Remove any cartridges from your Atari if you are copying any large files. This may allow SDCOPY to copy these files in fewer swaps, since the cartridge space can then be used by SDCOPY (This does not apply to Optimized Systems Software's SuperCartridges, which already automatically release their space to DOS XL)

7.5 How Do You Copy Between Densities Using Two Drives?

If you own two or more drives, you may instead use the standard "Copy Files" command (option "C" of the menu) to transfer files between single and double density. First, however, you must ensure that your drives are appropriately configured.

Since you presumably have booted your double density master diskette on drive 1, we suggest that you use "CONFIG 2S" (discussed above) to place drive 2 in single density mode (unnecessary, of course, if drive 2 is an Atari 810 Disk Drive, since it is always single density).

Remember, in order to use option "C" (for Copy) after using CONFIG, you must follow the Command Processor prompt:

D1:

with the command: MENU<RETURN>

This will command the Command Processor to reload the DOS XL menu and reactivate it. You may then choose option "C". When asked for "from" and "to" file names, be sure and specify "D1:" and "D2:", as appropriate. (If you make a mistake, Copy will

probably not find the file names you are looking for, so no harm will be done. Just reverse the drive specifiers and try again.)

PROBLEM PREVENTOR: You may not use menu option "D" (Duplicate disk) to copy from a double density to single density diskette or vice versa! Strange and disastrous things will occur if you attempt to do so. Duplicated disks are literally duplicates, including the fact that the densities must be the same.

7.6 What Do You Do If You Have More Than Two Drives?

DOS XL, as it is shipped with your Indus GT, is set up to handle one or two disk drives and up to three simultaneously open files in double density mode (i.e., three BASIC "OPEN" statements without an intervening "CLOSE"). If you own three or more disk drives, or you require more files open at one time, you must change some of your DOS XL's default settings. DOS XL refers to the default setting associated with the number of drives you own as DRVBYT (you don't need to understand these names).

The default setting referred to as DRVBYT controls how many drives to which your DOS XL is willing to talk. DRVBYT is set to the value 3 (this doesn't mean three drives) on the DOS XL diskette which came with your Indus GT.

The following table gives the values to which DRVBYT will need to be changed in order to use more drives:

Value	Number of Drives
1	1 Only
3	1 or 2
7	1 to 3
15	1 to 4
31	1 to 5
63	1 to 6
127	1 to 7
255	1 to 8

Before you can change the DRVBYT value, you will need to create a new DOS XL system diskette (if you haven't already done so) which can be updated with the new value. Never alter the DOS XL System Master Diskette which came with your Indus GT.

Problem Preventor: The BASIC cartridge, like some other cartridges, have some conflicts when a STARTUP.EXC file exists on the copy of DOS that is booted into the computer's memory (this is true even if the BASIC cartridge is already built into your computer -- as with the 600XL and 800XL models). The following instructions may not work unless the copy of DOS which you boot prior to performing these steps is free of any STARTUP.EXC files.

In order to change the DRVBYT value, perform the following steps (this requires an Atari BASIC cartridge):

- 1) Turn you Atari computer's power off.
- 2) Insert your Atari BASIC cartridge into your computer (do not use Optimized Systems Software's BASIC XL). Boot your DOS XL master disk
- 3) Insert the copy you made of your DOS XL System Master Diskette into drive 1.
- 4) Turn your computer on to boot DOS XL.
- 5) If your system disk stops booting at the command menu, terminate the menu program by specifying the "Quit to DOS XL" command.
- 6) Tell DOS XL to transfer control to the Atari BASIC cartridge by typing the Command Processor command "CAR<RETURN>".
- 7) After Atari BASIC gives you its "READY" prompt, type "POKE 1802,#<RETURN>", where "#" in that typing sequence is one of the numbers from the table listed above.
- 8) Press your computer's [RESET] key.
- 9) After Atari BASIC responds with "READY", type "DOS<RETURN>". This will return control to DOS XL.
- 10) To get back to the DOS XL menu, following the "D1:" Command Processor prompt, type "MENU<RETURN>".
- 11) From the DOS XL menu, specify the "Initialize Disk" menu item.
- 12) When the INIT utility displays your four diskette initialization options, type "3<RETURN>" to specify the "WRITE DOS.SYS ONLY" option.
- 13) When the INIT utility asks you to "ENTER DRIVE (1,2,3 OR 4):", type "1<RETURN>" to specify that the modified DOS.SYS file is to be written to the diskette in drive 1.
- 14) The INIT utility will confirm your selections by displaying "FUNCTION 3; DRIVE 1" and "ARE YOU SURE (Y OR N):". If all this is correct, type "Y<RETURN>" to tell INIT to proceed. If you typed something wrong, type "N<RETURN>" and INIT will return you to the list of options.
- 15) Once you've typed "Y<RETURN>", INIT will write your modified copy of DOS XL to the DOS SYS file on drive 1. To confirm that everything went correctly, turn your

Atari computer off and then on again to reboot the new modified DOS XL. Once DOS XL is rebooted, you should be able to access as many drives as you selected from the above table.

7.7 How Do You Increase The Number Of Files You Can Have Open?

Using the copy of DOS XL which came with you Indus GT, you may open at the same time up to six single density files, or up to three double density files. If this setting is not enough for your needs, you will need to change one of DOS XL's default settings. DOS XL refers to this default setting as SABYTE (you don't need to understand this name) SABYTE is set to 6 on the copy of DOS XL which came with your Indus GT. The following table lists other possible values to which you can change SABYTE:

Problem Preventor: The BASIC cartridge, like some other cartridges, have some conflicts when a STARTUP.EXC file exists on the copy of DOS that is booted into the computer's memory (this is true even if the BASIC cartridge is already built into your computer -- as with the 600XL and 800XL models). The following instructions may not work unless the copy of DOS which you boot prior to performing these steps is free of any STARTUP.EXC files.

SABYTE Value	Files Open in Single Density	Files Open in Double Density
2	2	1
4	4	2
6	6	3
8	--	4
10	--	5
12	--	6

Changing the value of SABYTE is almost identical to changing the value of DRVBYT as discussed above. The only difference is that for step 7 you would do:

7) After Atari BASIC gives you its "READY" prompt, type "POKE 1801,#<RETURN>"; where "#" in that typing sequence is one of the numbers from the table listed above. **NOTE:** The only difference between step 7 for changing DRVBYT and step 7 for changing SABYTE is that for DRVBYT the number after "POKE" is "1802", while the number after "POKE" when changing SABYTE is "1801".

Section 8: USING DOS XL WITH THE ATARI BASIC CARTRIDGE

This section discusses how to use your Indus GT disk drive and DOS XL from your Atari BASIC cartridge. This section is not intended as any kind of tutorial on how to use Atari BASIC or how to program in BASIC. Your Atari BASIC cartridge should have come with both a tutorial book which teaches you how to program in BASIC, and also a reference manual which lists each BASIC command and how it is used. This manual only includes the following discussion to explain how the same BASIC statements discussed in Atari's own manuals can be used to access files and information stored on your Indus GT diskette drive. The following discussion assumes you are already familiar with the information which Atari provides in their BASIC manuals.

But first, let's get the hardware set up right and things put in their proper places. Right off, you should have a copy of your DOS XL System Master Diskette which came with your Indus GT. Don't use your original diskette! Take your copied master diskette and put it in drive 1, turn you Atari computer off, put your BASIC cartridge in the left cartridge slot, and turn the power on again.

Since you should be using a successful copy of the master disk by this point, we'll assume that the system booted properly (if it didn't, try everything again with a new blank diskette before calling us).

When DOS XL finishes booting and presents you with the DOS XL menu, you should select the "To Cartridge" menu item. When you do so, you should see BASIC's familiar "READY" prompt, and all is well.

Suppose, though, that you wanted to return to the DOS XL command menu. Why would you want to do that? Well, from the DOS XL menu you can list all files on a diskette, erase large collections of files, protect/unprotect large collections of files, and so on, without losing any BASIC program that you might have already typed in.

In fact, many of the menu commands (discussed earlier in this manual) may be used without harming even a line of what you may have typed in while in BASIC. To get back to your program just select "To Cartridge". You will be back in BASIC, and any program you might have written in is still there.

PROBLEM PREVENTOR: If you select any of the following menu items, you will lose any BASIC program you may have in memory:

- Copy Files
- Duplicate Disk
- Initialize Disk
- Extended Command
- Load Binary

If you need to perform any of these commands, save your BASIC program to disk prior to returning to the menu from BASIC.

So, from the DOS XL menu, "To Cartridge" will put you in BASIC (make sure the cartridge is there first) Nice and neat. But how do we get from BASIC back to the DOS XL menu? Simple Following BASIC's "READY" prompt, type "DOS<RETURN>" This will return you to the DOS XL menu or command processor.

The following sections discuss the most common BASIC commands and statements which affect files on the disk. Please note that these commands should be issued while using the BASIC cartridge. That is, these commands should be typed only as part of a BASIC program or immediately after BASIC's "READY" prompt.

When the usage of the statement is being shown, the "{", "}", "[", and "]" characters are used to surround sections of the statement which are optional (not required). A ' ' following a section of the statement infers that that section can be repeated zero or more times.

8.1 How Does BASIC's "CLOSE" Statement Work With DOS XL?

Statement. CLOSE

Purpose: This command writes any information which has been kept in memory and which is intended for the specified file to be written to the diskette, and then disassociates the file number (channel) and file which were associated by a previous OPEN statement.

Usage: CLOSE #fn

Arguments: "fn" -- file number (1-7)

Description:

After CLOSing a file number, the user may no longer perform reads or writes (e.g. via PRINT, INPUT, etc.) on the file which had been associated with that channel.

PROBLEM PREVENTOR: A file OPENed for any form of output (modes 8, 9, or 12) should always be closed before the diskette containing it is removed or changed. The most common cause of crashed (no longer usable) Atari diskettes is failure to observe this rule.

HINT: Atari BASIC does not consider it an error to CLOSE a channel that is not OPEN, so it is often good practice to end a program segment by a line such as the following:

```
999 FOR I=1 TO 7 : CLOSE #I : NEXT I
```

NOTE: Both the **END** and **RUN** statements close all files (except file #0, which is used for keyboard and screen reads and writes), and can be used to advantage for this purpose when desired.

8.2 How Does BASIC's "ENTER" Statement Work With DOS XL?

Statement: **ENTER**

Purpose: This command is used to retrieve a BASIC program that has been **LISTED** to the disk.

Usage: **ENTER** filespec

Argument: "filespec" -- the name of the file you are going to **ENTER**.

Description:

The **ENTER** statement is used to retrieve a BASIC program that has been **LISTED** to the disk. As the program is being **ENTERED** into BASIC's user area, each line will be checked for proper syntax and converted into the internal (tokenized) form used by BASIC.

If a syntax error is encountered, the offending line will be listed with the suspected error location in inverse video.

NOTE: The line with the error will, nevertheless, be placed in program memory. In such a case, your program must be corrected before you can **RUN** it.

PROBLEM PREVENTOR: **ENTER** does not clear the user memory space. Therefore, if you wish to **ENTER** a new program, use **NEW** first. (Actually, this can be a handy feature when you wish to merge two programs together.)

Example:

```
You: 10 PRINT "THIS IS PROGRAM 1"
LIST "D:PROG1"
10 PRINT "THIS IS PROGRAM 2"
LIST "D.PROG2"
NEW
ENTER "D:PROG1"
LIST
```

```
BASIC: 10 PRINT "THIS IS PROGRAM 1"
```

```
You: NEW  
ENTER "D:PROG2"  
RUN
```

BASIC: THIS IS PROGRAM 2

8.3 How Does BASIC's "GET" Statement Work With DOS XL?

Statement: GET

Purpose: This statement will retrieve a single byte of data from a specified previously OPENed disk file.

Usage: GET #fn,avar

Arguments: "fn" — file number (1-7)
"avar" - any numeric variable

Description:

The GET statement is used to retrieve a single byte of data from a disk file that has been previously OPENed using the same file number which you specify on the GET statement

NOTE: The data that you are GETting from the disk file should have been previously written to the specified file using the PUT statement.

Example program:

```
10 OPEN #1,8,0,"D:TEST" : REM CREATE A TEST FILE  
20 FOR I = 0 TO 255 : PUT #1,I :NEXT I  
30 CLOSE #1 :REM WE CREATED IT  
40 OPEN #1,4,0,"D:TEST" : REM NOW CHECK IT OUT  
50 FOR I = 0 TO 255 GET #1,X : REM CHECK EACH  
60 IF X <> I THEN PRINT "BAD DISK DATA",I,X  
70 NEXT I  
80 END : REM END CLOSES ALL FILES
```

8.4 How Does BASIC's "INPUT" Statement Work With DOS XL?

Statement: INPUT

Purpose: This command is used to request data from the specified file number (or keyboard).

Usage: INPUT {#fn,} var {,var...}

Arguments: "fn" -- file number (1-7)
"var" -- either numeric or string variable

Description:

When the INPUT statement is used without the "fn" option, data will be requested from the keyboard. You will notice a "?" appearing on the screen prompting you for the keyboard input. See your Atan BASIC Reference Manual for more details

When the file number (#fn) argument is used, data will come in the form of ATASCII lines from the file that has been previously successfully OPENed using the same file number. Otherwise, the action of INPUT is virtually identical to the action when INPUTing data from the keyboard. That is, a string input is terminated by an ATASCII RETURN character and a numeric input by either the RETURN or a comma within a line.

NOTE: The INPUT statement cannot (generally) read a line that is longer than 127 characters in length. If you PRINT a line to the disk that you will later want to INPUT, it is best to limit the size of the PRINTed line to 127 characters or less.

Example program:

```
10 DIM LINE$(15)
20 OPEN #1,8,0,"D1:INPUT.SMP" : REM CREATE A FILE
30 FOR I = 1 TO 20
40 PRINT #1;"THIS IS LINE #";I : REM WRITE THE DATA
50 NEXT I
60 CLOSE #1 : REM CLOSE THE FILE YOU JUST CREATED
70 OPEN #1,4,0,"D1:INPUT.SMP" : OPEN FOR READ ONLY
80 FOR I = 1 TO 20
90 INPUT #1,LINE$ : REM GET THE FIRST LINE
100 IF LINE$(15) <> STR$(I) THEN GOTO 500
110 PRINT LINE$
120 NEXT I
130 CLOSE #1 : REM CLOSE THE FILE
140 PRINT "SUCCESSFUL# USE OF THE INPUT STMT"
150 STOP
500 REM WE GET HERE FROM LINE 100
510 PRINT "UNSUCCESSFUL USE OF INPUT"
520 END : REM ANOTHER WAY TO CLOSE THE FILE
```

8.5 How Does BASIC's "LIST" Statement Work With DOS XL?

Statement: LIST

Purpose: This command will LIST the program currently in memory to the screen (or to the file specified).

Usage: LIST [filespec]

or: LIST [filespec,] lineno1 [,lineno2]

Arguments: "filespec" -- the name of the file you are going to LIST to the disk.

"lineno1" -- beginning line number

"lineno2" -- ending line number

Description:

The LIST command is probably one of the most commonly used commands in BASIC. Most people know that the LIST command, when given all by itself, will LIST their program to the screen. Even when beginning and ending line numbers are given the results are predictable.

Now with DOS XL the LIST command can do even more. When used with a filespec, the LIST command will LIST your program to the disk instead of the screen. The contents of this file will contain text characters and can take up a large amount of disk space if you have a large program.

If you use the option where two line numbers are given, then only the lines from lineno1 to lineno2 (inclusive) will be LISTed to the filespec.

If you use the option where only one line number is given, then only that line will be LISTed to the filespec.

HINT: The ability to LIST a range of lines to the disk provides a convenient method of moving a subroutine (for example) to another program.

See also the ENTER statement discussion.

8.6 How Does BASIC's "LOAD" Statement Work With DOS XL?

Statement: LOAD

Purpose: This command will get a program that has been SAVED to the disk and put it in BASIC's memory.

Usage: LOAD filespec

Arguments: "filespec" -- The name of the file you wish to LOAD.

Description:

LOAD is used in conjunction with the BASIC SAVE command. Only programs which have been previously SAVED to disk may be LOADED. No syntax checking will be done as your program is being LOADED, because the program is already in internal format.

Generally, if you wish to keep a program on the disk, you SAVE it. Then, later, when you wish to look at it, modify it, or RUN it, you can LOAD it. BASIC does not remember the name that you use when you LOAD a program, so you can SAVE it again either under the same name (in which case the original version is replaced by the new version) or under another name.

Also, see the RUN command for an alternative method of LOADING a program which will simply be RUN and not modified.

Example:

```
You: 10 PRINT "THIS IS PROGRAM 1"  
      SAVE "D:PROG1"  
      10 PRINT "THIS IS PROGRAM 2"  
      SAVE "D:PROG2"  
      LOAD "D:PROG1"  
      LIST
```

```
BASIC: 10 PRINT "THIS IS PROGRAM 1"
```

```
You:  RUN "D:PROG2"
```

```
BASIC:  THIS IS PROGRAM 2
```

8.7 How Does BASIC's "OPEN" Statement Work With DOS XL?

Statement: OPEN

Purpose: This command prepares a file for access and assigns it a file number

Usage: OPEN #fn,aexp1,aexp2,filespec

Arguments: "fn" -- file number (1-7)
"aexp1" -- Read or Write (Input/Output) Mode:
4 = input
6 = directory access
8 = output
9 = append
12 = input/output

"aexp2" -- device dependent value (usually 0)
"filespec" -- a proper DOS XL file name

Description.

The OPEN statement allows a disk file (or any device, for that matter) to be linked to a file number (channel) for future reference in connection with file input/output instructions (e.g., PUT, GET, INPUT, PRINT, CLOSE).

Comments on arguments:

The "fn" argument allows for a number between 1 and 7. The number 0 is reserved for the screen and can not be used in Atari BASIC. After a file has been OPENed with a given "fn", all references to that file must be made using that same "fn".

The "aexp1" argument allows the user to OPEN a file for a specific "mode", according to the following table:

Mode 4: will OPEN the specified file for input only. Thus you can only retrieve data from the specified file.

Mode 6: allows you to access the directory on the disk.

Mode 8: is the opposite of mode 4. That is, data can only be stored to the specified file. See below for notes when using mode 8.

Mode 9: is used to add data to the specified file. The data that is added will begin at the current end of the specified file.

Mode 12: is used to access the specified file for input and output. Thus data can be stored and retrieved from the specified file.

PROBLEM PREVENTOR: After OPENing a file, the specified file number must be used to designate the file in other input/output statements. Two OPENed files cannot have the same file number, but it is possible to OPEN the same file with two different file numbers. Generally, such a double OPEN will have disastrous results.

NOTE: If a file is OPENed for output (aexp1=8) and the specified file does not exist, then a file with the specified name will be created for you. If the file specified already exists, it will be destroyed and a new file with the specified name will be created for you.

PROBLEM PREVENTOR: A file OPENed for update (aexp1=12) can not be appended to under DOS XL or Atari DOS 2.0S. Only files opened in mode 9 will allow a file's size to be increased.

HINT: Mode 6 might, for example, be used from BASIC to find what files are on a disk and thereby allow a menu selection. The following program will allow a menu selection of all BASIC SAVED programs on drive 1, providing that the program names do not have an extension (i.e., the programs should not have been SAVED as "D:name.ext" but simply as "D:name").

Example program:

```
100 OPEN #1,6,0,"D:*" : DIM LNS(40)
110 FOR I = 1 TO 20 : INPUT #1, LNS
120 IF LNS(2,2)=" " THEN PRINT I,LNS(3,10) : NEXT I
130 CLOSE #1 : OPEN #1,6,0,"D:*"
140 PRINT : PRINT "WHAT PROGRAM TO RUN "
150 INPUT J : IF J>=I THEN GOTO 140
160 FOR I = 1 TO J : INPUT #1,LNS : NEXT I
170 CLOSE #1 : LNS(1,2) = "D-"
180 RUN LNS(1,10)
```

Try typing this in and then saying SAVE "D-MENU". Later, you can use the program by typing RUN "D.MENU".

PROBLEM PREVENTOR: As shipped by Future Systems, your DOS XL will allow only six single density files or three double density files to be OPEN at one time. See Section 7.7 (above) for "How Do You Increase The Number Of Files You Can Have Open?".

8.8 How Does BASIC's "PRINT" Statement Work With DOS XL?

Statement: PRINT

Purpose: This command puts the ASCII equivalents of the given expressions to the file specified on the screen.

Usage: PRINT [#fn {;}] exp [{;exp...}] {,}

Arguments: "fn" -- file number (1-7)

exp' -- the expression can either be a string enclosed in double quotes, a string variable, or a numeric variable.

Description:

When a file number is used with the PRINT command, the specified variables are PRINTed to the disk file that has been previously OPENed using the same file number.

NOTE: Characters are PRINTed to a disk file in a manner identical to the way characters are PRINTed to the screen if the file number option is not used.

PROBLEM PREVENTOR: A "," after the #fn causes tabbing before the first character is PRINTed. A ";" does not cause the tabbing. Normally, the semicolon should be used.

See also INPUT.

8.9 How Does BASIC's "PUT" Statement Work With DOS XL?

Statement: PUT

Purpose: This statement is used to store a single byte of data to a specified file.

Usage: PUT #fn,avar

Arguments: "fn" -- file number (1-7)

"avar" -- an arithmetic variable

Description:

The PUT statement is used to output a single byte of data to a specified file. The file number used in the PUT statement must be one that has been previously used in the successful OPEN of a file.

PROBLEM PREVENTOR: Data that has been stored in a file using the PUT statement can usually only be retrieved using the GET statement.

See also GET.

8.10 How Does BASIC's "SAVE" Statement Work With DOS XL?

Statement: SAVE

Purpose This command will store a BASIC program on disk in internal format (not ATASCII)

Usage: SAVE filespec

Arguments: "filespec" - filename you wish to SAVE your program under (remember, a proper filespec includes the device specifier D or D1, etc when the file is to be read from or written to a disk drive)

Description.

The SAVE command is used to SAVE your BASIC program in its internal format. This format is usually smaller than the text form of your program and will take up less room on your disk. All programs SAVED to the disk must be reentered using the LOAD or RUN commands.

See descriptions of LOAD and RUN for more examples and further explanations

8.11 How Does BASIC's "XIO" Statement Work With DOS XL?

Statement: XIO

Purpose This is BASIC's catch-all Input/Output command. If BASIC doesn't provide a function to access a particular feature of a device or file, some form of XIO can probably be used to do so.

Usage: XIO subcommand,#fn,aux1,aux2,filespec

Arguments: "command" -- see descriptions below.

"fn" -- a file number. In contrast to most DOS XL read/write commands, XIO often requires that the file number be that of an un-OPENed channel. The XIO command dictates the usage here, so see descriptions below.

"aux1" and "aux2" - generally zero. These values are passed to DOS XL unchanged (and thence to the device being accessed), so the individual device(s) may require other values. None of the examples given in this section use these values.

"filespec" -- a proper DOS XL file name.

Description:

Although, as noted, XIO can be used for several purposes, we will restrict our discussion here to those four XIO commands most useful to the Atari BASIC programmer.

The XIO commands to be discussed will each be treated as separate BASIC statements

8.12 How Do You Rename A File From Atari BASIC?

XIO Command: 32 (Rename)

Purpose: May be used to rename disk files

Usage. XIO 32,#fn,0,0,filespec

Arguments "fn" -- the file number of an un-OPENed channel.

"filespec" -- a proper DOS XL file name followed by, in the same BASIC string, a comma and a second file name. The second file name may not include a disk drive specifier

Description:

It is suggested that "fn", the file number, be 7, since that channel is normally reserved for system read/write functions (which this certainly is). The only thing strange about this XIO command is the form of the filespec. Some examples follow

```
XIO 32,#7,0,0,"D.TEST.SAV,OLDTEST.SAV"
```

```
DIM FLS(100)
```

```
INPUT FLS
```

```
FLS(LEN(FLS)+1) = ",BACKUP"
```

```
XIO 32,#7,0,0,FLS
```

Again, note that the second file name in both examples is not preceded by a disk drive specifier.

8.13 How Do You Erase A File From Atari BASIC?

XIO Command: 33 (Erase/Kill/Delete)

Purpose: May be used to permanently erase disk files.

Usage. XIO 33,#fn,0,0,filespec

Arguments "fn" -- the file number of an un OPENed channel.

filespec" -- a proper DOS XL file name, with "wild cards" accepted and processed

Description:

If the file specified exists on the disk drive specified, and if the file is not PROTECTED (see next XIO command), the specified file will be permanently erased (deleted, killed, zapped) from the disk.

USE THIS XIO SUBCOMMAND WITH CAUTION: specifying a "wild card" (a file name including an asterisk or question mark) will erase all files which match the given name.

Examples:

XIO 33,#7,0,0,"D2:OLDPROG.SAV"

will erase the single file with the name OLDPROG.SAV from the diskette in drive 2.

XIO 33,#5,0,0,"D:*.BAK"

will erase all files having a filename extension of ".BAK" from the diskette in drive 1.

8.14 How Do You Protect Files From Atari BASIC?

XIO Command: 35 (Protect/Lock)

Purpose: May be used to protect disk files from accidental erasure and modification.

Usage: XIO 35,#fn,0,0,filespec

Arguments: "fn" -- the file number of an un-OPENed channel

"filespec" -- a proper DOS XL file name, with "wild cards" accepted and processed

Description:

All files on the specified drive which have names which match the specified file will be "PROTECTED" by usage of this XIO command. Protection in the DOS XL environment simply consists of setting a flag in the diskette's file directory which tells the DOS to disallow either modification (i.e. OPENs in modes 8, 9, 12, etc.) or erasure of the file. Any DOS XL DIRECTORY listing will show protected files by means of an asterisk in the first column of the displayed lines (unprotected files have simply a space in that position)

Examples:

XIO 35,#7,0,0,"D:*,*"

will protect ALL files on drive 1.

XIO 35,#1,0,0,"D4:DOS.SYS"

will protect only the file named "DOS.SYS" on the diskette in drive 4.

8.15 How Do You Unprotect Files From Atari BASIC?

XIO Command: 36 (Unprotect/Unlock)

Purpose: May be used to unprotect disk files to allow subsequent erasure and modification.

Usage: XIO 36,#fn,0,0,filespec

Arguments: "fn" -- the file number of an un-OPENed channel.

"filespec" -- a proper DOS XL file name with "wild cards" accepted and processed.

Description:

All files on the specified drive which have names which match the specified file will be "UNPROTECTED" by usage of this XIO command. Protection in the DOS XL environment simply consists of setting a flag in the diskette's file directory which tells the DOS to disallow either modification (i.e., OPENs in modes 8, 9, 12, etc.) or erasure of the file. Any DOS XL DiRectory listing will show UNprotected files by means of a space in the first column of the displayed lines (protected files have an asterisk in that position).

Examples:

XIO 36,#7,0,0,"D2:*.COM"

will unprotect all files on drive 1 which have a filename extension of ".COM"

XIO 36,#1,0,0,"D1:DOS.SYS"

will unprotect only the file named "DOS.SYS" on the diskette in drive 1 (this step is necessary before erasing that file, as you might do to gain more space on the diskette).

8.16 How Do You Automatically Run BASIC When DOS XL is Booted?

DOS XL is capable of booting directly into a BASIC program. In order to do so, you must perform a few simple operations, which are presented in step-by-step fashion below:

Step 1: Boot a DOS XL master diskette. If the diskette you booted automatically executes the DOS XL menu, select the "Quit to DOS XL" menu item.

Step 2: If you want the BASIC program to start running when you boot another diskette rather than the one you just booted, place the other diskette in the drive at this time. NOTE: If the diskette is not initialized, refer to "How Do You Initialize a Disk From Command Level?".

Step 3: Type "TYPE E: STARTUP EXC" followed by the <RETURN> key. DOS XL will blank out the screen and then the cursor will appear at the upper left corner of the screen. In the following line which you will type, the "basprog" part is a fictitious file name which should be replaced by the name of the BASIC program you wish to be executed. Type. DO CAR,RUN"D:basprog" followed by the <RETURN> key. NOTE: The double quotes (") should be typed as part of the line for this particular line. Also NOTE: whichever BASIC program you specify in substitution for "basprog" must be SAVED onto this diskette before trying to boot this diskette. Now hold down the <CONTROL> or <CTRL> key and then type "3". This tells DOS XL that you are finished typing stuff to be placed into the file STARTUP EXC

NOTE: This file can also be created from the DOS XL menu by Copying from E. to D.STARTUP EXC and using the same CTRL-3 to indicate when you've completed the Entry. NOTE. See "What Does the STARTUP.EXC File Do?" and "Controlling DOS XL Without Being There" for an explanation of the STARTUP.EXC file you have just created.

Step 4: Type "DIR" followed by the <RETURN> key. Check the "DIR" listing to make sure all of the following files are listed: DOS.SYS, DO.COM, STARTUP EXC, and the BASIC program which you specified in the line you typed above. If any of these files are missing, your diskette will not boot correctly. If DO.COM is missing, see "How Do You Copy Files From Command Level" for an explanation of how to copy it from your DOS XL master to this diskette. If your BASIC program is on a different diskette, get into Atari cartridge BASIC and "LOAD" the program from the diskette it is on and then "SAVE" it to this diskette (see "How Do You Go to a Cartridge From Command Level" and "Using DOS XL with the Atari BASIC Cartridge"). DOS.SYS should have been placed onto the diskette when you initialized the diskette, and STARTUP.EXC should be there since you just typed it in the previous step.

Step 5: Last, but not least, before trying to re-boot using this newly created diskette, make sure your Atari BASIC cartridge is installed correctly.

Step 6: Turn your Atari computer's power off and then on again to re-boot using this new diskette.

Section 9: CONTROLLING DOS XL WITHOUT BEING THERE

9.1 So What is DOS XL Batch Processing Anyway?

Once you've become experienced using DOS XL and are actually using it to perform some serious tasks for you, you may often find yourself repeating the same group of Command Processor commands over and over. In such a case, you can place these commands into a "batch" or "execute" file; and then later tell DOS XL, in a single quick command, to execute all the commands which you have placed into this file. This can save quite a bit of your time and energy since you won't constantly be typing the same sequence of commands.

Let's suppose that you wrote several programs that had to be run in sequence. Without using a batch file, you could issue the Command Processor commands necessary to run each program one at a time. If each program in the sequence took a long time to run, you would probably find yourself sitting at the keyboard for hours waiting for each program to finish just so you could type the command(s) necessary to get the next program running.

But, since you'd probably rather go watch television, take a nap, or something while your Atari does all your work for you (what are computers for, anyway?), having a batch file issue those commands to DOS XL when necessary would probably be more to your liking.

All you would need to do in order for you to go off and have fun while your computer slaves away is to create a batch file containing the DOS XL commands required to run your set of programs. You would then enter the one command which tells DOS XL to take the rest of its commands from that batch file while you go off for your nap.

Any text file with the filename extension ".EXC" can be used as a DOS XL batch execute file. You tell DOS XL to start taking its commands from your batch file in much the same way as you give DOS XL an extrinsic command. The only difference is that you precede the batch file's name (do not include the ".EXC" extension) with the commercial "at" symbol (" "). For example, if you had already prepared a batch file called "DEMO.EXC" on drive one, and your default drive was on, you would type:

```
@DEMO<RETURN>
```

to tell DOS XL to begin taking its commands from the file "DEMO.EXC". When you give this command to DOS XL, the Command Processor will attempt to open the file "D1:DEMO EXC" and then set up DOS XL to read it line by line, executing the Command Processor commands contained within the file just as if you were typing them from the keyboard.

9.2 What Is Contained in a DOS XL Batch ".EXC" File?

An "execute" or "batch" file is simply a text file. Each line of this text file will become a command to the Command Processor when you tell the Command Processor to "execute" the batch file.

There are just three simple rules you must follow when you are creating each line of the batch file:

- 1) The line must contain a valid DOS XL Console Processor command
- 2) The line must be shorter than 128 characters in length.
- 3) The line must end in a standard Atari carriage return character (ATASCII \$9B hexadecimal, see your Atari manual).

DOS XL allows the commands in an execute file to be preceded by numbers and blanks. This feature allows the command lines to be numbered for readability and to document their purposes. This means that the command file lines:

```
LOAD OBJ.TEST<RETURN>
```

and:

```
100 LOAD OBJ.TEST<RETURN>
```

are the same to DOS XL. The Command Processor will search the line for the first non-numeric, non blank character before starting to examine the command itself. Almost any text editor, including program editors supplied with many languages (such as MAC/65 from Optimized Systems Software), can be used to create and modify execute files.

PROBLEM PREVENTOR: It is not possible to use the Atari BASIC cartridge's program editing mode to edit an execute file.

SPECIAL NOTE: You may also create an execute file (or, for that matter, any text file) by using the Command Processor intrinsic command "TYPE <file name>". The TYPE command will clear the screen, at which time you simply type in your text, line by line. When you are finished typing all the lines of your text/execute file, you hold down the <CONTROL> or <CTRL> key and type the "3" key in order to tell DOS XL you are finished. Although this approach will work, it is difficult to use since, once you press <RETURN> at the end of a line, you cannot go back to that line and make any changes. Although the cursor movement keys on your Atari keyboard will appear to function correctly while you enter your text, you can only make corrections to the current line you are typing without making a mess of your text file.

9.3 What Commands are Special for Batch Files?

DOS XL has four special intrinsic commands designed for use exclusively with execute files. These commands are:

REMARK	Remark or comment (does nothing)
SCREEN	Turn on the echoing of execute file command lines to the screen. (This is the default.)
NOSCREEN	Turn off echoing of execute file command lines.
END	Stop executing the execute file and return DOS XL to keyboard entry mode.

A more detailed discussion of these commands is provided under "The DOS XL Command Processor" sections of this manual.

9.4 How Is a Batch File Stopped?

While an execute file is being processed, various conditions may occur which will warrant a halt in the batch execution. These conditions may occur because of system-detected errors or because of a user program detecting a condition it considers hazardous to the system's health.

9.4.1 ...by DOS XL?

Humans are not quite perfect in the eyes of computers and sometimes make mistakes. If DOS XL detects an error in a human specified command, DOS XL will respond with an error message. If DOS XL discovers such an error while processing an execute file, it will print the error message as usual and then stop executing the execute file. Note that this stopping due to an error only occurs if the error is found by DOS XL, not if a program detects an error.

Execution of an execute file will also stop after the CARtridge command is executed.

Finally, execution of course stops when the end of the execute file is reached since there are no more commands to be taken from the file.

9.4.2 ...by a Program?

PROBLEM PREVENTOR: The following discussion is intended for assembly/machine language, BASIC, and/or other language programmers. If you do not use your Atari for programming, or if the programs you write have no need to stop a batch file from executing, then you need not understand the following section.

It is sometimes desirable for a program in a chain of executing programs to stop the execute process. The usual reason for this is that the program has detected an error severe enough that the programs which follow it in the chain should no longer be executed. There is a flag kept in a special memory location by DOS XL which tells DOS XL that it is supposed to be taking its commands from an execute file. If a program sets this special memory location to the value zero, then DOS XL will no longer "remember" it is taking its commands from an execute file and will therefore resume taking commands from the keyboard. The execute flag is located 12 bytes from the starting location of DOS XL within your Atari's memory. The starting location of DOS XL is contained within the 6502 word memory location 10 (\$0A). The following BASIC program segment will turn off the execute file and return to DOS XL.

```
1000 DOSLOC = PEEK(11)*256+PEEK(10) : REM DOSLOC = DOS'S START ADDRESS
1010 EXCFLG = DOSLOC+11 : REM EXCFLG = EXECUTE FLAG'S ADDRESS
1020 POKE EXCFLG,0 : REM SET DOS'S EXECUTE FLAG TO ZERO
1030 DOS : REM RETURN TO DOS XL
```

Or, from Optimized Systems' BASIC XL, you could simply use

```
100 POKE DPEEK(10)+11,0 : DOS
```

(Remember, though, that a CARtridge command automatically stops ".EXC" file execution, so this example may not be useful from BASIC.)

9.5 What is Special About the STARTUP.EXC Batch File?

The execute file "STARTUP.EXC" has special meanings to DOS XL. When DOS XL is first booted (when you turn on your Atari), DOS XL will search the directory of the booted diskette for a file named STARTUP.EXC. If STARTUP.EXC is on the booted diskette, DOS XL will execute that file before requesting keyboard commands.

A more detailed discussion of the "STARTUP.EXC" file is provided under "What Does The STARTUP.EXC File Do?".

9.6 How Do Execute Files Work?

PROBLEM PREVENTOR: The following section deals with programmer subject matter and may not be suitable for persons who still retain their sanity. As a result, Future Systems recommends that if sane (non-programmer) people are still reading this section at this point, they should skip the remainder of this section. Thank you.

When you type in the Command Processor command "@<file-name>", the Command Processor actually stores the <file-name> in an internal storage location (CPEXFN) and sets a flag (CPEXFL) to indicate that a batch operation is in progress.

Each time the Command Processor prompts the user (with "D1:", "D2:", etc.) it checks this flag to see if a batch execution is active. If so, it opens the batch file (using the stored <file-name>). Unless this is the first time the batch file has been opened (again, kept track of via a bit in CPEXFL), the Command Processor POINTs to the start of the next text line in the file.

The next text line is then read into the command buffer. Then the Command Processor NOTES the new position in the file and saves the position (CPEXNP) for use by the next needed POINT process (as above).

Finally, the command in the command buffer is executed just as if the user had typed it from the keyboard. If the command properly terminates (via an RTS or a JMP through DOSVEC), the entire process repeats, until the execute flag is somehow turned off.

The experienced programmer will no doubt realize that changing the contents of the various CPEXxx locations can affect batch execution in possibly very interesting ways. These locations are all defined in the file called SYSEQU.ASM and are offsets from the address contained in DOSVEC (location \$000A). See, as an example, the sample program segment given above which stops the execution of a batch file.

Some of this information is further discussed under "Using DOS XL with Assembly Language".

Section 10: USING DOS XL WITH ASSEMBLY LANGUAGE

PROBLEM PREVENTOR: This entire section contains extremely technical information relating to the interfacing of assembly/machine language programs to DOS XL. If you are not an assembly/machine language programmer, you will have absolutely no need in the world to understand the following discussion. If you are a beginning assembly/machine language programmer, this is not the place to start when learning assembly/machine language. All of the following information is intended for the experienced assembly language programmer, and no attempt has been made to "soften" the discussion in order to accommodate users who have no experience with the type of information being discussed.

SPECIAL NOTE: The information contained in this section has been supplied by Future Systems as a courtesy to those users who "wanted to know". Unfortunately, this information relates to performing operations which are far beyond the needs of the vast majority of DOS XL users; and therefore any questions arising from the use of the information contained in this section would be in the extreme minority. Because of the unbalanced nature of normal user support versus technic- advanced user support, very little support can be provided by Indus for those users who have trouble with the information contained in this section. Should you encounter problems with the information in this section, Future Systems will attempt to assist you as best as we can; but in general you should consider yourself "on your own".

DOS XL is designed as a layered operating system. Application programs (including languages such as BASIC XL) are expected to call the operating system "properly", through the system call vector (labeled "CIO" in the file "SYSEQU.ASM" on your DOS XL System Master diskette). In turn, the CIO will determine which device is to receive what I/O request and handles most of the work transparent to the calling program.

If a program restricts itself to proper calls to CIO using labels provided in SYSEQU.ASM, the program should transfer virtually without change from one version of DOS XL to another. (Probably the only other areas of change would involve memory map usage.)

In any case, herewith is a description of the proper assembly language calling sequences and parameters under DOS XL.

10.1 Interfacing to I/O Routines

10.1.1 The Structure of the IOCB's

When a program calls the OS through location "CIO", OS expects to be given the address of a properly formatted IOCB (Input Output Control Block). For simplicity, we

have predefined 8 IOCB's, each 16 bytes long, and the calling program specifies which one to use by passing the IOCB number times 16 in the 6502's X-register. Thus, to access IOCB number four, the X-register should contain \$40 on entry to OS. Notice that the IOCB number corresponds directly to the file number in BASIC (as in PRINT #6, etc.). The IOCB's are located from \$0340 to \$03BF on the Atari (but you really should use the equates from the disk file "SYSEQU.ASM" rather than relying on hard-coded addresses.)

When the OS gets control, it uses the X-register to inspect the appropriate IOCB and determine just what it was that the user wanted done. Figure 10-1 gives the DOS XL standard name for each field in the IOCB along with a short description of the purpose of the field. Study the figure before proceeding.

The user program should never touch fields ICHID, ICDNO, ICSTA and ICPUT, as they are set by the OS. In addition, unless the particular device and I/O request requires it, the program should not change ICAUX1 through ICAUX6. The most important field is the one-byte command code, ICCOM, which tells the operating system what function is desired.

IOCB Structure

Field Name	Offset Within IOCB (bytes)	Size of Field (bytes)	Purpose of Field
ICHID	0	1	Set by OS. Index into device name table for currently open file, set to \$FF if no file open on this IOCB
ICDNO	1	1	Set by OS. Device number (e.g. 1 for "D1:xxx" or 2 for "D2:yyy")
CCOM	2	1	The command request from user program. Defines how rest of IOCB is formatted.
ICSTA	3	1	Set by OS. Last status returned by device. Not necessarily the status returned via STATUS command request.
ICBADR	4	2	Buffer Address. A two byte address in normal 6502 low/high order. Specifies address of buffer for data transfer or address of filename for OPEN, STATUS, etc.
ICPUT	6	2	Set by OS. Address minus one of device's put-one-byte routine. Possibly useful when high speed single byte transfers are needed.
ICBLEN	8	2	Buffer length. Specifies maximum number of bytes to transfer for PUT/GET operations. Note: this length is decremented by one for each byte transferred.
CAUX1	10	1	Auxiliary byte number one. Used in OPEN to specify kind of file access needed. Some drivers can make additional use of this byte.
CAUX2	11	1	Auxiliary byte number two. Some serial port functions may use this byte. This and all following AUX bytes are for special use by each device driver.
CAUX3	12	2	For disk files only: where the ICAUX4 disk sector number is passed by NOTE and POINT. (These bytes could be used separately by other drivers.
CAUX5	14	1	For disk files only: the byte-within- sector number passed by NOTE and POINT.
ICAUX6	15	1	A spare Auxiliary byte

IOCB Field Usage - Standard Commands

IOCB Field Name →	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	IOCB Field Name ← (as used in SYSEQU ASM)
Type of Command	I C H I D	I C D N O	I C C O M	I C S T A	Buf Adrs ICB- ADR		Put-a -Byte Adrs ICPUT		Buf Len ICB- LEN		I C A U X 1	I C A U X 2	I C A U X 3	I C A U X 4	I C A U X 5	I C A U X 6	Command Names
OPEn	*	*	3	*	Fname		*				md						COPN
CLOSE	*		12	*													CCLOSE
dynamic STATus		*	13	*	Fname												CSTAT
Get TeXT Record			5	*	Buf				len								CGTXTR
Put TeXT Record			9	*	Buf				len								CPTXTR
Get BiNary Record			7	*	Buf				len								CGBINR
Put BiNary Record			11	*	Buf				len								CPBINR
REName		*	32	*	Fname												CREN
ERase		*	33	*	Fname												CERA
PROtect		*	35	*	Fname												CPRO
UNProtect		*	36		Fname												CUNP
NOTE			38	*										secno	by		CNOTE
POINT			37	*										secno	by		CPOINT

LEGEND: "a" Set by OS when this command is used.

"Buf" Address of a data buffer.

"Fname" Address of a file name.

"len" Length of a data buffer.

"md" Mode of OPEN (read, write, etc.)

"secno" Sector number (see "The I/O Commands").

"by" Byte in sector (see "The I/O Commands").

10.1.2 The I/O Commands

The preceding tables provide a summary of the I/O commands and the associated usage of the various fields of the IOCB's. The first seven are DOS XL oriented and will be dealt with in "The Standard DOS XL Commands" discussion below. The last six are File Manager specific and are discussed in "Commands Unique to the Disk File Manager System".

Most of the commands manipulate a device in some way, so maybe we should talk about them for a moment. Device names under DOS XL are very simplistic; they consist of a single letter optionally followed by a single digit used to define a specific device when more than one of the same kind exist (for example, D1 or D2). Traditionally (and, in the case of Atari disk files, of necessity) the device name is followed by a colon. The following devices are implemented under standard DOS XL and Atari DOS:

- E: The keyboard/screen editor device. The normal console output.
- K: The keyboard alone. Use this device to bypass editing of user input.
- S: The screen alone. Can be either characters (ala E) or graphics.
- P: On the Atari, the printer. The standard device driver allows only one printer.
- C: The cassette recorder.
- D: The disk file manager, which also usually requires a file name.

Other device names are possible (for RS 232 interfaces, for example), and in fact the ease with which other devices may be added is another mark for the claim that DOS XL is a true operating system. (The structure of device drivers is material for a later section.) But we should like to point out that, on the Atari, the OS ROM includes drivers for all the above except the disk. In fact, the drivers account for over 5K bytes of the ROM code. The screen handler, with all its associated editing and GRAPHICS modes, occupies about 3K bytes of that.

10.1.2.1 The Standard DOS XL Commands

The OS itself only understands a few fundamental commands, but DOS XL also provides for the extended commands necessary to some devices (XIO in BASIC). In any case, each of these fundamental commands deserves a short description.

10.1.2.1.1 OPEN

Open a device (synonyms: file, IOCB, channel) for read and/or write access. OS expects ICAUX1 to contain a byte that specifies the mode of access:

ICAUX1	MODE
4	Read Only
6	Read Directory Only
8	Write Only
9	Write Only Append
12	Read/Write (Update)

The name of the device (and, for the disk, the file) must be given to OS; this is accomplished by placing the ADDRESS of a string containing the name in ICBADR.

10.1.2.1.2 CLOSE

Terminate access to a device/file. Only the command must be given.

10.1.2.1.3 STATUS

Request the status of a device/file. The device can interpret this request as it wishes, and pass back a (hopefully) meaningful status. As with OPEN, the ADDRESS of a filename must be placed in ICBADR.

10.1.2.1.4 GET TEXT

A powerful command, this causes the OS to retrieve ("GET") bytes one at a time from a device/file already OPENed until either the buffer space provided by the user is exhausted or a RETURN character (Atari \$9B) is encountered. The user specifies the buffer to use by placing its ADDRESS in ICBADR and its maximum size (length) in ICBLN.

10.1.2.1.5 PUT TEXT

The analogue of GET TEXT, OS outputs characters one at a time until a RETURN is encountered or the buffer is empty. Requires ICBADR and ICBLN to be specified.

10.1.2.1.6 GET DATA

Extremely flexible command, this causes OS to retrieve, from the device/file previously OPENED, the number of bytes specified by ICBLEN into the buffer specified by ICBADR. No checks what-so-ever are performed on the contents of the transferred data.

10.1.2.1.7 PUT DATA

Similar to GET DATA, except that OS will output ICBLEN bytes from the buffer specified by ICBADR. Again, no data checks are performed.

10.1.2.2 Commands Unique to the Disk File Manager System

The second part of the "IOCB Field Usage" tables shows several DOS XL system commands not yet discussed. These "extended" commands are accessed via the extended request routine in a device driver's handler table (see "Device Handlers" for details on device drivers). However, some of these extended commands as implemented for the disk device in the File Manager System are important enough to deserve their own sections. We'll examine each of the extended disk operations in a little detail:

10.1.2.2.1 ERASE, PROTECT, and UNPROTECT

Also known as Delete, Lock, and Unlock, these three commands simply provide OS with a channel number (i.e., the X-register contains IOCB number times 16), a command number (ICCOM), and a filename (via ICBADR). When OS passes control to the FMS, an attempt is made to satisfy the request. Note that the filename may include "wild cards", as in "D:*.??S" (which will affect all files on disk drive one which have an 'S' as the last letter of their filename extension)

10.1.2.2.2 RENAME

Very similar to ERASE, et al, in usage. The only difference is in the form of the filename. Proper form is: "[Dn:]oldname.ext,newname.ext" Note that the disk device specifier is not and CAN NOT be given twice.

10.1.2.2.3 NOTE and POINT

Other than OPEN, these are the only commands encountered in standard DOS XL which use any of the AUXiliary bytes of the IOCB. For these commands, the user specifies the channel number and command number and then receives or passes file pointer

information via three of the AUX bytes. ICAUX3/ICAUX4 are used as a conventional 6502 LSB/MSB 16-bit integer: they specify the current (NOTE) or the to-be-made-current (POINT) sector within an already OPENed disk file. ICAUX5 is similarly the current (NOTE) or to-be-made-current (POINT) byte within that sector

10.1.2.3 FMS Extensions of the OPEN Command

Open is not truly an extended operation, but for disk I/O we need to know that the FMS allows two additional "modes" beyond the fundamental OS modes.

If ICAUX1 contains a 6 when DOS XL is called for OPEN, then the disk directory is opened (instead of a file) for read-only access. The address ICBADR now specifies the file (or files, if wild cards are used) to be listed as part of a directory listing. Note that FMS expects this type of OPEN to be followed by a succession of GETREC (get text line) OS calls.

If ICAUX1 contains a 9, the specified file is opened as a write-only file, but the file pointer is set to the current end-of-file.

10.1.3 Error Codes Returned

On return from any OS call, the Y-register contains the completion code of the requested operation. A code of one (1) indicates "normal status, everything is okay". (I know, why not zero, which is easier to check for. Remember, we based this on Atari's OS ROMs, which are good, not perfect.) By convention, codes from \$02 to \$7F (2 through 127 decimal) are presumed to be "warnings". Those from \$80 to \$FF (128 through 255 decimal) are "hard" errors. These choices facilitate the following assembly language sequence:

```
JSR    CIOV    ; call the OS
TYA                      ; check error code BMI
OOPS                   ; if $80-$FF, it must be an error
```

In theory, DOS XL always returns to the user with condition codes set such that the TYA is unnecessary. In practice, that's probably true: but a little paranoia often leads to longer life of both humans and programs.

10.2 Manipulation of DOS XL

The writer of assembly language code will most likely need to interface with the Atari Operating System (OS) in some way. If the assembly code is to become an extrinsic command, there may be a need to interface to DOS XL. See "Interface to I/O Routines" for more information about the OS interface.

If you are writing software designed to interface with DOS XL, you may need to examine and/or modify certain special memory locations or access certain routines within DOS XL. This section lists and describes those that we feel are the most useful.

10.2.1 SYSEQU.ASM

Every DOS XL master disk contains an assembler source file, SYSEQU.ASM, that has various commonly used Atari OS and DOS XL system equates. This file may be included in an assembly language program via the OSS MAC/65 include function (.INCLUDE #D1:SYSEQU.ASM); however, it exists on the master disk as a text file and must be 'ENTER'ed into MAC/65 and then 'SAVE'ed back to the disk.

10.2.2 CP MEMORY LOCATIONS

The Command Processor (CP) on the Atari is designed to be placed just after the normal Atari File Manager when the DOS.SYS version of DOS XL is used. Since the actual location of CP may vary with different versions of the file manager and/or because of different memory configurations, a fixed location has been assigned to point to CP. The location CPALOC (\$0A on the Atari) contains the address of the DOS XL and CP warmstart entry point. Most Atari programs should return to CP by JMPing to the address contained in CPALOC.

10.2.3 EXECUTE PARAMETERS

The CP execute flag is located CPEXFL (\$0B) from the start of CP. The CPALOC may be used as an indirect pointer to access the execute flag:

```
LDY    #CPEXFL      ;GET DISPL TO FLAG
LDA    (CPALOC),Y    ;LOAD FLAG
```

The Execute Flag has four bits that control the execute process:

<u>Name</u>	<u>Bit #</u>	<u>Description</u>
EXCYES	\$80	If one, an execute is in progress
EXCSCR	\$40	If one, do not echo execute input to screen
EXCSUP	\$20	If one, a cold start execute is starting. Used to avoid a FILE NOT FOUND error if STARTUP.EXC is not on boot disk.
EXCNEW	\$10	If one, a new execute is starting. Tells CP to start with the first line of the file

CP performs the execute function by OPENing the file, POINTing to the next line, READing that line, NOTEing the new next line and CLOSEing the file. To perform these functions, CP must save the execute file name and the three byte NOTE values. The filename is saved at CPEXFN (\$0C) into CP. The three NOTE values are saved at CPEXNP (\$1C) into CP. (CPEXNP = ICAUX5; CPEXNP + 1 = ICAUX4; CPEXNP + 2 = ICAUX3). By changing the various execute control parameters, a programmer can cause chaining of execute files, skipping of certain lines in the file, etc.

10.2.4 DEFAULT DRIVE LOCATION

The CP default drive file spec is located at CPDFDV (\$07) into OS/A+. The Default Drive here is ATASCII Dn. where "n" is the ATASCII default drive number.

10.2.5 EXTRINSIC PARAMETERS

The extrinsic commands may be called with parameters typed on the command line. The CP command:

D1:COPY FROMFILE D2:TOFILE

is an example of this. The entire command line is saved in the CP input buffer located at CPCMDB (\$3F) bytes into CP and is available to the user. Since most command parameters are file names, CP provides a means of extracting these parameters as filenames. The routine that performs this service begins at CPGNFN (\$03) bytes into CP. The routine will get the next parameter and move it to the filename buffer at CPFNAM (\$21) bytes in CP. If the parameter does not contain a device prefix, then CP will prefix the parameter with the default drive prefix. The first time COPY calls CPGNFN the file spec "D1:FROMFILE" is placed at CPFNAM. The second time COPY calls CPGNFN the file spec "D2:TO FILE" is placed in CPFNAM. If CPGNFN were to be called more times, then the default file spec would be set into CPFNAM at each call. To detect the end of parameter condition, the user may check the CPBUFP (\$0A into CP) cell. If CPBUFP does not change often a CPGNFN call then there are no more parameters. The filename buffer is always padded to 16 bytes with ATASCII EOL (\$9B) characters. The following example sets up a vector for calling the get file name routine:

```

CLC
LDA CPALOC ;ADD CPGNFN
ADC #CPGNFN ;TO CPALOC VALUE
STA GETFN+1 ;AND PLACE IN
LDA CPALOC+1 ;ADDRESS FIELD
ADC #0 ;OF JUMP
STA GETFN+2 ;INSTRUCTION
GETFN JMP 0

```

The following routine gets the next file name to CPFNAM.

```

LDY #CPBUFP      ;SAVE CPBUFP
LDA (CPALOC),Y   ;VALUE
PHA
JSR GETFN        ;GET NEXT FILE PARM
LDY #CPBUFP
PLA              ;TEST FOR NO NEXT
CMP (CPALOC),Y   ;PARM
BEQ NONEXT       ;BR IF NO NEXTPARM
LDY #CPFNAM      ;ELSE GET FILE
LDA (CPALOC),Y   ;NAME FROM BUFFER

```

10.2.6 RUNLOC

Whenever an extrinsic command is invoked, RUNLOC (\$3D into CP) is given the value of the first address in that command's .COM file. Some extrinsic commands (including user written commands) can therefore be restarted by typing the RUN command. You may want to change the contents of RUNLOC to point to the warmstart point of your program when it's entered the first time to avoid unwanted reinitializations when re-entered. BASIC A+ and MAC/65 do this to avoid clearing any user program which may be in memory when returning from CP. If you want to forbid re-entry, you need to set RUNLOC's high order byte (\$3E into CP) to zero.

```

LDY #RUNLOC+1    ;FORBID RE-ENTRY
LDA #0           ;TO ME
STA (CPALOC),Y

```

10.3 DEVICE HANDLERS

As we have noted before, CIO is actually a very small program (approximately 700 bytes). Even so, it is able to handle the wide variety of I/O requests detailed in the earlier parts of this section with a surprisingly simple and consistent assembly language interface. Perhaps even more amazing is the purity and simplicity of the OS interface to its device handlers.

Admittedly, because of this very simplicity, CIO is sometimes slower than one would wish (only noticeably so with PUT BINARY RECORD and GET BINARY RECORD) and the handlers must be relatively sophisticated. But not too much so, as we will show.

10.3.1 The Device Handler Table

At location "HATABS" in RAM, CIO has (loaded from ROM on the Atari) a list of the standard devices (P:, D:,E,S, and K.) and the addresses thereof. To add a device, simply tack it on to the end of the list: you need only specify the device's name (one character) and the address of its handler table (more on that in a moment).

In theory, all named device handlers under DOS XL may handle more than one physical device. Just as the disk handler understands "D1:" and "D2:", so could a keyboard handler understand "K1:" and "K2:". DOS XL supplies a default sub-device number of "1" if no number is given (thus "D:" becomes "D1:").

Following is the layout of the Handler TABLES on the Atari computers

```

      *=      $031A
HATABS
      .BYTE 'P'      ; the Printer device
      .WORD PDEVICE  ; and the address of its driver
      .BYTE 'C'      ; the Cassette device
      .WORD CDEVICE
      .BYTE 'E'      ; the screen Editor device
      .WORD EDEVICE
      .BYTE 'S'      ; the graphics Screen device
      .WORD SDEVICE
      .BYTE 'K'      ; the Keyboard device
      .WORD KDEVICE
      .BYTE 0        ; zero marks the end of the table
      .WORD 0        ; ... but there's room for several
      .BYTE 0        ; . more devices
      .. et cetera ...

```

10.3.2 Rules for Writing Device Handlers

Each device which has its handler address placed into the handler address table (above) is expected to conform to certain rules. In particular, the driver is expected to provide six (6) action subroutines and an initialization routine. (In practice, the current Atari's OS only calls the initialization routines for its own pre-defined devices. Since this may change in the future, and since one can force the call to one's own initialization routine, we must recommend that each driver include one, even if it does nothing.) The address placed in the handler address table must point to, again, another table, the form of which is shown below.

HANDLER

```
.WORD <address of OPEN routine>-1  
.WORD <address of CLOSE routine>-1  
.WORD <address of GETBYTE routine>-1  
.WORD <address of PUTBYTE routine>-1  
.WORD <address of STATUS routine>-1  
.WORD <address of XIO routine>-1  
JMP <address of initialization routine>
```

Notice the six addresses which must be specified; and note that in the table one must subtract one from each address (the "-1" simply makes CIO's job easier.. honest). A brief word about each routine is given in the following pages

10.3.2.1 Device OPEN

The OPEN routine must perform any initialization needed by the device. For many devices, such as a printer, this may consist of simply checking the device status to insure that it is actually present. Since the X-register, on entry to each of these routines, contains the IOCB number being used for this call, the driver may examine ICAUX1 (via LDA ICAUX1,X) and/or ICAUX2 to determine the kind of OPEN being requested. (Caution. CIO preempts bits 2 and 3 (\$04 and \$08) of ICAUX1 for read/write access control. These bits may be examined but should normally not be changed)

10.3.2.2 Device CLOSE

The CLOSE routine is often even simpler. It should "turn off" the device if necessary and possible.

10.3.2.3 Device PUT and GET BYTE Routines

The PUTBYTE and GETBYTE routines are just what are implied by their names: the device handler must supply a routine to output one byte to the device and a routine to input one byte from the device. HOWEVER, for many devices one or the other of these routines doesn't make sense (ever tried to input from a printer?). In this case the routine may simply RTS and DOS XL will supply an error code.

10.3.2.4 Device STATUS Routine

The STATUS routine is intended to implement a dynamic status check. Generally, if dynamic checking is not desirable or feasible, the routine may simply return the status

value it finds in the user's IOCB. However, it is NOT an error under DOS XL to call the status routine for an unOPENed device, so be careful.

10.3.2.5 Device Extended I/O Routine(s)

The XIO routine does just what its name implies: it allows the user to call any and all special and wonderful routines that a given device handler may choose to implement. OS does nothing to process an XIO call except pass it to the appropriate driver.

10.3.2.6 General Comments on Device I/O Routines

In general, the AUXiliary bytes of each IOCB are available to each driver. In practice, it is best to avoid ICAUX1 and ICAUX2, as several BASIC and OS commands will alter them to their will. Note that ICAUX3 through ICAUX5 may be used to pass and receive information to and from BASIC via the NOTE and POINT commands (which are actually special XIO commands). Finally, drivers should not touch any other bytes in the IOCBs, especially the first two bytes.

Notice that handlers need not be concerned with PUT BINARY RECORD, GET TEXT RECORD, etc.: OS performs all the needed housekeeping for these user-level commands.

10.3.3 Rules for Adding Things to OS

1. Inspect the system MEMLO pointer (see SYSEQU.ASM for the actual location).
2. Load your routine (including needed buffers) at the current value of MEMLO.
3. Add the size of your routine to MEMLO.
4. Store the resultant value back in MEMLO.
5. Connect your driver to OS by adding its name and address into the handler address table.
6. Fool OS so that if SYSTEM RESET is hit steps 3 through 5 will be reexecuted (because SYSTEM RESET indeed resets the handler address table and the value of MEMLO). In point of fact, step 2 is the hardest of these to accomplish. In order to load your routine at wherever MEMLO may be pointing, you need a relocatable (or self relocatable) routine. Since there is currently no assembler for the Atari computers which produces intrinsically relocatable code, this is not an easy task. But it may not be necessary if you are writing code for your own private system instead of the general public.

Step 6 is accomplished by making Atari OS think that your driver is the Disk driver for initialization purposes (by "stealing" the DOSINI vector) and then calling the Disk's initializer yourself before steps 3 through 5 are performed again.

10.3.4 An Example Program

This driver, included in source form on some DOS XL distribution diskettes as "MEM.LIS", builds a new driver and adds it to the operating system. The "device" being driven is simply excess system memory within your computer. Thus, you may (for example) use this as a pseudo-disk file for passing data between sequentially called programs.

Some words of caution are in order. This driver does not perform step 6 as noted in the last section (but it may be reinitialized via a BASIC USR call). It does not perform self-relocation: instead it simply locates itself above all normal low memory usage (except the serial port drivers, which would have to be loaded after this driver). If you assemble it yourself, you could do so at the MEMLO you find in your normal system configuration (or you could improve it to be self-modifying, of course).

Other caveats pertain to the handler's usage: it uses RAM from the contents of MEMTOP downward. It does not check to see if it has bumped into BASIC's MEMTOP (\$90) and hence could conceivably wipe out programs and data. To be safe, don't write more data to the RAM than a FRE(0) shows (and preferably even less).

In operation, the M: driver reinitializes upon an OPEN for write access (mode 8). A CLOSE followed by a subsequent READ access will allow the data to be read in the order it was written.

More Cautions: don't change graphics modes between writing and reading if the change would use more memory (to be safe, simply don't change at all). The M: will perform almost exactly as if it were a cassette file, so the user program should be data sensitive if necessary: the M: driver will NOT itself give an error based on data contents. Note that the data may be re-READ if desired (via CLOSE and re-OPEN).

The following is a suggested set of BASIC programs:

Ending of PROGRAM 1:

```
9900 OPEN #2,8,0,"M:"  
9910 PRINT #2; LEN(AS)  
9920 PRINT #2; AS  
9930 CLOSE #2  
9940 RUN "D:PROGRAM2"
```

Beginning of PROGRAM 2:

```
100 OPEN #4,4,0,"M:"  
110 INPUT #4,SIZE  
120 DIM STRING$(SIZE)  
130 INPUT #4, STRING$  
140 CLOSE #4
```

BASIC XL users might find RPUT/RGET and BPUT/BGET to be useful tools here instead of PRINT and INPUT. And, of course, users of any other language(s) might find this a handy inter-program communications device.

Section 11: DISK FILE STRUCTURE

PROBLEM PREVENTOR: This entire section contains extremely technical information relating to DOS XL's maintenance of files on your diskettes. If you are not an advanced level programmer, you will have absolutely no need in the world to understand the following discussion. If you are a beginning level programmer, this is not the place to start when looking for some kind of practice program to write. All of the following information is intended for the experienced programmer, and no attempt has been made to "soften" the discussion in order to accommodate users who have no experience with the type of information being discussed.

SPECIAL NOTE: The information contained in this section has been supplied by Future Systems as a courtesy to those users who "wanted to know". Unfortunately, this information relates to performing operations which are far beyond the needs of the vast majority of DOS XL users; and therefore any questions arising from the use of the information contained in this section would be in the extreme minority. Because of the unbalanced nature of normal user support versus technical/advanced user support, very little support can be provided by Future Systems for those users who have trouble with the information contained in this section. Should you encounter problems with the information in this section, Future Systems will attempt to assist you as best as we can; but in general you should consider yourself "on your own".

DOS XL version 2 was produced to provide the maximum compatibility possible with Atari's DOS 2.0s. In fact, the FMS used is identical to that used by Atari (for a simple reason: Optimized Systems wrote Atari's DOS). For reasons known best to Atari, we were instructed to create Atari's FMS around a linked-sector disk space management scheme. In essence, this means that the last three bytes of each sector in a disk file contain a link to the next sector in that same file. The positive result of this is that one produces a relatively small, memory-resident, disk manager which is nevertheless capable of dynamically allocating diskette space (unlike, for example, a contiguous file disk manager). The biggest disadvantage of the scheme seems to be that one may not do direct (random) access to the bytes of such files, as one can do with either a contiguous or mapped file allocation technique. Also, a disk error in the middle of a linked file means a loss of access to the rest of the file.

The purpose of the FMS is to organize the 720 data sectors available on an Atari 810 (or its double density equivalent) diskette into a system of named data files. FMS has three primary data structures that it uses to organize the disk:

1. Volume Table of Contents (VTOC): a single disk sector which keeps track of which disk sectors are available for use in data files.
2. Directory: a group of eight contiguous sectors used to associate file names with the location of the files' sectors on the disk. Each Directory entry contains a file name, a pointer to the first data sector in the file, and some miscellaneous information.

3. **Data Sectors:** sectors containing the actual data and some control information that links one data sector to the next data sector in the file. Note: since double density diskette sectors contain 256 bytes whereas single density (810 drive) sectors contain only 128, certain absolute byte number references may vary depending upon the diskette in use. Throughout this chapter, in such cases, the single density number is given followed by the double density number in square brackets [thus].

11.1 Data Sectors

A Data Sector is used to contain the file's data bytes. Each 128 [256] byte data sector is organized to hold 125 [253] bytes of data and three bytes of control. The data bytes start with the first byte (byte 0) in the sector and run contiguously up to, and including, byte 124 [252]. The control information starts at byte 125 [253].

The sector byte count is contained in byte 127 [255]. This value is the actual number of data bytes in this particular sector. The value may range from zero (no data) to 125 [253] (a full sector). Any data sector in a file may be a short sector (contain less than 125 [253] data bytes).

The left six bits of byte 125 [253] contain the file number of the file. This number corresponds to the location of the file's entry in the Directory. Directory entry zero in Directory sector \$169 has a file number of zero. Entry one in Directory sector \$169 has a file number one, and so forth. The file number value may range from zero to 63 (\$3F). The file number is used to insure that the sectors of one file do not get mixed up with the sectors of another file.

The right two bits of byte 125 [253] (and all eight bits of byte 126 [254]) are used to point to the next data sector in the file. The ten bit number contains the actual disk sector number of the next sector. Its value ranges from zero to 719 (\$2CF). If the value is zero then there are no more sectors in the file sector chain. The last sector in the file sector chain is the End-Of-File sector. The End-Of-File sector will almost always be a short sector.

11.2 Disk Directory

The Directory starts at disk sector \$169 and continues for eight contiguous sectors, ending with sector \$170. These sectors were chosen for the directory because they are in the center of the disk and therefore have the minimum average seek time from any place else on the disk. Each directory sector has space for eight file entries. Thus, it is possible to have up to 64 files on one disk.

A Directory entry is 16 bytes in size, as illustrated by the figure below. The directory entry flag field gives specific status information about the current entry. The directory


count field is used to store the number of sectors currently used by the file. The last eleven bytes of the entry are the actual file name. The primary name is left justified in the primary name field. The name extension is left justified in the extension field. Unused filename characters are blanks (\$20). The Start Sector Number field points to the first sector of the data file.

Directory Entry Structure

Starting Byte # of Field	Length of Field (bytes)	Purpose of Field
--------------------------------	-------------------------------	------------------

0	1	Flag byte. Meanings of bits: \$00 Entry never used \$80 Entry was deleted \$40 Entry in use \$20 Entry protected \$02 a version 2 file \$01 Now writing file
1	2	Count (LSB,MSB) of sectors in file
3	2	Start sector (LSB,MSB) of link chain
5	8	File name, primary
13	3	File name, extension

Directory Structure

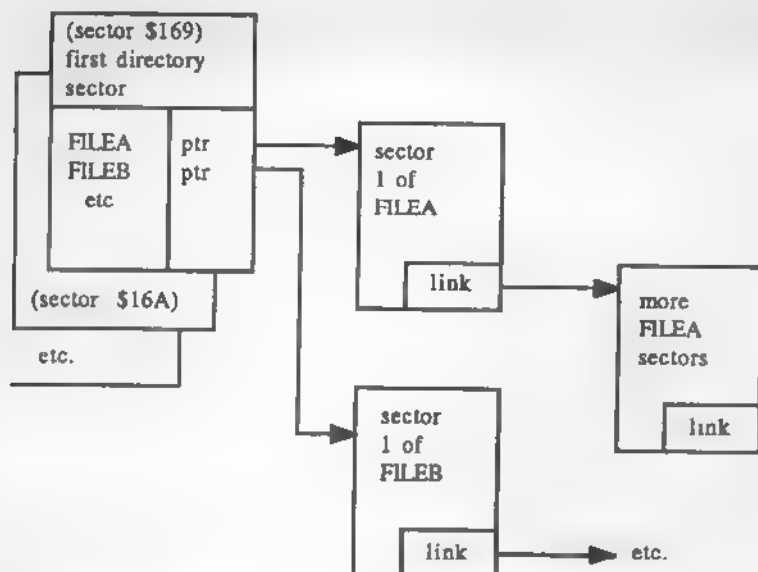

Note: only eight file directory entries are stored per sector, even on double density diskettes.

11.3 Volume Table of Contents (VTOC)

The VTOC sector (\$168) is used to keep track of which disk sectors are available for data file usage. The figure below illustrates the organization of the VTOC sector. The most important part of the VTOC is the sector bit map.

The sector bit map is a contiguous string of 90 bytes, each of which contains eight bits. There are a total of 720 (90 x 8) bits in the bit map--one for each possible sector on an 810 type diskette format. The 90 bytes of bit map start at VTOC byte ten (\$0A). The leftmost bit (\$80 bit) of byte \$0A represents sector zero. The bit just to the right of the leftmost bit (\$40 bit) represents sector one. The rightmost bit (bit \$01) of byte \$63 represents sector 719.

Structure of VTOC Sector

Starting Byte # of Field	Length of Field (bytes)	Purpose of Field
0	1	Reserved (for type code)
1	2	Total number of sectors
3	2	Number of unused sectors
5	5	Reserved
10	90	Sector usage bit map Each bit represents a particular sector; a 1 bit indicates an available sector, a 0 bit indicates a sector in use.
100	28	Reserved (could be used for version 2 type DOS with more than 720 sectors per disk)

Section 12: SYSTEM MEMORY MAP

PROBLEM PREVENTOR: This entire section contains extremely technical information relating to DOS XL's internal structure. If you are not an advanced level programmer, you will have absolutely no need in the world to understand the following discussion. If you are a beginning level programmer, this is not the place to start when looking for some kind of practice program to write. All of the following information is intended for the experienced programmer, and no attempt has been made to "soften" the discussion in order to accommodate users who have no experience with the type of information being discussed.

SPECIAL NOTE: The information contained in this section has been supplied by Indus Systems as a courtesy to those users who "wanted to know". Unfortunately, this information relates to performing operations which are far beyond the needs of the vast majority of DOS XL users; and therefore any questions arising from the use of the information contained in this section would be in the extreme minority. Because of the unbalanced nature of normal user support versus technical/advanced user support, very little support can be provided by Indus for those users who have trouble with the information contained in this section. Should you encounter problems with the information in this section, Indus will attempt to assist you as best as we can; but in general you should consider yourself "on your own".

12.1 Atari Zero Page Map

Location Usage

0-9		System Zero Page
A-B	CPALOC	Known to Atari DOS as DOSVEC
C-D	DQSINI	Vector to FMS Initialization
E-42		System Zero Page
43-49		FMS Zero Page
4A-7F		System Zero Page
80-FF		User and Language Zero Page
80-CD		BASIC XL and Atari BASIC Zero Page
D2-FF		Floating Point Zero Page

12.2 Atari System Memory Map - DOS XL Version 2

Location Usage

100-1FF	6502 Stack Area
200-319	System RAM
300-30B	DCB (Device Control Block)
31A-33F	Device Handler Table
340-3BF	IOCB's - 8 at 16 Bytes Each
3C0-57F	System RAM
580-5FF	E: Text Buffer
600-6FF	User RAM
700-varies	DOS XL -- File Manager and CP or Just Buffers, etc., When Using Extended Memory DOS Systems
709	SABYTE Number of 128 Byte File Buffers
70A	DRVBYT Bit Map: Accessible Drives
70C	SASA Address of Start of Buffers
(2E7)-BFFF	User, Language, and Graphics Memory -- Note: (2E7) Means "Contents of Location \$02E7" (LOMEM).
A000-BFFF	SuperCartridge and Atari BASIC Memory -- Also Used by DOS XL for File Manager and CP in "DOSXL.SUP" Version of the Extended Memory DOS System
C000-CFFF	Unused in Atari 400/800, OS ROM in XL-Series, Bank Switched With RAM
D000-D7FF	I/O Locations
D500-D5FF	Used by SuperCartridge for Bank Select
D800-DFFF	Floating Point ROM
E000-E3FF	Character Set ROM
E400-FFFF	OS Drivers, CIO, etc. -- in ROM
E400-FFF9	Bank-Selectable RAM Used by DOS XL for File Manager, CP, etc., in the "DOSXL.XL" Version of Extended Memory DOS

Section 13: ERRORS

13.1 Types of Errors

All DOS XL operations return a status value in the IOSTAT field. DOS XL convention is that status values of \$80 or greater indicate some sort of error. There are four fundamental kinds of errors that can occur with DOS XL:

13.1.1 Hardware Errors

Such as attempting to read a bad disk, write a read-only disk, etc.

13.1.2 Data Transfer Errors

Errors which occur when data is transferred between the computer and a peripheral device. Examples include Device Timeout, Device NAK, Framing Error, etc.

13.1.3 Device Driver Errors

Found by the driver for the given device, as in (for the DFM) File Not Found, File Locked, Invalid Drive Number, etc.

13.1.4 OS Errors

Usually fundamental usage problems, such as Bad Channel Number, Bad Command, etc

13.2 Error Code Listing

The list of error codes which follows is not necessarily exhaustive, but it does represent all error codes which will normally be returned from DOS XL or any of the Atari device drivers.

Error Code		
Hex	Decimal	Meaning
\$01	1	No error or warning.
\$02	2	Truncated ASCII line. The OS did not find a CR within BUFLen for ASCII line I/O.

Error Code		
Hex	Decimal	Meaning
\$03	3	End of file look ahead. The last byte transferred from the device driver was its end- of-file byte. The device driver must set this status, so it is best to verify that the device being used is capable of returning this status before depending on it.
\$80	128	Operation aborted. Set by Device Handler. (Also BREAK abort on Atari.)
\$81	129	File already open. Program is trying to open a channel (IOCB) that has already been OPENed.
\$82	130	Device does not exist. The device was not found in the OS device table. Often caused by forgetting the disk drive name when using a disk file.
\$83	131	File is write only. Program tried to read from a file which can only be used for writing (i.e., file was OPENed with AUX1 set to 8 or 9).
\$84	132	Invalid Command. CIO has rejected your requested command. (Example: program tried to do XIO to a device which has no extended operations defined.)
\$85	133	Device/File not open. The IOCB has not been OPENed for the operation. Most I/O requests require that the channel be OPENed before a request can be made.
\$86	134	The IOCB specified is invalid. Only IOCB numbers \$00, \$10, \$20, \$30, \$40, \$50, \$60, and \$70 are valid. From some languages, these will be seen as channels 0 to 7.
\$87	135	File is read only. Program tried to write to a file which can only be used for reading (i.e., file was OPENed with AUX1 specified as 4 or 6).
\$88	136	End of file. No more data in file.
\$89	137	Truncated record error. Usually occurs when the line you are reading is longer then the maximum record size specified in the Call to CIO (line oriented I/O). Can't occur with binary I/O on version 2 OS/A+.
\$8A	138	Device timeout error. Usually set by the serial bus I/O handler ("SIO") because a device did not respond within the allotted time as set by the OS.

Error Code		
Hex	Decimal	Meaning
\$8B	139	Device NAK error. Atari: serial I/O error.
\$8C	140	Serial framing error. Atari: serial I/O error.
\$8D	141	Cursor out of range for specific graphics mode you are in. (Could be used for similar meaning by a non-graphics device.)
\$8E	142	Serial bus overflow. Atari: computer could not respond fast enough to serial bus input (SIO error).
\$8F	143	Checksum error. Communications over the serial bus are garbled (Atari SIO error).
\$90	144	1) Device done error. A valid command on the serial bus was not executed properly. Atari: disk rotational speed needs adjustment. 2) Write protect error. The diskette has a write protect tab in place.
\$91	145	Illegal screen mode error. Bad graphics mode number. Other devices: AUX1 and/or AUX2 bytes in IOCB are illegal.
\$92	146	This error means the function you tried to do has not been implemented in the device handler. (Example: attempt to POINT with the graphics device.)
\$93	147	Not enough RAM for the graphics mode you requested. (Could be used by custom drivers for a similar message.)

Note: A errors encountered between \$A0 through \$AD (below) are File Manager errors.

Error Code		
Hex	Decimal	Meaning
\$A0	160	Either a drive # NOT between 1-8 or drive was not powered on.
\$A1	161	Too many OPEN files. No free sector buffers to use for another file.
\$A2	162	Disk FULL. No free space left on disk.
\$A3	163	Fatal system error. Either DOS has bug or bad diskette.
\$A4	164	File mismatch. Bad file structure or POINT values wrong.

Error Code

Hex	Decimal	Meaning
\$A5	165	Bad file name. Check for illegal characters in file name.
\$A6	166	The byte count in your POINT Call was greater then 125 (for single density version 2) or 253 (for double density version 2).
\$A7	167	The file specified is locked (PROtected). Protected files cannot be erased or written to.
\$A8	168	The software interface for the specific device received an invalid command (example: tried to access a non-existent track or sector).
\$A9	169	All space allocated for the directory has been used up (too many filenames in use).
\$AA	170	The file you requested does not appear on this diskette.
\$AB	171	You have tried to POINT to a byte in a file that is not OPENed for update (version 2 only).
\$AC	172	Tried to OPEN a DOS I file with DOS II (version 2 only)
\$AD	173	The disk drive has found bad sectors while trying to format the disk

Section 14: SHIFTING INTO SYNCHROMESH

14.1 What Should You Already Know Before Reading This?

This discussion assumes you are already familiar with the operation of DOS XL and of your Indus GT disk drive. Many terms will be used in this discussion which are explained in this and other manuals which relate directly with the operation of the Indus GT and DOS XL which are not explained for you in this discussion.

If you are just starting to use DOS XL and your Indus GT, don't start using Synchronmesh now! The other manuals which explain the operation of your Indus GT and DOS XL do not expect you to be running Synchronmesh, and many things can appear to be completely different when you are using Synchronmesh than when you are not.

14.2 What Is "Synchronmesh"?

Synchronmesh is actually a software program which "extends" the capabilities of your Indus GT for Atari diskette drive. Included with the Synchronmesh software program is a new copy of DOS XL (version 2.35 or later) which provides your Atari computer with the necessary capabilities to communicate with an Indus GT which is running in a Synchronmesh mode. Synchronmesh and the new DOS XL are two completely independent software packages which require each other in order to function to their fullest extent, and so they are supplied by Future Systems together.

The primary feature of Synchronmesh, and one of the primary features of the new DOS XL, is its capability to transfer data between your Atari and your Indus GT drives at speeds which are multiple times faster than ordinary diskette drive data transfers.

The synchronmesh software program (called "GTSYNC.COM" on the Synchronmesh distribution diskette) contains all the instructions necessary to:

- 1) Detect which of the drives you have attached to your system are Indus GTs.
- 2) Send the instructions to your Indus GT drives which are necessary to cause them to start operating in Synchronmesh mode.
- 3) Tell the new version of DOS XL which of the drives attached to your Atari are now operating in Synchronmesh mode and which are not.

The new version of DOS XL contains all the instructions necessary to perform the following added features:

1) Communicate with Indus GT drives operating in Synchronmesh mode at Synchronmesh communication speeds once GTSYNC COM has told DOS XL which drives are in Synchronmesh mode and which are not.

2) Automatically detect the density (either single or double) of a diskette just before any file on the diskette is opened for either reading or writing. This makes the new version of DOS XL "density smart", and prevents you from having to type CONFIG commands in many situations (but not necessary all situations). This feature is strictly part of the new DOS XL, and has no relationship with the Synchronmesh feature

14.3 How Do You Shift Into Synchronmesh?

The first step is to boot the Synchronmesh distribution diskette in order to start operating under the new copy of DOS XL. Your boot drive (D1) does not need to be an Indus GT. If DOS XL leaves you in Atari BASIC, type "DOS" to return to DOS XL. If you are using the DOS XL menu program, you will need to "Q"uit to DOS XL. You should have the "D1." DOS XL command processor prompt at this point. If you have your Atari connected to a speaker (your T.V.'s speaker or a speaker in your video monitor), be sure to turn the volume up enough to hear the loading "beeps". You'll want to compare the speed and tone of these "beeps" to those which are produced once Synchronmesh is activated.

To shift into Synchronmesh, type:

GTSYNC ON

The command is just "GTSYNC"; but since this command will both activate and deactivate Synchronmesh, you need to type a SPACE and then the word "ON" to tell GTSYNC you wish to have Synchronmesh activated. If you notice that your Indus GT seems to be operating slower than usual while it is loading the "GTSYNC COM" program, your observation would be correct. This is because your Synchronmesh distribution diskette has been specially formatted to operate as fast as possible while running under Synchronmesh. Unfortunately, a diskette which is perfectly formatted for operation under Synchronmesh is less than perfectly formatted for use while Synchronmesh is not active.

Once GTSYNC is loaded and starts running, it will list all eight possible disk drives (D1-D8:) in order and tell you if any drive responded as the indicated drive number and whether a drive which responded is an Indus GT and is capable of operating in Synchronmesh mode. Once GTSYNC has checked-out all eight possible drives, it then tells the new copy of DOS XL that it is okay to start operating in Synchronmesh mode with those drives which are capable of Synchronmesh communications.

You can now see the difference between loading a software program using Synchronmesh by placing your new Synchronmesh distribution diskette into one of the Indus GT's connected to your Atari (in case your number one drive was not a GT), and then typing:

D#:GTSYNC ON

The "#" in the above command should be replaced with the number of the Indus GT into which you placed the Synchronmesh distribution diskette. The "D#:" part is something you should type; it is not the command processor's prompt. If you are listening to the loading "beeps" from your T.V. or monitor speaker, we think you'll be very impressed by their new speed and tone. These "beeps" are directly related to the speed at which data is being transferred between your Indus GT and the Atari.

With Synchronmesh active, you are now ready to use the INIT program to start creating a single density backup copy of your Synchronmesh distribution diskette. When you use INIT with Synchronmesh active to format a diskette on a Synchronmesh GT, the diskette will be formatted for the best operation under Synchronmesh. If you do not have Synchronmesh active, or the drive you use for the format is not a Synchronmesh GT, then the diskette will be formatted for the best operation under non-Synchronmesh.

Diskettes which are formatted for use under Synchronmesh mode are completely compatible, and can be used, under non-Synchronmesh mode and in non-Indus GT disk drives (provided the drive used is also capable of reading the density for which the diskette was formatted). Synchronmesh mainly influences your GT's communications with the Atari, and is not a new diskette density or anything like that. Synchronmesh will work using both single and double density diskettes. Although your GT is capable of reading and writing Atari's seldom used "enhanced" density, Synchronmesh cannot be used when a GT is being used with "enhanced" density. This limitation permitted Synchronmesh under standard single and the more popular double density (the two standard densities supported by DOS XL) to be used to its maximum potential.

Before you run INIT, you may want to run the CONFIG command to make sure that the Indus GT you will be using to format the new diskette is operating in single density mode. Synchronmesh will also function under double density mode, but you should make the backup copy of your Synchronmesh distribution diskette in single density since the original distribution diskette is in single density.

When you run the INIT provided with the new DOS XL, you will notice a new menu item. This menu item is a "second step" in the initialization of a Synchronmesh formatted diskette. The first step is still to use the first INIT menu item to format the entire diskette. Be sure you are using a Synchronmesh GT so that you will get a Synchronmesh formatted diskette. Once the drive has formatted the diskette, select the new menu item in order to reformat the boot (or system) tracks of your Synchronmesh formatted diskette. This new menu item works almost identically to the first menu item.

The reason for re-formatting the system/boot tracks of Synchronmesh formatted diskettes is because Synchronmesh is not active while you are first booting your diskette. So, to make booting as fast as possible, the new INIT permits you to re-format just the system tracks of the diskette in the non-Synchronmesh format.

PROBLEM PREVENTOR: Do not reformat the system tracks of a diskette which already contains information. Only reformat the system tracks of a diskette which you have just formatted using the first INIT menu item. Some of the information you may have saved onto a diskette may have been placed on part of the system tracks, and reformatting these tracks will destroy this information. Reformatting the system tracks of existing diskettes will only result in destroying part of the information on these diskettes, and will not result in these diskette automatically running faster

Once you've both formatted a Synchronmesh diskette and then re-formatted the system tracks of the diskette, you should get out of INIT and then run DUPDSK to duplicate the Synchronmesh distribution diskette onto your newly formatted diskette. When DUPDSK asks if you want to format the destination diskette, always say "N"o. If DUPDSK reformats the diskette, then you'll lose the special Synchronmesh format you created earlier using INIT. If you are listening to your T.V. or monitor speaker, you will notice that DUPDSK will copy the system tracks of your Synchronmesh diskette at pretty much the same speed as without Synchronmesh active (the "beeps" won't occur as fast even though they are still a higher tone); but once DUPDSK starts reading and writing the non-system tracks, you should notice a sudden increase in speed.

Synchronmesh will continue to remain active until you do one of the following:

- 1) Reboot your Atari.
- 2) Turn one or more of your Indus GTs off. NOTE: If you turn a Synchronmesh GT off and then on again, the GT will no longer be operating in Synchronmesh mode; a fact which the DOS XL inside your Atari will not know. This means that DOS XL will not communicate with this GT correctly since DOS XL will try to communicate in Synchronmesh mode, and the GT will try to communicate in standard mode.
- 3) You type the command "GTSYNC OFF" to turn Synchronmesh off.

14.4 How Do You Convert Your Existing Diskettes To Synchronmesh?

Your existing diskettes will still operate fine with Synchronmesh active, except you won't notice any true increase in speed. This is because these diskettes were originally INITIALIZED for non- Synchronmesh mode. Due to the way diskette drives in general function, there is no safe way to just "update" your existing diskettes to be faster using Synchronmesh. You need to copy all of the information on these slower diskettes onto new diskettes which you have INITIALIZED for use with Synchronmesh active.

To do this, use the same process as I described earlier for backing-up your Synchronmesh distribution diskette. If you are short on diskettes (or money to buy diskettes), you can first format a new diskette for use with Synchronmesh, then the information from a non-Synchronmesh diskette onto the new diskette, verify the information made it onto the new diskette correctly, re-format the old Synchronmesh diskette for use with Synchronmesh, and then copy the information from the next non-Synchronmesh diskette onto this re-formatted diskette. You can continue this process through your entire library.

PROBLEM PREVENTOR: Do not try to update any copy protected or other special diskettes not intended to be used with DOS XL! We will discuss these types of diskettes later in this discussion.

PROBLEM PREVENTOR: The version of DOS.SYS that is written on your new diskette must be 2.351 or higher in order to operate with Synchronmesh. If you want your new diskette to autoboot and turn on Synchronmesh, you should utilize INIT's Choice 3 (Write DOS.SYS Only) after first Initializing the Disk Only and then Reformatting the Boot Tracks Only (Choices 1 and 4 of INIT).

14.5 How Do You Automatically Activate Synchronmesh When Booting?

Even if you activate Synchronmesh and then write DOS XL onto a new diskette, DOS XL will not "boot" with Synchronmesh active. There are two primary reasons for this:

1) After being powered-on, your Indus GTs must be told to operate in Synchronmesh mode before they will respond in that fashion. The reason for this is to insure on-going full compatibility between the Indus GT and many of the protected software diskettes currently being sold; something which is always Indus's number one priority. DOS XL will not boot-up with Synchronmesh active since your GTs won't be expecting it.

2) If DOS XL booted-up with Synchronmesh active, it would also need to already know which numbered drives are capable of communicating in Synchronmesh and which are not. This would require that this information be saved onto the DOS XL diskette along with DOS XL; and if you ever had to change which drives you had connected to your Atari as certain drive numbers, you'd have to go back and update all of the diskettes on which you have DOS XL saved with this new configuration information.

It is still possible, however, to have Synchronmesh automatically activate after DOS XL has booted. Simply place the command "GTSYNC ON" into a "STARTUP EXC" file on your system diskette. Be sure to also include the "GTSYNC.COM" utility on your system diskette. The STARTUP.EXC file is discussed in the DOS XL Reference Manual.

14.6 What About The New DOS XL's Auto-Density Feature?

In addition to the new DOS XL's (version 2.35 or later) ability to communicate with the higher speed Synchronesh GTs, it also has the ability to auto-determine when a diskette is single density or double density. DOS XL always checks a special location on a special sector on track zero of any diskette just before trying to open a file for reading or writing on that diskette. This location tells DOS XL the density of the diskette containing the file. Most diskette operations (although not all) start by either your program or some other pre-written program trying to open a file for either reading or writing, and once this occurs DOS XL will automatically adjust for any diskettes which have been changed and are of a different density from the previous diskette.

This special piece of density information is located on a sector on the diskette which is always treated by DOS and your drive as single density, regardless of the actual density of the diskette.

Since DOS XL requires more memory space to handle double density diskettes than single density diskettes, DOS XL now assumes that all diskettes will be double density when it is first booted. This means that DOS XL will always allocate enough memory to handle double density diskettes, and therefore it may use up more of your Atari's memory than did your previous copies of DOS XL if you normally used one or more of your drives in single density. The new DOS XL will not take up much more memory than that for which you are accustomed if you normally use double density diskettes. But remember, DOS XL contains new added features without getting rid of any old features; so it does require a little more memory for these new features.

Ordinarily, DOS XL's auto-density feature will handle any diskette changes you make without any problem. But, there are certain circumstances in which you will need to assist DOS XL's decision concerning a diskette's density. That is why the CONFIG command is still available for use with the new DOS XL. Some of the more typical circumstances are as follows:

- 1) When your drive is currently operating in a density different than the density for which you wish to format a diskette. This circumstance is only valid if you have two or more drives, since single drive users would still use INITDBL. The way to handle this situation is to first insert the diskette you wish to format into the drive, and then use the CONFIG command to CONFIGure the drive to the density in which you wish to format the diskette. After CONFIG, use INIT to initialize the diskette. Remember: Neither CONFIG nor INIT try to open any files on any diskettes (although the command processor will open CONFIG.COM and INIT.COM on your default drive when you issue the CONFIG and INIT commands), so your non-default drives will remain in the density for which you CONFIGured them until you've started the diskette INITIALizing.

2) When you wish to re-format a diskette using a density different from that for which the diskette is already formatted. This situation is actually no different than the first situation, since neither CONFIG nor INIT will try to open any files on the diskette.

14.7 What About Synchromesh And Software Other Than DOS XL?

Although your Indus GT is capable of communicating with your Atari at a much higher speed than most other diskette drives, it is normally prevented from doing this because the Atari does not expect a diskette drive to be able to communicate at this higher speed. This causes a problem for Synchromesh, since it needs "something" to tell your Atari to communicate with your GT at a faster rate before your GT can start communicating at this faster rate. And, even if Synchromesh communication speeds were to "magically" work without any "something" to help your Atari, the higher communication rates would interfere with many software protection schemes and would cause incompatibility between your GT and some of the programs you may have purchased. And as we mentioned before, compatibility is always the first priority at Future Systems.

So, special non-DOS XL programs will not just "magically" take advantage of your GT's Synchromesh capabilities. What can you do about this? Always check with your software dealer(s) to see if the software package for which you are interested is available in a newer "Indus GT Synchromesh enhanced" version. Normally these newer software packages contain special markings to indicate they have been upgraded. And, if you have existing software packages which you'd like to take advantage of Synchromesh, contact the software's publisher. It is always possible that the publisher of your favorite package may have an upgrade policy which may permit you to get a new "Indus GT Synchromesh enhanced" version of the software for little or no charge, especially if you remembered to send in the publisher's software registration card.

If, for some reason, your favorite nationally advertised software publisher has not yet upgraded their software packages to perform at Synchromesh speeds, have them contact our support staff here at Future Systems (818/407-1647) if they haven't already done so; and we'll be happy to supply them with all the necessary information free of charge.

APPENDIX A

A SHORT GLOSSARY OF COMPUTER TERMINOLOGY

ABSOLUTE ADDRESS The address or location in memory that represents the actual, physical location in memory for that particular piece of information. This contrasts with relative or indirect addresses -- see below.

ACCESS TIME This is the amount of time it takes for information to become available once the computer has requested it. For RAM memory, this time is measured in billionths of a second. For disk drives, the access time is measured in thousandths of a second and includes the time required to move the read/write head over the requested track, as well as the latency or time required for the correct sector to appear under the read/write head.

ACRONYM A word formed from the first letter or other letters of a compound or lengthy expression. For instance, PTA represents Parent Teacher Association or RAM represents Random Access Memory. Acronyms are usually printed in all capital letters.

ADDRESS Refers to a specific location in memory. With 8 bit microprocessors the range of these addresses is from 0 to 65536 decimal or 0 to FFFF in hexadecimal notation. A memory map gives you the location or address where specific ROM or RAM routines used by your computer may be found.

ALPHANUMERIC A character set containing any combination of letters (a-z), numbers (0-9) or miscellaneous characters (#\$@!%&* etc.).

ANSI An acronym for American National Standards Institute, a committee formed to establish standards for data processing and computer communications, recording media, hardware and software interface specifications, etc.

APPLICATION A program which is designed for a specific purpose, for example, a real estate investment package or a home accounting system.

ARGUMENT The number, variable or string which follows and gives definition to a function or command.

ASCII An acronym for American Standard Code for Information Interchange -- a set of standard numerical equivalents for the alphabet, numbers, punctuation and special symbols used by the computer.

ASSEMBLER A computer program which converts assembly language instructions (easier for the programmer to remember) into machine language instructions (easier for your computer to perform).

ASSEMBLY LANGUAGE A programming language that is more advanced than machine language. Assembly language uses easier to remember symbols or mnemonics (for example, LDY means Load Y or load the Y register of the microprocessor, etc) which have one for one equivalents in machine language

BACKUP Making an extra copy of a master diskette (or a data diskette) or periodically saving your files to diskette while work is in progress so that in the event of disaster (computer malfunction, power outage, spilling coffee on the diskette) files are not lost.

BASIC Beginner's All-purpose Symbolic Instruction Code, a programming language that is commonly used in many microcomputers.

BATCH A set of commands or data that has been grouped for processing sequentially in a single session.

BAUD A unit of measurement for signalling speed, normally bits per second, as a measure of the flow of data.

BCD Binary Coded Decimal. A method of using groups of four binary digits to represent each individual digit of a decimal number.

BINARY A numbering system used by all computer systems which is based on two digits (0,1).

BIT An acronym for Binary digIT (0 or 1). There are eight bits in a byte.

BLOCK A term representing a contiguous group of data treated as a single unit.

BOOT A term used to describe loading a computer program or operating system. A "cold boot" is starting with the machine off. A "warm boot" is loading the program or operating system without turning off the computer.

BUFFER A storage area used to hold data temporarily or to compensate for the rate of data flow.

BUG An error, flaw or malfunction in either the software (program) or hardware (computer and/or peripherals).

BYTE (1) A series of binary digits (usually eight bits) which together represent a single character, or (2) a unit of computer storage.

CARRIAGE RETURN (sometimes shortened to RETURN) The term was derived from the typewriter lever used to advance to the beginning of the next line. In computer terminology it represent the non- printed character that returns the cursor to

the beginning of the next line on a CRT or a print head to the beginning of the line (with or without a line feed) on a printer

CATALOG Same as a directory; a list of items such as files or programs which are arranged in an easy to reference structure.

CATHODE RAY TUBE (CRT) A device similar to a television tube, but used for displaying computer data and graphics.

CHANNEL A communication link through which data and/or control information can be transmitted.

CHARACTER A letter, a number or a miscellaneous symbol such as !@\$%&*?.

CHECKSUM A number which represents the sum of a series of characters or numbers. Typically such a number appears at the end of a sector or block of data and is used to verify the accuracy of the data which was read - if the checksum number calculated as the sector is being read matches that which was previously recorded, it is much more likely that the sector was correctly read

CHIP A small piece of silicon onto which an integrated, microscopic circuit is built. These tiny objects have revolutionized the computer world

CLOCK A highly accurate pulse or signal that is used by your computer to derive timing information or synchronize the transfer of data or control information

CODE A term used to describe computer instructions or symbols describing data

COMMAND The portion of an instruction for the computer that specifies the operation which is to be performed.

COMPILER A program that translates high level program code into machine language code.

COMPUTER LANGUAGE A set of coded instructions which are used for communicating with the computer

CONCATENATION Tying two strings together. In BASIC this is done by using a "+" sign, i.e. N\$+NL\$.

CONTROL KEY (often abbreviated as CTRL) Usually used in conjunction with another key pressed at the same time to indicate a special cursor or program function

CPS Characters Per Second.

CPU Central Processing Unit The central processor or "brains" of a computer containing main storage, arithmetic unit, and registers.

CRC Cyclic Redundancy Check. A more sophisticated and comprehensive mathematic operation performed on data to ensure better transmission accuracy than a simple CHECKSUM operation.

CRYSTAL A component (quartz crystal) commonly found in computer systems that due to its precise molecular structure is used to generate highly accurate clock signals or timing pulses.

CURSOR A small mobile square or dash (sometimes flashing) which runs along the screen indicating where the next character will appear.

DAISYWHEEL A type of print element that is circular or wheel shaped, with daisy like petals on which different printable characters are formed. Daisywheel printers produce excellent quality, fully formed characters, and are often referred to as typewriter or letter quality printers.

DATA A general term which describes raw information such as numbers, facts, symbols, characters, names, information, etc.

DEBUG The process of finding and fixing errors in a computer program.

DECIMAL The standard, base 10 counting system which utilizes the digits 0 through 9.

DEFAULT VALUE The path the computer program will take unless other options are specifically indicated by the user.

DENSITY This refers to how closely data is packed on a disk. Track density refers to how closely the concentric circles or tracks of information are spaced. Single and Double Density refers to how closely individual bits are packed around each circle or track. Double density (MFM) encoding places twice as much data in the same linear space on the track as single density (FM) encoding.

DIRECTORY A list or catalog of all of the files contained on a diskette or other storage medium.

DISK DRIVE A peripheral device that reads and writes data to magnetic disks.

DISK FILE A file that resides on a disk.

DISK OPERATING SYSTEM (DOS) The software or programs that enable the computer to make use of disk drives for storing and retrieving information. The disk operating system also typically takes care of checking CRC bytes for read/write errors,

allocation of space on the diskette, specific file or data location on the diskette, formatting of blank diskettes, and so on.

DOCUMENTATION Instructions accompanying computer programs explaining exactly how these programs work.

DOT MATRIX PRINTERS A printer device which prints characters from a matrix of dots (often 5 x 7) which strike the paper in varying configurations depending on the desired character symbol

DOWN LOAD Transmitting information from one computer system to another.

DOWN TIME The time when a computer is not functioning due to mechanical, electronic or human failure.

DRIVER This refers to small programs that are used to run other programs or to control external devices or peripherals.

ESCAPE (ESC) A non-printed character that is typically interpreted by the computer or printer (in conjunction with another character) as a control signal to perform a specific function.

EXECUTE This term refers to the process of first interpreting the instruction in question and then performing the requested operation(s)

EXTENSION This refers to a supplemental set of characters often appended to a file name (and usually separated by a period); extensions are typically used to categorize file types (e.g., .BAS might be appended to BASIC file names while a file labeled .TXT might be appended to letters or text files).

EXTRINSIC COMMAND (also referred to as **TRANSIENT COMMAND FILES**) Refers to commands that are not located within the computer's memory and must be looked up and loaded from a disk before they can be performed

FILE A group of organized sectors or data, that is assembled for a single function and is considered a single unit, this is used similar to the way a file folder would hold a set of related information in a filing cabinet.

FIRMWARE Logic circuits in computer ROM which can be altered by software under certain circumstances. Compare "hardware" and "software".

FLOPPY DISKETTE A flat, flexible disk of magnetic media 8, 5-1/4 or 3-1/2 inches in diameter used to store data.

FORMAT (1) The process of placing tracks and sectors onto a diskette prior to use in the computer. This process destroys all existing data on the diskette, or (2) the arrangement of text, punctuation, indents, etc. on reports or a word processor.

GIGO Garbage In Garbage Out. The input of unwanted, meaningless information results in the output of unwanted, meaningless information.

HANDSHAKING Signals between the computer and various peripherals that confirm the sending or receiving of data.

HARDWARE The computer and all its electronic and physical parts -- the keyboard, printer, monitor, disk drive, etc.

HARD ERROR An error that consistently occurs with repeated retries. In most systems, a hard error condition is not brought to the attention of the user unless it has occurred on at least 10 (and in some systems many more) successive retries.

HEAD This refers to the magnetic read/write head which converts the computer's binary signals to magnetic pulses on the diskette.

HERTZ (HZ) A unit of measurement representing cycles per second. In the United States AC power is nominally rated at 115 volts, 60 hertz.

HEXADECIMAL A base 16 numbering system used by the computer. The digits 0 - 9 and A, B, C, D, E and F are used for notation. Hexadecimal numbers are normally preceded by a dollar sign symbol (\$) to avoid confusing them with decimal or octal numbers.

HIGH LEVEL LANGUAGE This refers to computer languages which utilize instructions that are more english like and therefore simpler for the programmer to use and understand; each high level language command usually translates into a series of simpler machine language statements.

HI-RES GRAPHICS High RESolution Graphics. A method for creating computer graphics which allows the use of a single point on the screen, which in turn produces finer detail than lo-res or keyboard graphics.

HOME A command from a key or a program which causes the cursor to move to its "home" position (usually the upper left-hand corner of the screen).

INDIRECT ADDRESS Rather than giving the specific location in memory for a particular piece of information, INDIRECT ADDRESSING gives instead a place in memory where the specific location of this information (or absolute address) may be found.

INITIALIZE (1) Setting various parameters to an initial value prior to processing, or (2) the process of placing tracks and sectors onto a diskette prior to use in the computer. This process destroys all existing data on the diskette.

INPUT Information or data to be entered into computer storage or usage by various methods.

I/O Input/Output. Refers to the flow of information both into and out from the computer or peripheral.

INTERFACE An electronic link which connects two computer components making them compatible.

INTRINSIC COMMAND Refers to a command that can be performed directly by the computer from memory without needing to load portions of the command from disk

INVERSE VIDEO Screen output which is written as dark characters on a light background.

JUSTIFICATION In word processing this represents the process of controlling the spacing of words and/or graphics so that an even, vertically aligned right or left hand margin is formed.

KEYBOARD GRAPHICS Drawing with defined characters such as triangles, circles and bars that substitute for alphanumeric characters.

KBYTE (K) A unit of measure of computer memory. 1 Kbyte = 1024 bytes and is sometimes called a kilobyte.

LEAST SIGNIFICANT BIT (or BYTE) The bit or byte in the rightmost position in a number or word. For instance in the number 12345, the number 5 is the least significant or lowest value number, since the 4 represents 40, the 3 represents 300, and so on

LED Light Emitting Diode. A relatively low power, highly reliable source of light. Light Emitting Diodes are frequently used as indicators or status displays on computers and are also used in disk drives (coupled with photo-detectors) to detect track zero positioning of the read/write head or the presence or absence of a write protect tab on your diskette, etc.

LOMEM An acronym for LOW MEMory, a specific location in memory that points to the lowest address in RAM that a user program can be loaded.

LO-RES GRAPHICS LOW RESolution Graphics A method for creating computer graphics using small squares of color usually the size of a single character. This

creates a stepped appearance in circles and diagonal lines. Uses less memory than hires graphics.

MACHINE LANGUAGE The lowest level computer language, directly understandable by the computer.

MAINFRAME (1) The central processing unit of a very large computer, or (2) the first generation of computers, which are huge by today's standards.

MEGABYTE (MB) A unit of measure of computer memory. 1 MB = 1,024,000 bytes.

MEMBRANE KEYBOARD A keyboard with a flat, flexible keyboard surface. Used on cash registers in some fast food restaurant.

MEMORY The amount of electronic workspace available on a computer. Usually measured in Kbytes.

MENU A list of programs, options, procedures or other information which is displayed on the screen and serves as an aid to the user in selecting a task.

MENU-DRIVEN A feature of computer programs using menus to aid the user, alleviating the need to refer constantly to documentation

MICROCOMPUTER A general term which refers to a complete small desk-top computer system.

MICROPROCESSOR A silicon chip that is the central processing unit (CPU) of a microcomputer.

MINI COMPUTER A mid-range computer system, smaller than a mainframe but larger than a microcomputer.

MNEMONIC An aid to memory, e.g., in naming a program, variable command, etc.

MODEM MODulator/DEModulator. A device which converts computer signals to codes which can be transmitted via telephone lines to another computer.

MOST SIGNIFICANT BIT (or BYTE) The bit or byte in the leftmost position in a number or word. For instance in the number 12345, the 1 is the most significant or highest value element since it represents 10,000, whereas the 2 represents only 2,000, the 3 represents 300, and so on.

MTBF Mean Time Between Failures. The average time between failures for any device.

MTTR Mean Time To Repair. An average time required by a technician to repair the faulty device.

NIBBLE Four bits or half a byte. Usually these represent the four least significant bits or most significant bits of a byte. Nibbles are often used to create BCD numbers (binary coded decimal).

OEM Original Equipment Manufacturer.

OPERATING SYSTEM (OS) The software or firmware control system under which all other software and hardware in the computer functions. The operating system manages all input/output, peripherals and deals with the application software for the computer's main processor.

OUTPUT Information or data which is transmitted from computer storage to the screen, printer or other peripheral device.

OVERFLOW In communications, a condition in which the buffer cannot hold all of the data being sent to it. Can also be a condition caused by a mathematical operation that generates a number that is too large for the software or hardware of the particular machine.

PAGE 256 consecutive bytes of memory beginning on a page boundary. Page boundaries begin at address 0 and occur each 256 bytes thereafter (multiples of \$100).

PARAMETER Values which follow a command or instruction that provide additional information for the command.

PARALLEL Having the same direction or occurring simultaneously. Usually refers to the transmission of information eight or more bits at a time, rather than serially or only one bit at a time.

PARITY CHECK The simplest of the data transmission error detecting techniques. A bit (usually bit 8) is set to 1 or 0 to indicate whether the remaining seven bits in the byte contain an odd or even number of "1" bits.

PEEK A BASIC programming statement used to read or display the decimal value of a specified location in memory.

PERIPHERAL Any device for input/output in a computer system such as a printer, monitor, plotter, disk drive, etc.

PIXEL The basic element (dot) of a monitor screen which is definable and addressable and commonly used for computer graphics.

PLOTTER A peripheral device used to draw graphs, plot coordinate points, etc.

POINTER A location in memory which contains the location of another specific item of information.

POKE A BASIC programming statement used to place a decimal number directly into a specified location in memory.

PRINTED CIRCUIT BOARD (PCB or PC Board) A fiberglass board onto which a copper wiring diagram has been etched -- this copper plated wiring electrically connects each of the components that are later installed on the board

PROGRAM A sequence or series of instructions given to the computer to perform a specific series of tasks or functions; also referred to as "software".

PROMPT Direction given by the computer to the user. For example, many computer programs offer prompt lines at the bottom of the screen reminding the user what commands are available in that particular mode.

PROTECT A method of securing a file or data against inadvertant or unintentional modification. This can be accomplished through physical protection of the diskette file or by software recording special indicators on the directory entry of the file.

PSEUDO-RANDOM A sequence of numbers generated by the computer by a known formula, yet done in such a way that it is virtually impossible for the user to predict what number will be chosen. Used primarily in video games.

RAM Random Access Memory. The computer's workspace. Information stored in RAM is lost when the computer is turned off unless the data there is saved to disk or tape before exiting.

RANDOM ACCESS This refers to the ability of the computer or disk drive to go directly to the sector or segment of data it wishes to use without the necessity of sequentially searching through an entire record to reach the desired information.

REGISTER A register represents a temporary storage or processing area internal to the microprocessor which is accessible much more quickly than main memory.

RELATIVE ADDRESS Rather than giving a specific location in memory where a certain piece of information can be found, RELATIVE ADDRESSING tells you how many bytes higher or lower in memory than currently located this information can be found.

REMARK A comment that can be made in a computer program by the programmer to serve as a reminder, e.g., "REM the next 12 lines are a subroutine that plays music".

RESERVED WORDS A list of words and abbreviations that BASIC recognizes as commands or functions. The reserved words cannot be used in variable names.

RESET This term describes a software or hardware command which can be sent to your computer that will typically 1. Halt any program currently in operation. 2. Initialize or restore to power on condition defaults a number of variables. 3. Will not normally erase any BASIC program currently in memory (in this respect it has advantages over turning power to the computer off and on again).

ROM Read Only Memory Permanent computer memory containing such information as the operating system, character set, etc. This information is not alterable and is not lost when the computer is turned off as with RAM.

ROUTINE A set of instructions or commands organized to direct the computer to perform specific action(s). A program can contain several routines although a routine may be considered a program by itself.

RS232 or RS232C This represents a widely used serial interface standard (adopted by the Electronic Industry Association) that governs the timing, control signals and physical connectors used between computers and various peripherals.

SAVE TO DISK Giving the computer a command to permanently save what is in RAM memory on a disk so that the computer can be turned off or a new program loaded

SERIAL Handling data sequentially or one bit at a time in the transfer of data.

SCROLLING Movement of the text up or down so that material which is not visible in one frame can be displayed on the screen.

SECTOR A sector represents a block of data (typically 128 or 256 bytes in length) which constitutes one of several segments or units composing a track.

SEEK TIME The amount of time required for the disk drive's positioning system to move the read/write head to the specified track.

SOFT ERROR A transient, not predictable fault encountered by the disk drive. This can be caused by dust particles, sudden vibration of the disk drive or media, power line surges, or other causes. Soft errors, by definition, are recovered from by re-reading the sector or block of data originally producing the error

SOFT-SECTORED This refers to diskettes on which the sectors or blocks of information comprising each track are identified by address data being recorded magnetically on the track by software. This contrasts with hard sectored diskettes where the sector separations are marked by reference holes being physically punctured through the diskette.

SOFTWARE Computer programs and sub-routines. In contrast, the computer and its various peripherals are hardware.

STEPPER MOTOR A motor that rotates in precise increments each time an electrical pulse is applied to it. In flexible disk drives, these movements position the read/write head over the concentric tracks on the diskette where data is stored.

STRING A related set of alphanumeric characters or symbols. The word "INDUS" is a string of five characters. String variables (as opposed to real number or integer variables) are usually indicated with a dollar sign suffix, for example, X\$ = DATA.

SUBROUTINE A self-contained program within a program. When a portion of a program has to be executed several times it can be incorporated into a subroutine and then accessed whenever necessary.

SYNCHRONOUS DATA TRANSMISSION The process of sending and receiving information having both the sending and receiving devices synchronized to a common clock signal.

SYNTAX The grammatical rules of a programming language or operating system.

TIME SHARING A technique whereby many terminals can share a centralized computer at the same time.

TRACK Information on a diskette is organized in the form of concentric circles or tracks of recording area. Each of these tracks can be randomly accessed by the disk drive by moving its read/write head over any selected track location and does not require reading all of track one before moving to track two, etc.

TRACKS PER INCH (TPI) A method of measuring the density of concentric circles or tracks of data on disks. On minifloppy diskettes, 48 tracks per inch is standard track density, 96 tracks per inch is referred to as double track density.

TRANSMISSION SPEED This is the speed at which data is sent from one device, such as the computer, to another device, such as a printer or modem. Transmission speed is usually measured in the number of bits per second or BAUD rate.

TRUNCATE To shorten by cutting off.

USER-FRIENDLY A term used by the computer industry to describe a program that is easy to use without extensive documentation.

USER MEMORY Memory that can be accessed and changed by the user. This is usually the portion of the computer's addressing range that remains once the operating system and BASIC ROM areas have been removed.

UTILITY Non-application programs that allow the user to perform various functions closer to machine level than normal. Their varied purposes include copying files, renumbering programs, compiling code to make the program run faster, etc.

VARIABLE A symbol used in a program to which a value can be assigned. Variables can represent real numbers (e.g., LET X = 10) or, when followed by a "\$" symbol or string indicator, can represent a group or string of characters or numbers (e.g., LET G\$ = BURLESQUE).

WILD CARD Symbols used to represent one or more characters of any value. The expression is derived from and is used in a similar way to card games, where the "wild card" can be used to represent any card chosen by the dealer or in this case the computer.

WORD PROCESSOR A computer program which allows the computer to function as a powerful typewriter. Text files can be manipulated quickly and easily -- blocks of text can be moved without retyping, spelling errors corrected, editorial or global changes made, etc.

WRITE ENABLE The process of modifying storage media to allow a disk or tape drive to record information on this media. On a minifloppy diskette, this involves removing the write protect sticker or tab from the media, or alternately on an Indus GT, by pressing the protect button to turn off the electronic write protect function.

WRITE PROTECT The process of physically inhibiting your computer or disk drive from being able to intentionally or accidentally record information on your diskette. This is accomplished on a minifloppy diskette by placing a write protect tab or sticker over the write enable notch on the side of the diskette jacket, or alternately on an Indus GT, by pressing the protect button to turn on the electronic write protect function.

APPENDIX B

DECIMAL/HEXADECIMAL/BINARY CONVERSION TABLE

Decimal	Hex	Binary	Decimal	Hex	Binary
0	0	0000 0000	32	20	0010 0000
1	1	0000 0001	33	21	0010 0001
2	2	0000 0010	34	22	0010 0010
3	3	0000 0011	35	23	0010 0011
4	4	0000 0100	36	24	0010 0100
5	5	0000 0101	37	25	0010 0101
6	6	0000 0110	38	26	0010 0110
7	7	0000 0111	39	27	0010 0111
8	8	0000 1000	40	28	0010 1000
9	9	0000 1001	41	29	0010 1001
10	A	0000 1010	42	2A	0010 1010
11	B	0000 1011	43	2B	0010 1011
12	C	0000 1100	44	2C	0010 1100
13	D	0000 1101	45	2D	0010 1101
14	E	0000 1110	46	2E	0010 1110
15	F	0000 1111	47	2F	0010 1111
16	10	0001 0000	48	30	0011 0000
17	11	0001 0001	49	31	0011 0001
18	12	0001 0010	50	32	0011 0010
19	13	0001 0011	51	33	0011 0011
20	14	0001 0100	52	34	0011 0100
21	15	0001 0101	53	35	0011 0101
22	16	0001 0110	54	36	0011 0110
23	17	0001 0111	55	37	0011 0111
24	18	0001 1000	56	38	0011 1000
25	19	0001 1001	57	39	0011 1001
26	1A	0001 1010	58	3A	0011 1010
27	1B	0001 1011	59	3B	0011 1011
28	1C	0001 1100	60	3C	0011 1100
29	1D	0001 1101	61	3D	0011 1101
30	1E	0001 1110	62	3E	0011 1110
31	1F	0001 1111	63	3F	0011 1111

DOS XL for Indus GT

Reference Manual

Decimal Hex Binary

64	40	0100 0000
65	41	0100 0001
66	42	0100 0010
67	43	0100 0011

68	44	0100 0100
69	45	0100 0101
70	46	0100 0110
71	47	0100 0111

72	48	0100 1000
73	49	0100 1001
74	4A	0100 1010
75	4B	0100 1011

76	4C	0100 1100
77	4D	0100 1101
78	4E	0100 1110
79	4F	0100 1111

80	50	0101 0000
81	51	0101 0001
82	52	0101 0010
83	53	0101 0011

84	54	0101 0100
85	55	0101 0101
86	56	0101 0110
87	57	0101 0111

88	58	0101 1000
89	59	0101 1001
90	5A	0101 1010
91	5B	0101 1011

92	5C	0101 1100
93	5D	0101 1101
94	5E	0101 1110
95	5F	0101 1111

Decimal Hex Binary

96	60	0110 0000
97	61	0110 0001
98	62	0110 0010
99	63	0110 0011

100	64	0110 0100
101	65	0110 0101
102	66	0110 0110
103	67	0110 0111

104	68	0110 1000
105	69	0110 1001
106	6A	0110 1010
107	6B	0110 1011

108	6C	0110 1100
109	6D	0110 1101
110	6E	0110 1110
111	6F	0110 1111

112	70	0111 0000
113	71	0111 0001
114	72	0111 0010
115	73	0111 0011

116	74	0111 0100
117	75	0111 0101
118	76	0111 0110
119	77	0111 0111

120	78	0111 1000
121	79	0111 1001
122	7A	0111 1010
123	7B	0111 1011

124	7C	0111 1100
125	7D	0111 1101
126	7E	0111 1110
127	7F	0111 1111

DOS XL for Indus GT

Reference Manual

Decimal	Hex	Binary
128	80	1000 0000
129	81	1000 0001
130	82	1000 0010
131	83	1000 0011
132	84	1000 0100
133	85	1000 0101
134	86	1000 0110
135	87	1000 0111
136	88	1000 1000
137	89	1000 1001
138	8A	1000 1010
139	8B	1000 1011
140	8C	1000 1100
141	8D	1000 1101
142	8E	1000 1110
143	8F	1000 1111
144	90	1001 0000
145	91	001 0001
146	92	1001 0010
147	93	1001 0011
148	94	1001 0100
149	95	1001 0101
150	96	1001 0110
151	97	1001 0111
152	98	1001 1000
153	99	1001 1001
154	9A	1001 1010
155	9B	1001 1011
156	9C	1001 1100
157	9D	1001 1101
158	9E	1001 1110
159	9F	1001 1111

Decimal	Hex	Binary
160	A0	1010 0000
161	A1	1010 0001
162	A2	1010 0010
163	A3	1010 0011
164	A4	1010 0100
165	A5	1010 0101
166	A6	1010 0110
167	A7	1010 0111
168	A8	1010 1000
169	A9	1010 1001
170	AA	1010 1010
171	AB	1010 1011
172	AC	1010 1100
173	AD	1010 1101
174	AE	1010 1110
175	AF	1010 1111
176	B0	1011 0000
177	B1	1011 0001
178	B2	1011 0010
179	B3	1011 0011
180	B4	1011 0100
181	B5	1011 0101
182	B6	1011 0110
183	B7	1011 0111
184	B8	1011 1000
185	B9	1011 1001
186	BA	1011 1010
187	BB	1011 1011
188	BC	1011 1100
189	BD	1011 1101
190	BE	1011 1110
191	BF	1011 1111

DOS XL for Indus GT

Reference Manual

Decimal	Hex	Binary
192	C0	1100 0000
193	C1	1100 0001
194	C2	1100 0010
195	C3	1100 0011
196	C4	1100 0100
197	C5	1100 0101
198	C6	1100 0110
199	C7	1100 0111
200	C8	1100 1000
201	C9	1100 1001
202	CA	1100 1010
203	CB	1100 1011
204	CC	1100 1100
205	CD	1100 1101
206	CE	1100 1110
207	CF	1100 1111
208	D0	1101 0000
209	D1	1101 0001
210	D2	1101 0010
211	D3	1101 0011
212	D4	1101 0100
213	D5	1101 0101
214	D6	1101 0110
215	D7	1101 0111
216	D8	1101 1000
217	D9	1101 1001
218	DA	1101 1010
219	DB	1101 1011
220	DC	1101 1100
221	DD	1101 1101
222	DE	1101 1110
223	DF	1101 1111

Decimal	Hex	Binary
224	E0	1110 0000
225	E1	1110 0001
226	E2	1110 0010
227	E3	1110 0011
228	E4	1110 0100
229	E5	1110 0101
230	E6	1110 0110
231	E7	1110 0111
232	E8	1110 1000
233	E9	1110 1001
234	EA	1110 1010
235	EB	1110 1011
236	EC	1110 1100
237	ED	1110 1101
238	EE	1110 1110
239	EF	1110 1111
240	F0	1111 0000
241	F1	1111 0001
242	F2	1111 0010
243	F3	1111 0011
244	F4	1111 0100
245	F5	1111 0101
246	F6	1111 0110
247	F7	1111 0111
248	F8	1111 1000
249	F9	1111 1001
250	FA	1111 1010
251	FB	1111 1011
252	FC	1111 1100
253	FD	1111 1101
254	FE	1111 1110
255	FF	1111 1111

APPENDIX C

OTHER FILES ON YOUR DISKETTE

C.1 CONFIG.BAS A Guide To Writing Your Own Density Utility

The following program listing is offered as a guide or model for the advanced programmer who may wish to write his own density configuration program or incorporate such a routine within some other program he wishes to write. As we have previously noted, special, highly technical information of this type will receive only modest levels of support from our technical support staff.

```

10 REM BASIC DISK DRIVE STATUS/CONFIGURATION PROGRAM
20 REM BY GREG FARRIS 2/13/84
30 DIM TBL$(12),EXCS(4),DENS(7),DPS(3)
40 TBL$=""
50 OPEN #1,4,0,"K:"
60 GRAPHICS 0:POKE 752,1
70 POKE 53774,112:POKE 16,112:? :? "WHICH DRIVE (1-8)":? "OR ESC TO
EXIT":GET #1, DRIVE
80 IF DRIVE=155 THEN 70
90 IF DRIVE 27 THEN POKE 580,0 RESTORE 1000 FOR X=1 TO 4 READ E:EXCS(X,
X)=CHR$(E) NEXT X:X=USR(ADR(EXCS))
100 IF DRIVE<49 OR DRIVE>56 THEN 70 ? DRIVE-48
110 RAMTOP=HI=PEEK(RAMTOP)-20
120 RAM=HI*256-1:POKE 769,DRIVE-48
130 DCB=768.REM BASE ADDRESS OF DEVICE CONTROL BLOCK
140 GOSUB 470:GOSUB 740
143 REM
145 REM *** SELECT SIMPLE OR CUSTOM CONFIGURATION ***
150 ? :? :? "SIMPLE OR CUSTOM CONFIGURATION?":GET #1,X:IF X=155 THEN 150
160 IF X=83 THEN GOSUB 280:GOTO 470
170 IF X=67 THEN GOSUB 580:GOTO 190
180 IF X<>67 OR X<>83 THEN 150
183 REM
185 REM *** WRITE TO OPTION TABLE ***
190 POKE DCB,49:REM SERIAL BUS I. D.
200 POKE DCB+1,DRIVE:REM DRIVE NUMBER
210 POKE DCB+2,79:REM WRITE TO OPTION TABLE
220 POKE DCB+3,128:REM STATUS AS OUTPUT
230 POKE DCB+5,HI:POKE DCB+4,0:REM BUFFER ADDRESS HIGH AND LOW
240 POKE DCB+6,15:REM TIMEOUT VALUE
250 POKE DCB+8,12:REM NUMBER OF BYTES
260 POKE DCB+9,0:REM HIGH BYTE NUMBER OF BYTES
270 GOSUB 530:POKE 580,0:RESTORE 1000:FOR X=1 TO 4:READ
E:EXCS(X,X)=CHR$(E):NEXT X:X=USR(ADR(EXCS))
273 REM
275 REM *** SIMPLE CONFIGURE ***
280 ? :? :? :? "WHICH DENSITY":? :? :? "1. SINGLE":? :? "2. DOUBLE":? :? "3. STATUS
ONLY"
```

```

290 GET #1,DEN
300 IF DEN<155 THEN DEN=50:GOTO 360
310 IF DEN<49 OR DEN>51 THEN 290
320 IF DEN=51 THEN GOSUB 740:GOTO 70
330 IF DEN=49 THEN GOSUB 420:GOTO 190
340 IF DEN=155 THEN DEN=50
345 REM
350 REM *** DOUBLE DENSITY ROUTINE **
360 FOR X=1 TO 10
370 TBL$(6,6)=CHR$(4):TBL$(7,7)=CHR$(1):TBL$(8,8)=CHR$(0)
380 TBL=ASC(TBL$(X,X))
390 POKE RAM+X,TBL
400 NEXT X:GOSUB 190
405 REM
410 REM *** SINGLE DENSITY ROUTINE **
420 FOR X=1 TO 10
430 TBL$(6,6)=CHR$(0):TBL$(7,7)=CHR$(0):TBL$(8,8)=CHR$(128)
440 TBL=ASC(TBL$(X,X)):POKE RAM+X, TBL
450 NEXT X:RETURN
455 REM
460 REM *** READ OPTION TABLE ***
470 POKE DCB+2,78:REM READ OPTION TABLE
480 POKE DCB+3,64:REM STATUS AS INPUT
490 POKE DCB+4,0:REM BUFF ADDR LOW
500 POKE DCB+5,H1:REM BUFF ADDR HIGH
510 POKE DCB+6,7:REM TIMEOUT VALUE
520 POKE DCB+8,12:REM NUMBER OF BYTES
530 RESTORE :FOR X=1 TO 4:READ D EXC$(X,X):CHR$(D) NEXT X
540 X=USR(ADR(EXC$)):REM EXECUTE OPTION TABLE COMMAND
550 IF PEEK(DCB+3)=138 THEN ? "DRIVE ";DRIVE-48;" DOES NOT
RESPOND!":GOTO 70
560 IF PEEK(DCB+3)=139 THEN ? "DRIVE ";DRIVE-48;" NOT
CONFIGURABLE!":GOTO 70
570 RETURN
573 REM
575 REM *** CUSTOM CONFIGURE ***
580 ? "TYPE IN DESIRED VALUE":?"OR RETURN TO LEAVE UNCHANGED":POKE
752,0
590 TRAP 610
600 ? :? ? "TRACKS=";TR;:? "";;INPUT TR:POKE RAM+1,TR
610 TRAP 630
620 ? "STEP RATE IN MSECS. ";SR;:? "";;INPUT TR:POKE RAM+2,TR
630 TRAP 650
640 ? "SECTORS PER TRACK=";ST;:? "";;INPUT ST:POKE RAM+4,ST:POKE RAM+3,0
650 ? "NUMBER OF SIDES?";SIDES;:? "";;GET #1,SIDES:IF SIDES>50 THEN ? :GOTO
670
660 ? SIDES-48:POKE RAM+5,SIDES-49
670 ? "DENSITY?";DEN$;
680 ? "";;GET #1:IF X=68 THEN PRINT "DOUBLE" POKE RAM+6,4:GOTO 700
685 IF X=155 THEN ? :GOTO 700
690 ? "SINGLE":POKE RAM+6,0:DEN$="SINGLE"

```



```

700 ? "BYTES/SECTOR=";BS;? ";:INPUT BS:IF BS<255 THEN POKE RAM+7,0:POKE
RAM+8,BS
710 IF BS>=256 THEN POKE RAM+7,BS/256:POKE RAM+8,0
720 ? "DRIVE PRESENT?";DP$;? ";:
723 GET #1,X:IF X=89 THEN ? "YES":POKE RAM+9,255:GOTO 730
725 IF X=155 THEN GOTO 730
727 ? "NO":POKE RAM+9,0:DP$="NO"
730 RETURN
733 REM
735 REM *** PRINT RESULTS ***
740 DRIVE=PEEK(769)
750 TR=PEEK(RAM+1):TBL$(1,1)=CHR$(TR)
760 SR=PEEK(RAM+2):TBL$(2,2)=CHR$(SR)
770 IF SR=0 THEN SR=30:GOTO 810
780 IF SR=1 THEN SR=20:GOTO 810
790 IF SR=2 THEN SR=12:GOTO 810
800 IF SR=3 THEN SR=6
810 ST=PEEK(RAM+4):TBL$(4,4)=CHR$(ST):IF ST<256 THEN TBL$(3,3)=CHR$(0)
820 NS=PEEK(RAM+5):TBL$(5,5)=CHR$(NS)
830 IF NS=0 THEN SIDES=1:GOTO 850
840 SIDES=2
850 IF PEEK(RAM+6)=0 THEN DEN$="SINGLE":POKE RAM+6,0:
TBL$(6,6)=CHR$(0):GOTO 870
860 DEN$="DOUBLE":POKE RAM+6,4:TBL$(6,6)=CHR$(4)
870 BS=PEEK(RAM+7)*256+PEEK(RAM+8):TBL$(7,7)=CHR$(BS)
880 DP=PEEK(RAM+9) IF DP=0 THEN DP$="NO":GOTO 900
890 DP$="YES"
900 ? ? "DRIVE=";DRIVE
910 ? "TRACKS=";TR
920 ? "STEP RATE=";SR
930 ? "SECTORS/TRACK=";ST
940 ? "NUMBER OF SIDES=";SIDES
950 ? "DENSITY=";DEN$
960 ? "BYTES/SECTOR=";BS
970 ? "DRIVE PRESENT=";DP$
980 RETURN
990 DATA 104,76,89,228
1000 DATA 104,76,116,228
1010 GET #1,CHAR: ? CHAR:GOTO 1010

```

C.2 GTRPM.COM A Speed Checking Utility For The Indus GT

One of the most common sources of disk drive reading and even formatting problems has to do with the disk drive spinning the diskette at an incorrect rotational speed. This can cause various types of read errors (G5, G4, etc.), format errors (F9, etc.) and can even cause software compatibility errors with certain protection schemes whose sector interleave timing requirements are exceptionally stringent. Finding out that your drive is operating at the correct number of revolutions per minute is a good preventive maintenance practice -- like seeing your dentist twice a year.

The GTRPM Utility can be operated either as an extended command from the DOS XL Menu or from the Command Processor level. In either case, all you need to do is type:

GTRPM

and then press <RETURN>. The next screen you will see gives you several choices; you press

OPTION - To Re-Boot Your Diskette

SELECT - To Tell The RPM Tester You Wish To Test Another Drive

DRIVE NUMBER - To Tell The RPM Tester Which Drive You Wish To Test

The drive number you select must be powered on, connected to the computer, and contain a formatted diskette. Once you have selected a valid drive number and pressed the <RETURN> key, you will be notified that the program is "READING DRIVE NOW". The GTRPM program determines the rotational speed of the diskette (and drive) by reading a single sector's address mark 100 times and then averaging the number of revolutions per minute to which this equates. The tones of the reminding beeps and the colors of the screen will correspond to the program's evaluation of your drive's rotational accuracy which will be noted for you on the screen as follows:

288 +/- 1.5 RPM = PERFECT

288 +/- 4.0 RPM = SPEED IS OK

288 +/- 4+ RPM = TOO FAST/TOO SLOW

C.3 RAM130.COM A RAM Disk Utility for 130XE Computers

Your DOS XL System Master Diskette also contains a file called RAM130.COM. This public domain program was written by Josef W. Segur on 5-25-85, and was modified by Optimized Systems, Inc. on 6-14-85. This file will only be of use to you if you have an Atari 130XE computer (or another model of Atari computer which has been upgraded with a totally compatible enhancement). The purpose of this utility is to allow you to use the extra 64K of RAM as an electronic disk -- an electronic disk can cause incredible performance improvements in many computer applications, but has some limitations as well.

On the positive side, an "electronic" disk can reach your information in billionths of a second, compared with thousandths of a second with a standard electro-mechanical disk drive. Any software which will operate under standard DOS XL can most likely utilize this RAM Disk as though it were just another physical disk drive -- but with substantially faster access to your data.

On the negative side, not all software -- especially copy protected programs -- will be able to recognize this disk drive. The RAM Disk resides in 64K and is therefore smaller than even a single density disk. Any power problems or system lock up conditions will most likely wipe out the RAM Disk without any hope of recovery (where did those electrons go?) The addition of an additional drive means that some additional memory will be used up in the primary computer bank (only 384 bytes) to keep track of this extra drive; this can cause some programs which expect the low memory location to be in a specific place to not operate properly. A RAM Disk means an extra step when shutting down your system; the information it contains must be copied to a physical diskette if you will need the information it contains at some future date.

You will need to experiment somewhat to find out if the RAM Disk can be used with your software. Although the negative aspects of appear ominous, the speed and power it can provide will be hard to resist once you have tried it.

Installing the RAM130.COM File

The RAM130 like many other "COM" files can be installed from either the extended command function of the main MENU or from the command processor level, in either case typing "RAM130" and then <RETURN> is all that is required. For those of you who know that you'll always want it turned on, a STARTUP.EXC file can be created which contains the instruction "RAM130", or it can be renamed to AUTORUN.SYS.

At the present time, however, the RAM130.COM file does not work with Synchronesh enhanced versions of DOS XL. Therefore you will need to create a new System Master Diskette containing DOS XL Version 2.2. This may be accomplished by booting either your GT Estate Wordprocessor or GT Data Manager, exiting the wordprocessor or data base manager (see the sections dealing with each of these programs as to how this may

be accomplished), re-insert your original System Master Diskette, use Init or Initdbl to put DOS XL 2.2 on a new diskette, and use Copy to transfer any files you need from your original System Master Diskette to your new one.

After this point, your RAM Disk will be available as drive D8: and almost all normal disk functions can be performed by it. It will contain no information when it is first created so you will have to copy files to it or specify it as a data disk for your program.

Technical Information

The following information has been provided for those of you who are more technically inclined and want to know what's going on in your computer. It is absolutely not necessary to know or understand this information in order to enjoy the benefits of the RAM Disk!

RAM130.COM configures an Atari 130XE's extra RAM for use with DOS XL version 2.35I. The RAM Disk (D8:) created by the RAM130.COM has 503 free sectors, 4 through 359 and 369 through 515. Sectors 360 through 368 contain the VTOC and Directory (same as a physical disk). Boot sectors 1 through 3 do not exist, but a read or write attempt returns a "success" status code. Any attempt to access a sector 516 or higher returns a 144 error

The bit map in the VTOC created with the RAM Disk indicates that sectors 516 through 720 are in use so the FMS will not attempt to write to them. However, if you reformat the RAM Disk, the driver code merely corrects the maximum and free sector counts in the VTOC written by the FMS. This same logic applies to a sector copy routine like the DUPDSK extrinsic command of DOS XL, which directly copies each sector shown in use by the bit map. The FMS merely maintains the sector counts for your convenience, and actually uses the bit map for all of its decisions as to which sectors are available. Therefore this logic allows duplicating an actual disk to the RAM Disk and back to disk again. It is strongly recommended, however, that a COPY with wildcards be used instead, as this approach will maintain both the bit map and sector counts.

The steps which the RAM130 program follows upon installation are outlined below:

1. Verifies that the DOS is a valid version of DOS XL; it will exit if it is not a valid version.
2. Verifies that the computer actually has extra RAM at location 4000 hex; it will exit if there is no RAM at this location.

3. Copies the relocatable driver code to the end of the FMS, and sets the drive bit in DRVBYT for drive D8:.
4. Replaces the FMS calls to SIO and the OS Resident Disk Handler with calls to the relocated code.
5. If the FMS was the standard Version 2, it kills the "write DOS" function by pointing it to the Invalid Device Command error return location.
6. Adds the length of the driver code to SASA which sets the FMS start of allocation address word.
7. Reinitializes the FMS.
8. If the extra RAM is not already formatted as RAM Disk, it clears the RAM to zeroes and writes the VTOC for the 503 available sectors.

NOTES: If the RAM130 is run again after it is already installed, it will exit at step one above thus avoiding multiple copies of the RAM Disk driver code. Step number 8 permits rebooting the computer by forcing a coldstart; rebooting without turning off the computer power will not destroy the contents of the RAM Disk.

PROBLEM PREVENTOR: The RAM Disk will obviously be incompatible with any program which uses the extra RAM on the 130XE for some other purpose.

PROBLEM PREVENTOR: Any program which does not use the DOS File Management System (FMS) for all of its disk handling will probably not work. As with the addition of any other single density disk drive, the FMS allocates an additional 128 byte space for the VTOC. Therefore, installing the RAM Disk increases LOMEM by 384 bytes. (The exception to this would be when the DOSXL.SUP file is active and both DOS XL and its buffers are in the SuperCartridge -- not in low memory -- in which case LOMEM is not moved). The modifications performed by the RAM130 program affect the FMS code which would be written by a "write DOS.SYS" operation. Since the RAM Disk driver code would not yet be loaded when normal boot code attempts serial I/O, a cold boot operation would immediately lock up the computer. It would be necessary in this instance to power down, losing all information contained in the RAM Disk. The installation code forces a 168 error (invalid command) to be returned in the event that a "write DOS.SYS" command is issued; if you see a 168 error do not attempt to boot from the disk which was being written at that time.

Future

SYSTEMS, INC.

*21634 Lassen St.
Chatsworth, California 91311
(818) 407-1647*